



PRODUCT-DETAILS

1722-286

Cover frame 2gang green - Busch-axcent



General Information	
Extended Product Type	1722-286
Product ID	2CKA001754A4338
EAN	4011395113325
Catalog Description	Cover frame 2gang green - Busch-axcent
Long Description	For vertical or horizontal installation.

Installation	
Instructions and Manuals	No document needed
Mounting Type	Flush Mounted
Type of Fastening	Clamp
Mounting Orientation	Horizontal Vertical

Technical	
Data Sheet, Technical Information	No document needed
Number of Gangs	2

Design				
Design Range			Busch-axcent	63x63
Design Range Variant			Busch-axcent	
Surface Finishing			Untreated	Glossy
Material			Thermoplastic	
Label Space Provided			No	
RAL Number			RAL 6032 - Signal Green	
Color			green	

Material Compliance				
RoHS Information			2CKA200000E2687	
RoHS Status			Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019	
REACH Declaration			2CKA309999E9999	
REACH Information			False - does not contains substances > 0.1 mass percentage	
Conflict Minerals Reporting Template (CMRT)			9AKK108468A3363	

Environmental				
Degree of Protection			IP20	

Dimensions				
Product Net Width			91 mm	
Product Net Height			162 mm	
Product Net Depth / Length			11 mm	
Product Net Weight			50.5 g	
Dimension Diagram			2CKA000097E0315	

Certificates and Declarations				
Declaration of Conformity - CE			No declaration needed	

Classifications				
ETIM 9			EC000007 - Cover frame for domestic switching devices	
eClass			V11.0 : 27144001	
WEEE Category			Product Not in WEEE Scope	

Accessories				
Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001731A1916	Rocker open for red pull button calotte for Pull-cord switch, Pull cord studio white - 63x63	1720-84	1	piece
2CKA001710A3808	Cover plate with legend Level switch Turn button studio white - 63x63	1740 DR/03-84	1	piece

2CKA001710A3512	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white - 63x63	1740 DRL-84-503	1	piece
2CKA001710A3172	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - 63x63	1740-84	1	piece
2CKA001710A3161	Cover plate Blind cap 1 gang with Mounting plate studio white - 63x63	1742-84	1	piece
2CKA001710A3991	Cable Outlet / Blank Plate / Adapter Ring Blind cap 0 gang studio white - 63x63	1742-84-500	1	piece
2CKA001724A4368	Cover plate SAT 4 gang studio white - 63x63	1743/10-04-84	1	piece
2CKA001724A4377	Cover plate TV / Radio / 2x SAT 4 gang studio white - 63x63	1743-04-84	1	piece
2CKA001724A4332	Data / Telecommunication / Antenna SAT 3 gang studio white - 63x63	1743-84-500	1	piece
2CKA001710A3173	Cover plate Busch-Infoline® telephone connector boxes (VDo) Central cover plate studio white - 63x63	1745-84	1	piece
2CKA001710A3993	Data / Telecommunication / Antenna Telecommunication inserts 0 gang studio white - 63x63	1746/10-84-500	1	piece
2CKA001710A3167	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang studio white - 63x63	1746-84	1	piece
2CKA001710A4096	Intermediate Ring for cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	piece
2CKA001710A3863	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - 63x63	1747 SI-84	1	piece
2CKA001710A3861	Intermediate Ring studio white - 63x63	1747-84	1	piece
2CKA001710A3163	Cover plate Cable outlet studio white - 63x63	1749-84	1	piece
2CKA001723A0240	Cover plate Loudspeaker 2 gang studio white - 63x63	1751-84	1	piece
2CKA001710A3175	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - 63x63	1755 SL/PZ-84-101	1	piece
2CKA001724A2761	Cover plate with labelling field For data connection housing 2 gang studio white - 63x63	1758-84	1	piece
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single push button with Pilot lamp studio white - 63x63	1764 NLI-84	1	piece
2CKA001710A3992	Data / Telecommunication / Antenna TAE 0 gang studio white - 63x63	1766-84-500	1	piece
2CKA001753A0258	Cover plate with legend 1 ... 15 Min for Time switch, Toggle studio white - 63x63	1770-84-103	1	piece
2CKA001753A0301	Cover plate with legend 10 ... 120 Min for Time switch, Toggle studio white - 63x63	1771-84-103	1	piece
2CKA001751A2980	Multimedia Devices studio white	1785 ENO-84	1	piece
2CKA001751A3099	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA/02-84	1	piece
2CKA001751A3088	Mechanical Controls Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA-84-500	1	piece
2CKA001751A3128	Mechanical Controls for Switch/push button, Two-part rocker studio white - 63x63	1785 K-84-500	1	piece
2CKA001751A2992	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white - 63x63	1785/11-84	1	piece
2CKA001751A3076	Mechanical Controls Without imprint for Switch/push button, Two-part rocker studio white - 63x63	1785-84-500	1	piece
2CKA001751A2968	Multimedia Devices studio white	1786 ENO-84	1	piece
2CKA001751A3098	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker studio white - 63x63	1786 JA/02-84	1	piece
2CKA001751A2998	Rocker with legend DND for Switch/push button, Single rocker studio white - 63x63	1786/11-84	1	piece
2CKA001751A3074	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1786-84-500	1	piece
2CKA001751A2750	Rocker for Switch/push button, Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2751	Rocker with legend Heizung for Switch/push button, Single rocker studio white - 63x63	1789 H-84	1	piece

2CKA001751A2754	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - 63x63	1789 KI-84	1	piece
2CKA001751A3084	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A3151	Mechanical Controls for Switch/push button, Single rocker studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3161	Mechanical Controls Various symbols for Switch/push button, Single rocker studio white - 63x63	1789 ST-84-500	1	piece
2CKA001751A2755	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A3091	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1789-84-500	1	piece
2CKA001710A4113	Cover plate studio white - 63x63	1790-592-84	1	piece
2CKA001710A3698	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white - 63x63	1794 TA-84	1	piece
2CKA001710A4017	Cover plate Various symbols for Thermostat Turn button studio white - 63x63	1795 HK-84	1	piece
2CKA001710A4049	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 HKEA-84	1	piece
2CKA001710A3725	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 TA-84	1	piece
2CKA001710A3569	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795-84	1	piece
2CKA001753A0311	Cover plate for Pull-cord switch, Pull cord studio white - 63x63	1796-84	1	piece
2CKA001710A3990	Data / Telecommunication / Antenna Modular Jack 2 gang studio white - 63x63	1800-84-500	1	piece
2CKA001710A1551	Data / Telecommunication / Antenna UAE/IAE (ISDN) 2 gang studio white - 63x63	1803-02-84-500	1	piece
2CKA001710A1550	Data / Telecommunication / Antenna UAE/IAE (ISDN) 1 gang studio white - 63x63	1803-84-500	1	piece
2CKA002013A5407	Busch-Object socket outlet SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUAB-84	1	piece
2CKA002011A6207	Socket Outlets Without imprint studio white - 63x63	20 EUC-84-500	1	piece
2CKA002013A5418	Busch-Service-Socket SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUCBDR-84	1	piece
2CKA002013A5286	SCHUKO® socket insert Without imprint Safety Shutter withControl light; LED /Green studio white - 63x63	20 EUCBL-84	1	piece
2CKA002013A5294	Busch-steplight SCHUKO® socket insert Without imprint Safety Shutter Protective contact (SCHUKO) withNight light; LED /White studio white - 63x63	20 EUCBLI-84	1	piece
2CKA002013A5268	SCHUKO® Socket insert with legend EDV Safety Shutter studio white - 63x63	20 EUCKS/DV-84	1	piece
2CKA002013A5372	Socket insert Without imprint Safety Shutter Protective contact (SCHUKO) studio white - 63x63	20 EUCKS-84-500	1	piece
2CKA002013A5441	20 EUCRB-84-500 Socket Outlet	20 EUCRB-84-500	1	piece
2CKA002018A1509	Socket Outlets Without imprint with Hinged Lid studio white - 63x63	20 EUK-84-500	1	piece
2CKA002018A1520	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKB-84	1	piece
2CKA002018A1529	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKBR-84	1	piece
2CKA002018A1540	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNB-84	1	piece

2CKA002018A1551	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid 20 EUKNBL-84 studio white - 63x63	1	piece
2CKA002018A1563	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with different locking studio white - 63x63	20 EUKNBSL-84	1 piece
2CKA002018A1564	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking studio white - 63x63	20 EUKNBSL-84-101	1 piece
2CKA002011A6209	Socket Outlets Without imprint studio white - 63x63	20 EUN-84-500	1 piece
2CKA001751A3170	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, with LED 1NO studio white - 63x63	2029 UC-84	1 piece
2CKA002495A0086	Equipotential socket insert Socket outlet 2-position studio white - 63x63	2095 UC-84	1 piece
2CKA002190A0215	2190 EUC-84 Socket Outl. S/F 1g	2190 EUC-84	1 piece
2CKA002013A5477	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	23 EUCB-84	1 piece
2CKA002013A5451	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	2300 EUCB-84	1 piece
2CKA002113A0511	2300 UCRKS-84-503 Socket Outl. S	2300 UCRKS-84-503	1 piece
2CKA002011A3833	Busch-Protector® SCHUKO® socket insert Without imprint studio white - 63x63	2310 EUGL/VA-84-11	1 piece
2CKA002099A0198	2397 UCKS-84-505 Center PI, SF for 2300	2397 UCKS-84-505	1 piece
2CKA002013A5361	2398 CKS-84 Cover plate shuttered	2398 CKS-84	1 piece
2CKA002099A0214	Socket insert Without imprint Safety Shutter Earthing pin studio white - 63x63	2399 UCKS-84	1 piece
2CKA002099A0192	2399 UCKS-84-505 Center PI, SF for 23M	2399 UCKS-84-505	1 piece
2CKA001719A0220	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - 63x63	2518-WD-84	1 piece
2CKA001751A3180	Electronic Controls Symbol "bell" for Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1 piece
2CKA001751A3199	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	2520 TR-84	1 piece
2CKA001724A4256	Cover plate Bore hole 1 gang studio white - 63x63	2533-84	1 piece
2CKA001710A3646	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/01-84	1 piece
2CKA001710A3651	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/02-84	1 piece
2CKA001724A4388	Cover plate Doctor 1 gang Blue studio white - 63x63	2548-022 AR-84	1 piece
2CKA001724A4402	Cover plate XLR 1 gang studio white - 63x63	2553-84	1 piece
2CKA001753A0394	Cover plate Modular Jack 2 gang studio white - 63x63	2561-02-84	1 piece
2CKA001753A0403	Cover plate Modular Jack 1 gang studio white - 63x63	2561-84	1 piece
2CKA003116A0662	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white - 63x63	3120 EUCB-84	1 piece
2CKA003117A0006	Buschmat RCD - Insert RCD 30 mA studio white - 63x63	3151 UC-84	1 piece
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1 piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1 piece
2CKA006132A0379	Horizontal 0 ... 180 ° Reflex SI / Busch-Duro 2000SI for Push Button Coupling Units studio white	6122/10-84-500	1 piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1 piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1 piece

2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	piece
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	piece
2CKA006430A0400	6430-84-102-500 Control Cover	6430-84-102-500	1	piece
2CKA006430A0306	Cover plate with legend Symbol "arrows" and "ok" for Time switch Central cover plate studio white - 63x63	6435-84	1	piece
2CKA006400A0059	Cover plate PowerDock 1 gang studio white - 63x63	6477-84	1	piece
2CKA006400A0047	Multimedia Devices studio white - solo	6480/11-84-500	1	piece
2CKA006400A0045	Multimedia Devices studio white - future linear	6480-84-500	1	piece
2CKA006599A3009	6540-84-102-500 Center Pl. SF Dimmer	6540-84-102-500	1	piece
2CKA006599A2835	Cover plate for Cooling Central cover plate studio white - 63x63	6541-84	1	piece
2CKA006599A3010	6543-84-101-500 Dimmer Control Cover	6543-84-101-500	1	piece
2CKA006599A2908	Control Element for Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	piece
2CKA006710A0011	Friends of Hue smart switch set 4 channel Wireless studio white - future linear	6716 UJ-84-500	1	piece
2CKA006730A0038	Wall sensor 1 channel Wireless studio white - 63x63	6731-84-500	1	piece
2CKA006730A0039	Wall sensor 2 channel Wireless studio white - 63x63	6732-84-500	1	piece
2CKA006730A0040	Wall sensor 4 channel Wireless studio white - 63x63	6733-84-500	1	piece
2CKA006730A0136	Rocker for Smart switch Two-part button studio white - 63x63	6736 FoH-84	1	piece
2CKA006800A2834	Electronic Controls studio white - 63x63	6815-84-101-500	1	piece
2CKA008200A0081	Cover plate Loudspeaker studio white - 63x63	8253-84	1	piece
2CKA008300A0225	83260-84-515 Cover plates, Indoor St.	83260-84-515	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	piece
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	piece
2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	piece
2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	piece
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	piece
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	piece
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	piece
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	piece
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	piece
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	piece
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	piece
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	piece
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	piece
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	piece

Categories

Low Voltage Products and Systems → Wiring Accessories - Light Switch Ranges → Frames



360°