





Wiring diagram System peripherals (0)4 1-8 10/100M POE Por UP LINK 0 \bigcirc 100 - 240 Vac ------



Do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port.

Warnings and consumer rights



Read carefully before use and keep for future reference

Touching the units with wet hands is forbidden Using liquid cleaners or aerosols is forbidden Blocking the ventilation openings is forbidden Modifying the devices is forbidden



Removing protective parts from the devices is forbidden

Installing the units near liquids and powders is forbidden

Installing the units near heat sources is forbidden

Installing the units near harmful gases, metal dusts or similar is forbidden $\label{eq:continuous} % \[\frac{1}{2} \left(\frac{1}{2} - \frac{1}{2} \right) \left(\frac{1}{2} - \frac{1}{2} - \frac{1}{2} \right) \left(\frac{1}{2} - \frac{1}{2} -$

Fastening the units on unsuitable surfaces is forbidden



Danger of electrical shock



Risk of devices falling because the surface on which they are installed collapses or inappropriate installation Switch the power supply OFF before any work on the system

 $Caution: Installation, configuration, starting-up\ and\ maintenance\ must\ be\ performed\ exclusively\ by\ qualified\ personnel.$



Lay out the wires respecting the standards in force

Check that the wall installation has been carried out correctly

Connect the power supply wires as indicated

Use only the items indicated in the technical specifications for any system expansions