


Description

Reader for programming fingerprint for building access control. Registering and associating the residents' fingerprints requires the use of the configuration software.

Technical data


Voltage: 5 Vdc
Maximum consumption: 0.1 A

Dimensional data

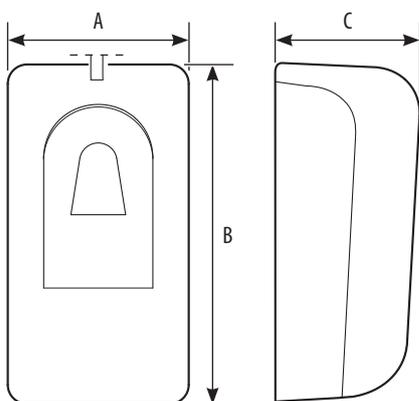

A	B	C
47 mm	90 mm	38 mm

Front view

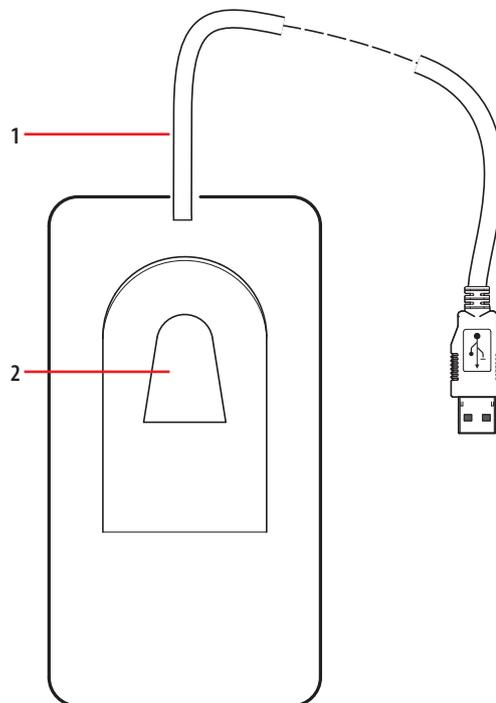

Legend

- 1. USB cable
- 2. Fingerprint acquisition surface

Wiring diagrams

Fingerprint programming reader

To register fingerprints the PC client must be connected to Server DES and use the configuration software.
For further information, please refer to the Server DES Software Manual, available for download from www.homesystems-legrandgroup.com website.

