

L 321

- 83943M00
- 83943W00
- 77582M00
- 77582W00

L 621

- 83944M00
- 83944W00
- 77583M00
- 77583W00

L 921

- 83945M00
- 83945W00
- 77584M00
- 77584W00



L 486

- 83972W00

L 786

- 83973W00

L 1086

- 83974W00



L 305

- 82914M00
- 82914W00
- 77587M00
- 77587W00

L 605

- 82916M00
- 82916W00
- 77588M00
- 77588W00



L 465

- 83968W00

L 765

- 83969W00



L 305

- 82918M30
- 82918W30
- 77585M30
- 77585W30

L 605

- 82920M30
- 82920W30
- 77586M30
- 77586W30



L 465

- 83970W30

L 765

- 83971W30


 


L 613

- C013475OMMW
- C013475OWMW
- C01347WHMMW
- C01347WHWMW


L 1173

- C013485OMMW
- C013485OWMW
- C01348WHMMW
- C01348WHWMW

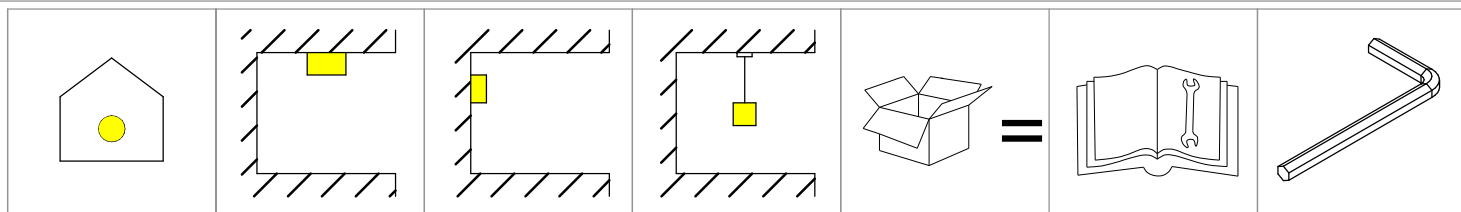


ATTENZIONE
 PER L'INSTALLAZIONE E UTILIZZO DELL'APPARECCHIO
 ATTENERSI ALLE ISTRUZIONI DI SEGUITO.
 QUALSIASI VARIANTE DEVE ESSERE CONCORDATA
 CON L'AZIENDA PER NON PERDERE LA GARANZIA


1

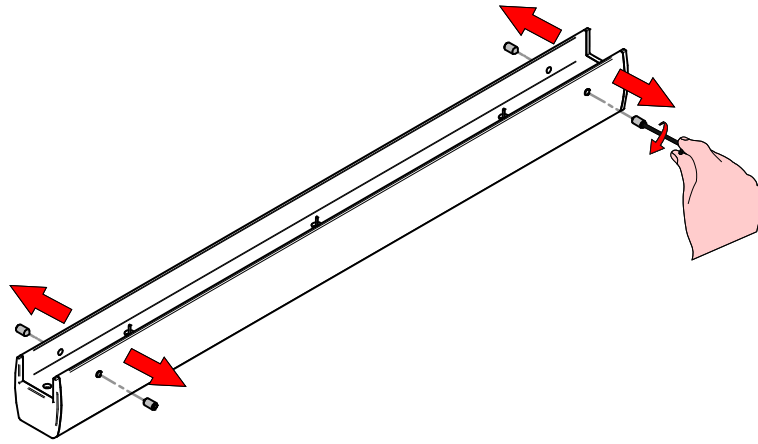


2

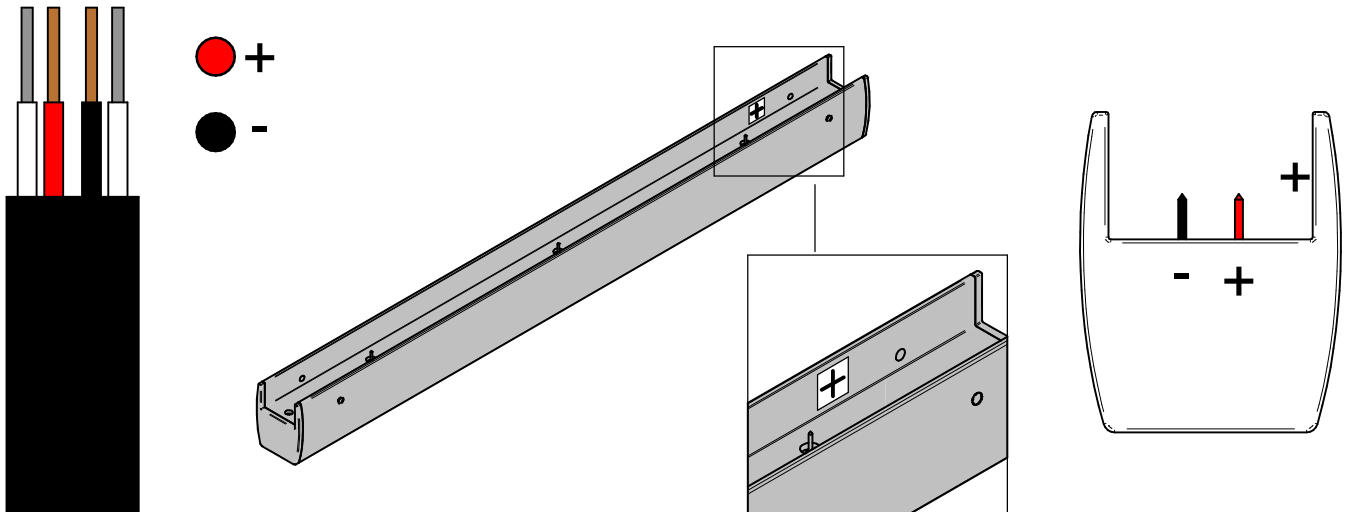


3

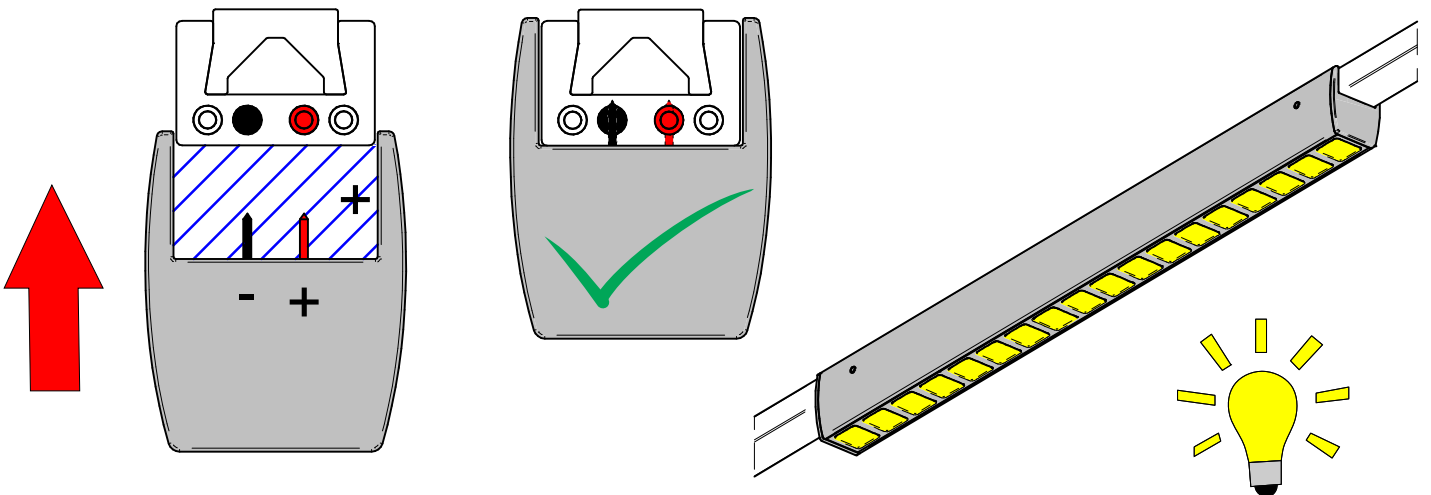


3.1

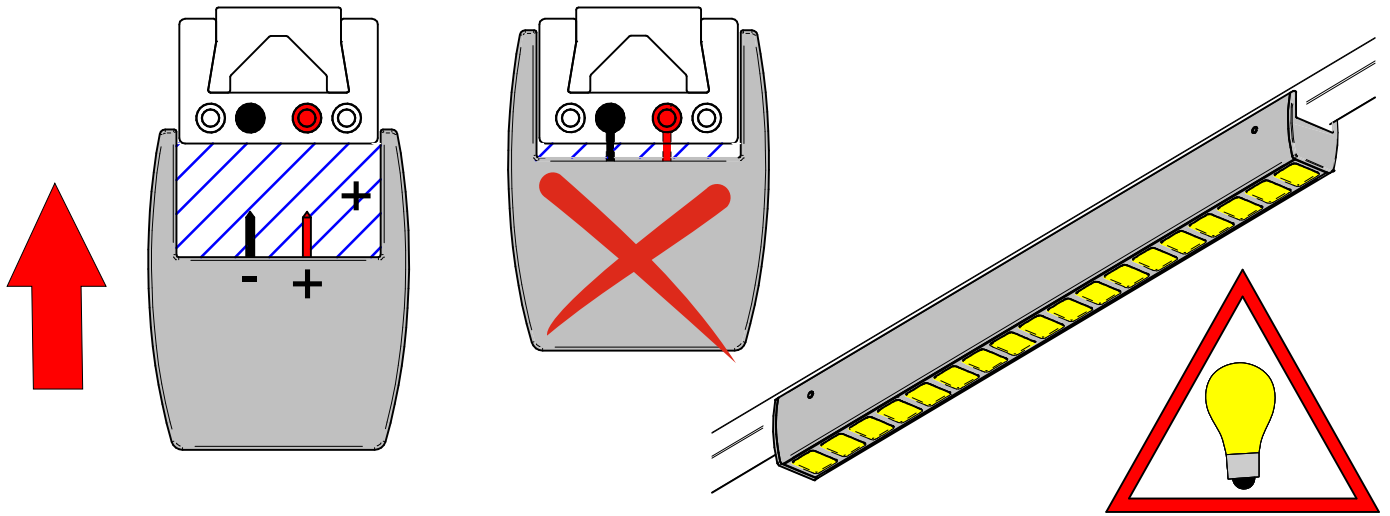


3.2

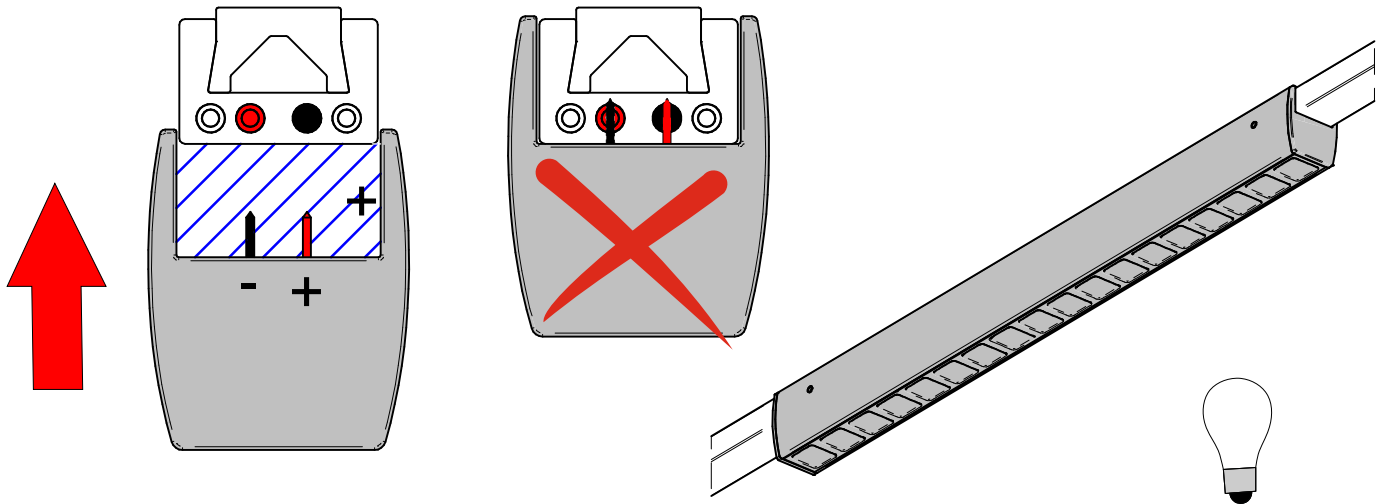


3.3

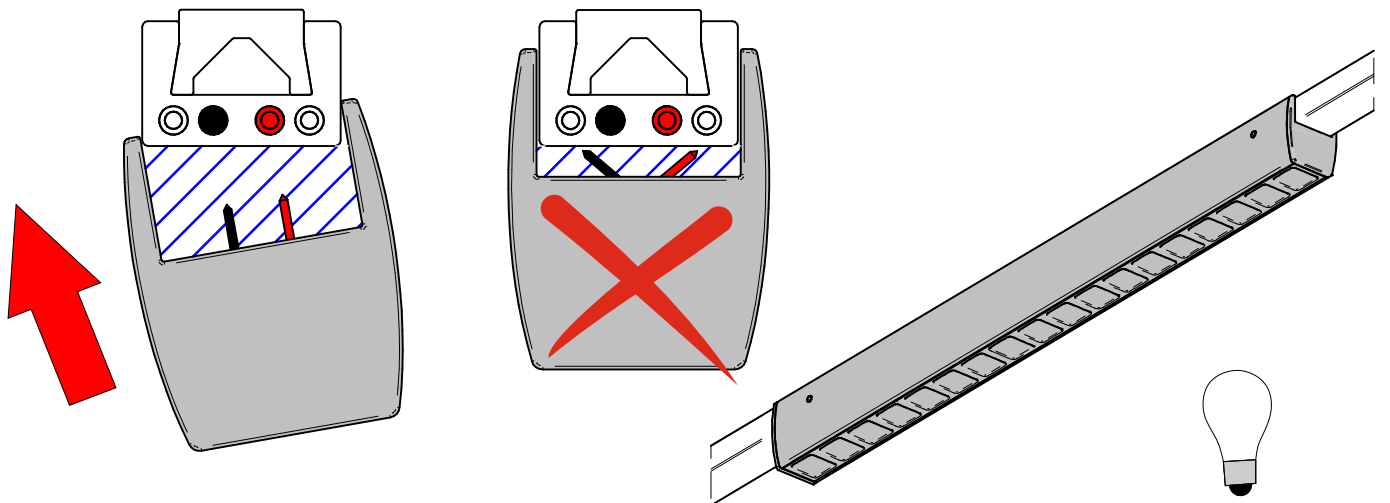


4

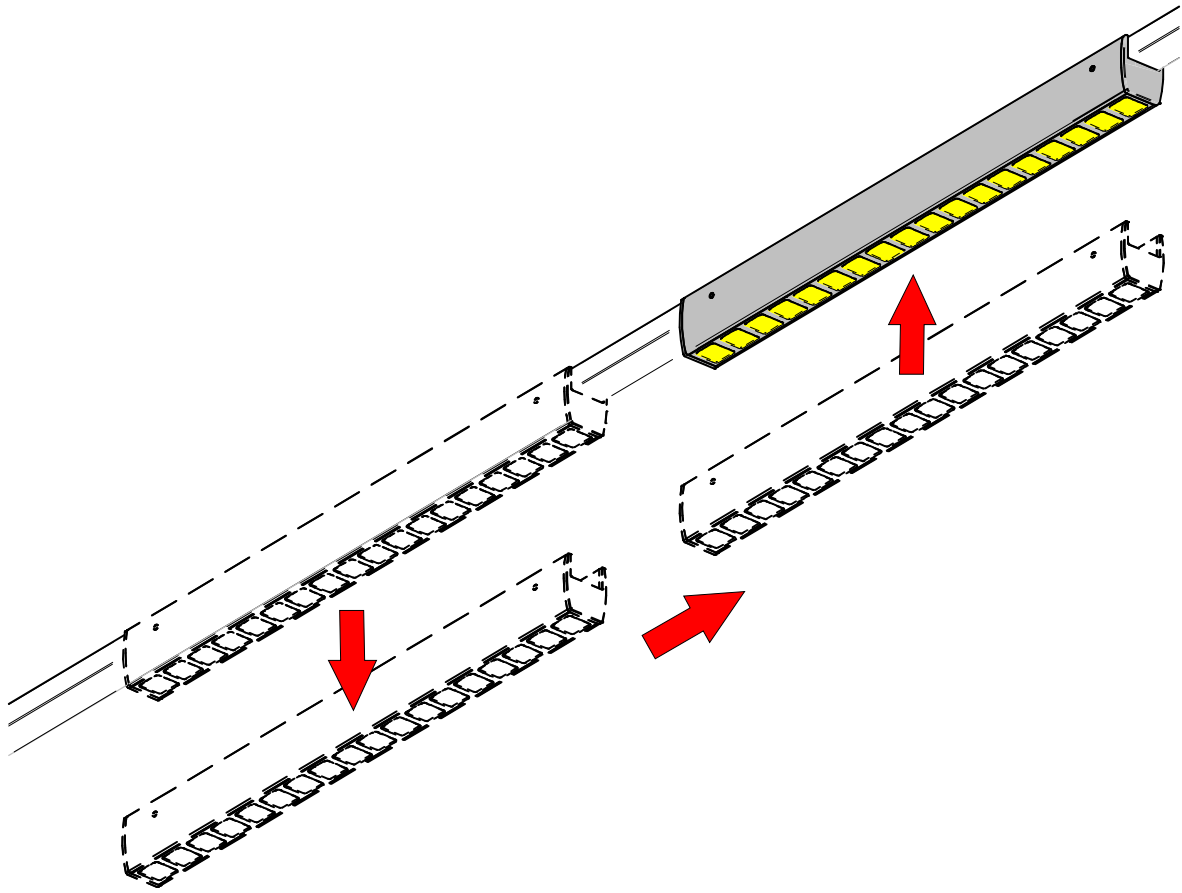


4.1

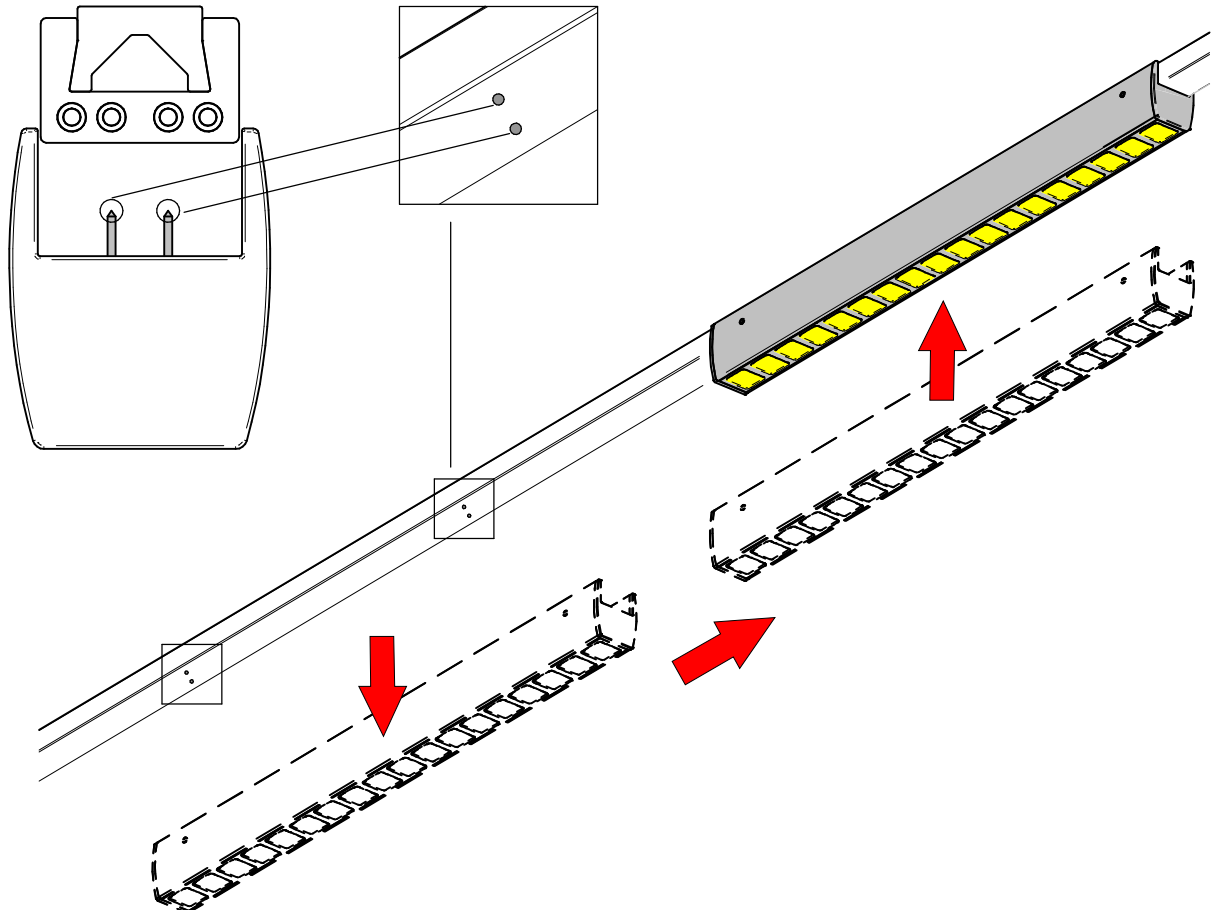

5

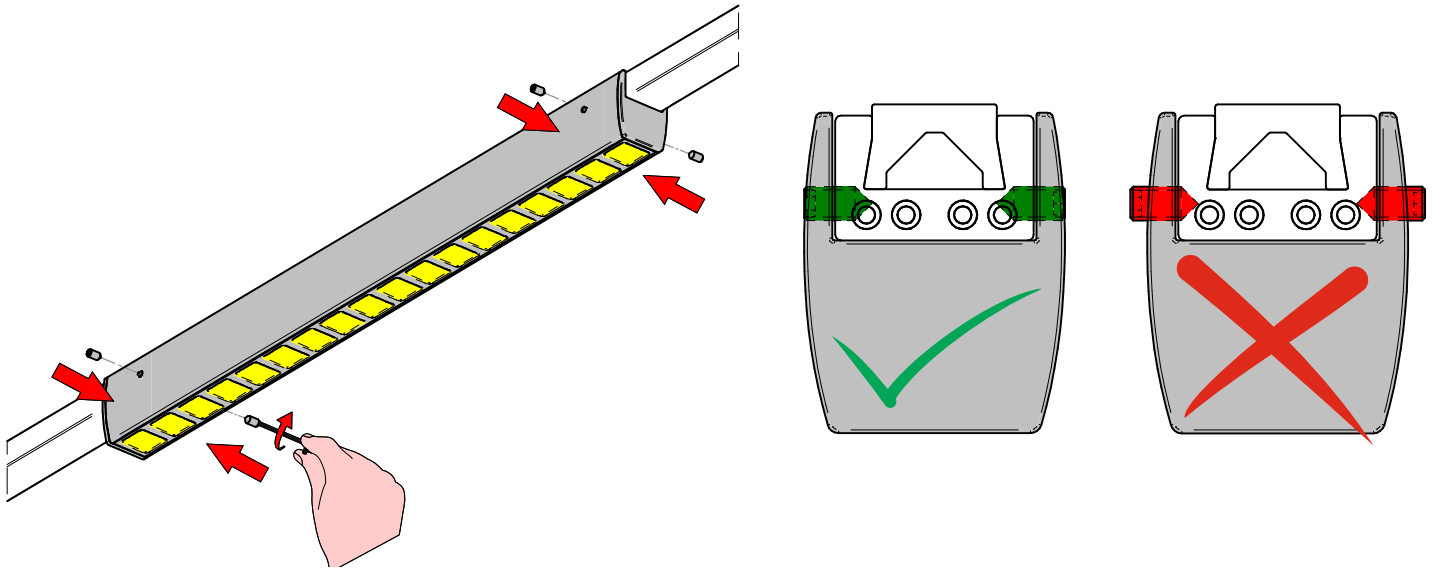

6.1

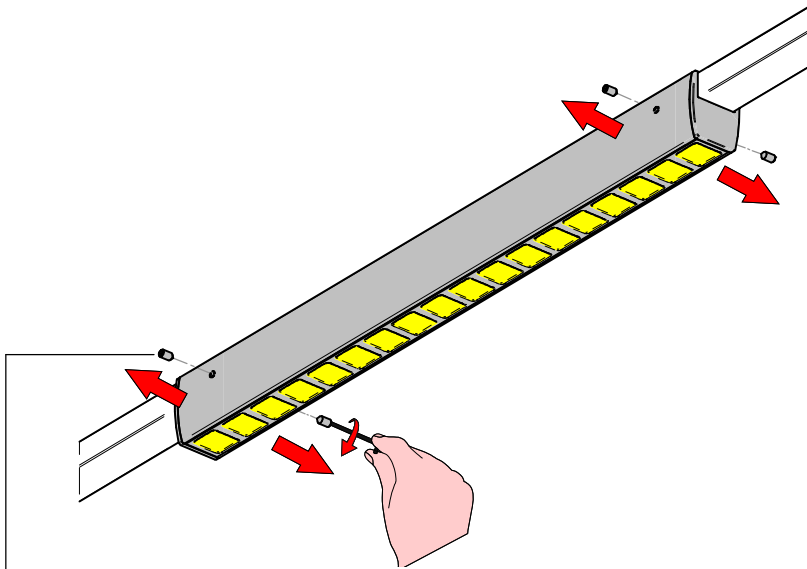

6.2

