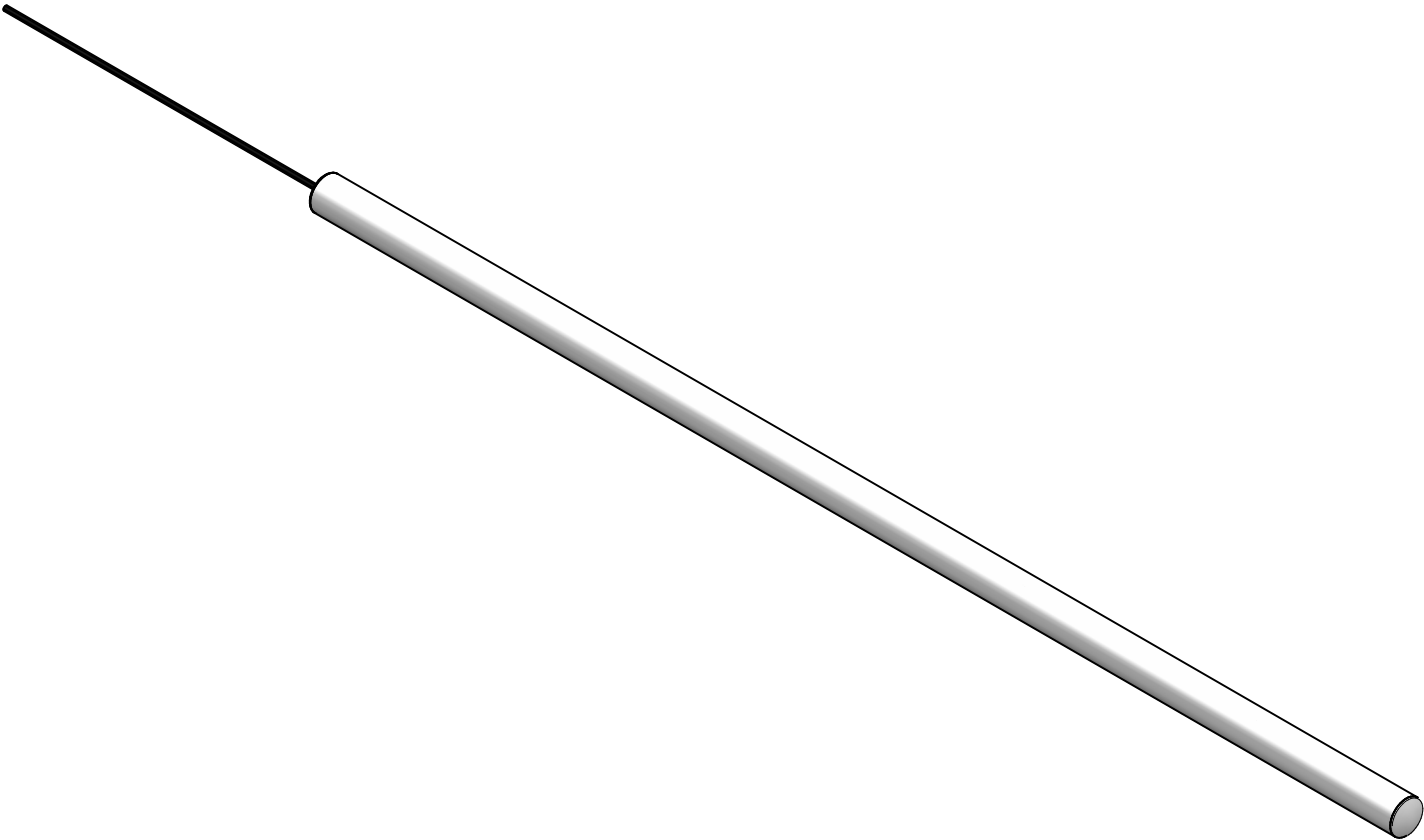


Code	Length	Type
C0020MDI02517	2,5m	2700K
C0020WDI02517	2,5m	3000K
C0020NDI02517	2,5m	4000K

Code	Length	Type
C0020MDI05017	5m	2700K
C0020WDI05017	5m	3000K
C0020NDI05017	5m	4000K

Code	Length	Type
C0020MDI10017	10m	2700K
C0020WDI10017	10m	3000K
C0020NDI10017	10m	4000K



A brown, irregularly shaped object, possibly a piece of wood or a decorative element, resting on a white surface. The object has several small, dark, rectangular indentations or holes along its perimeter. The white surface is depicted with a black outline that curves around the object, suggesting a shallow dish or a piece of paper.

A simple illustration featuring a white diamond-shaped piece of paper with a black outline, tilted at an angle. Below it is a brown chocolate chip cookie with several dark spots representing chips. The entire scene is set against a light gray background.











2x  ✓






1x  ✗




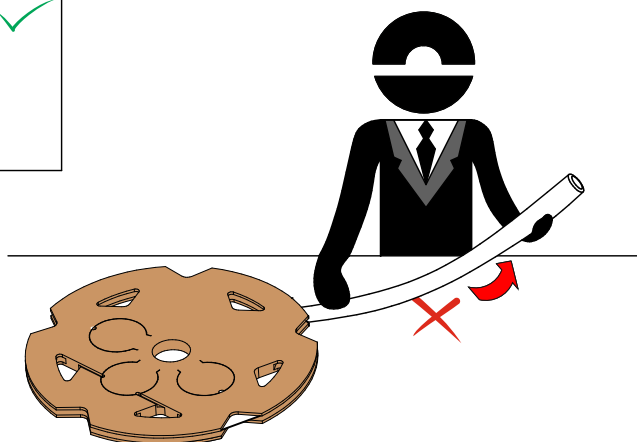
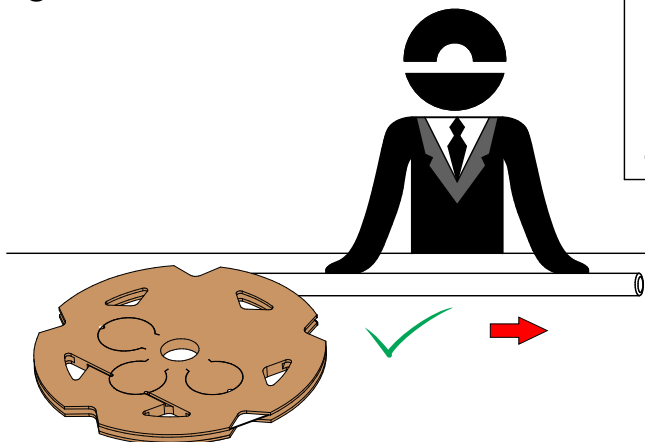


6

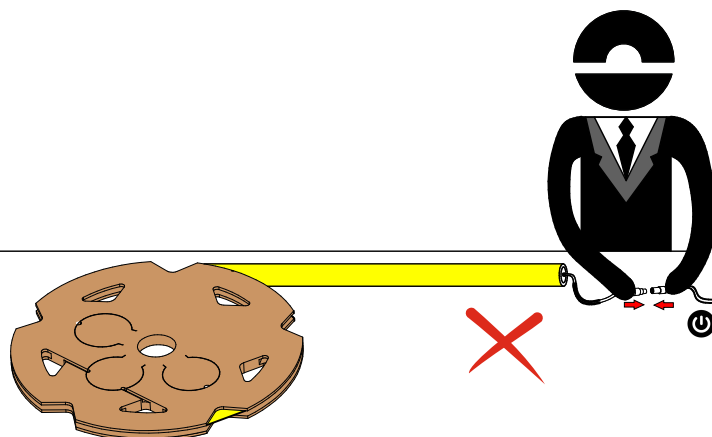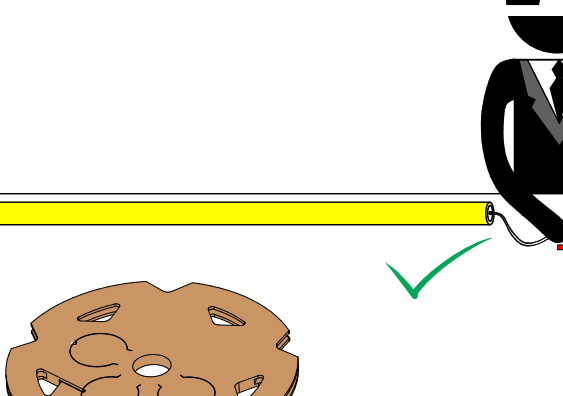

 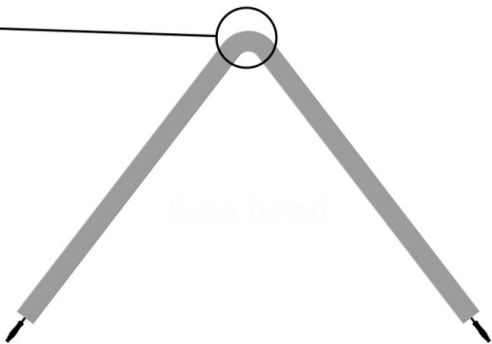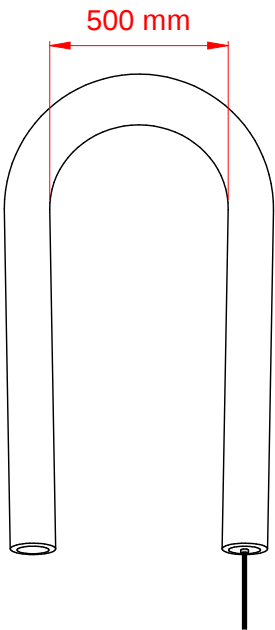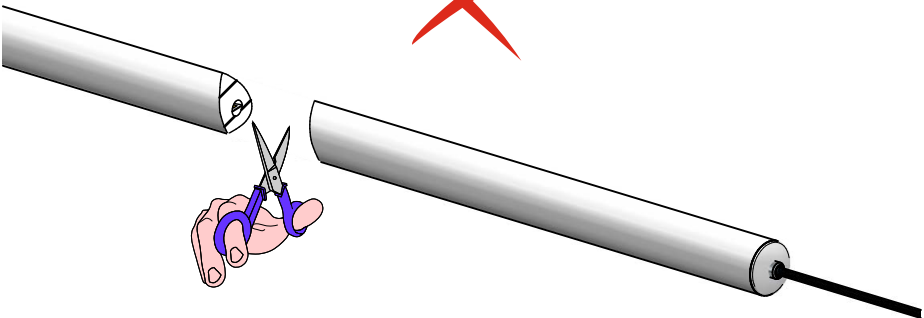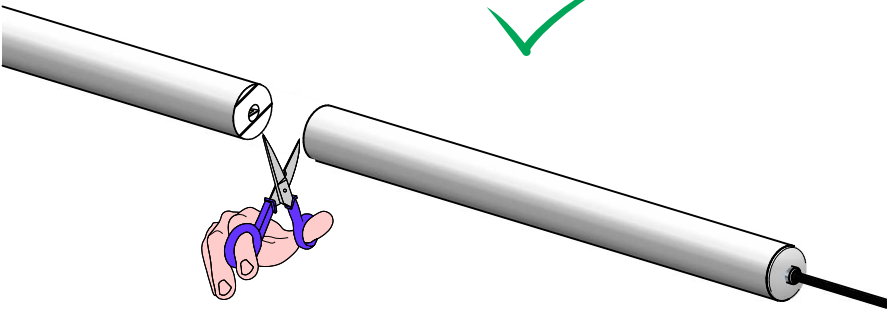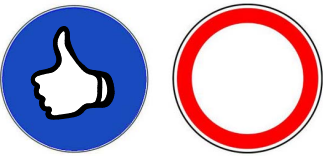


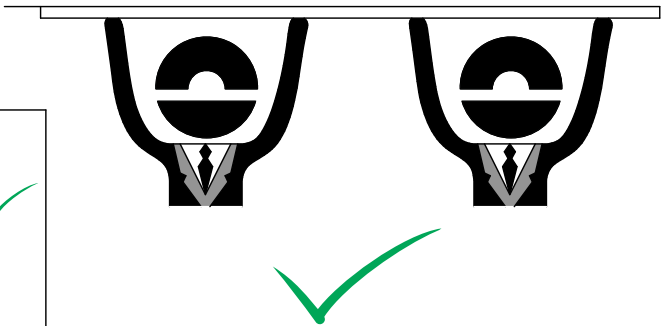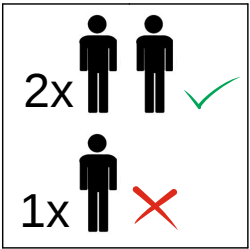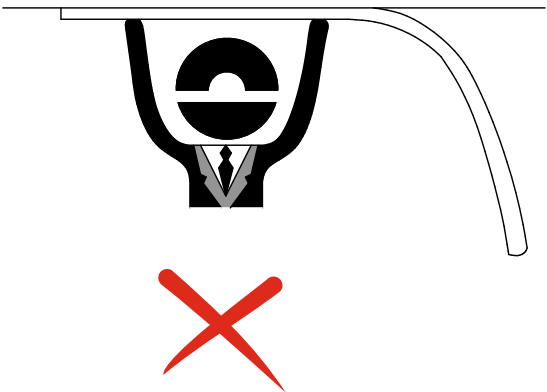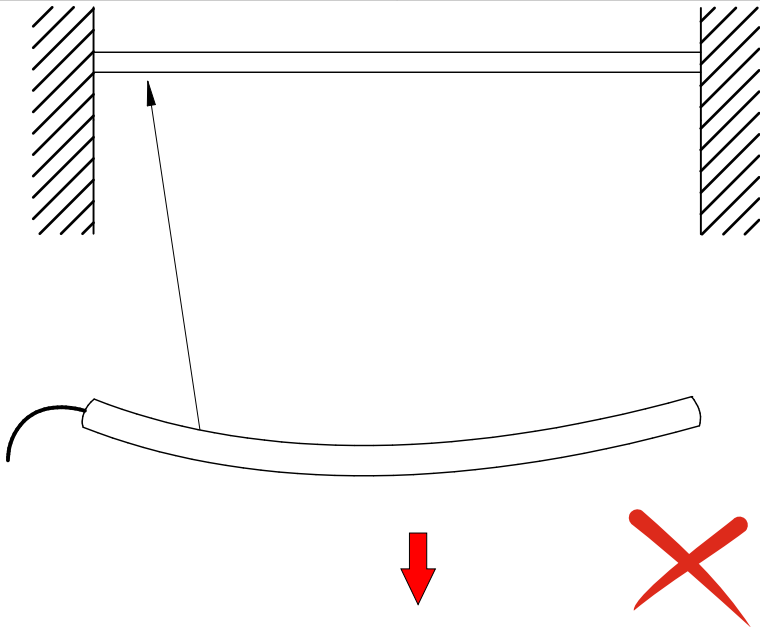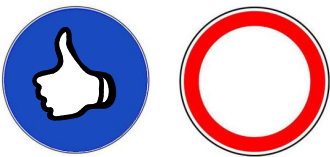

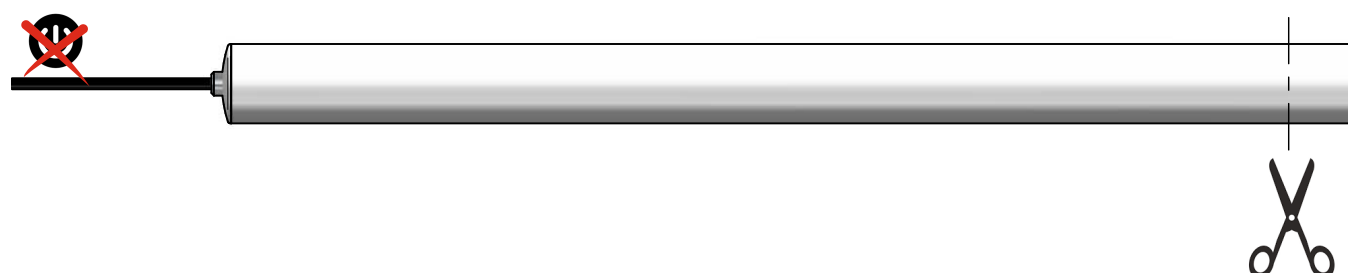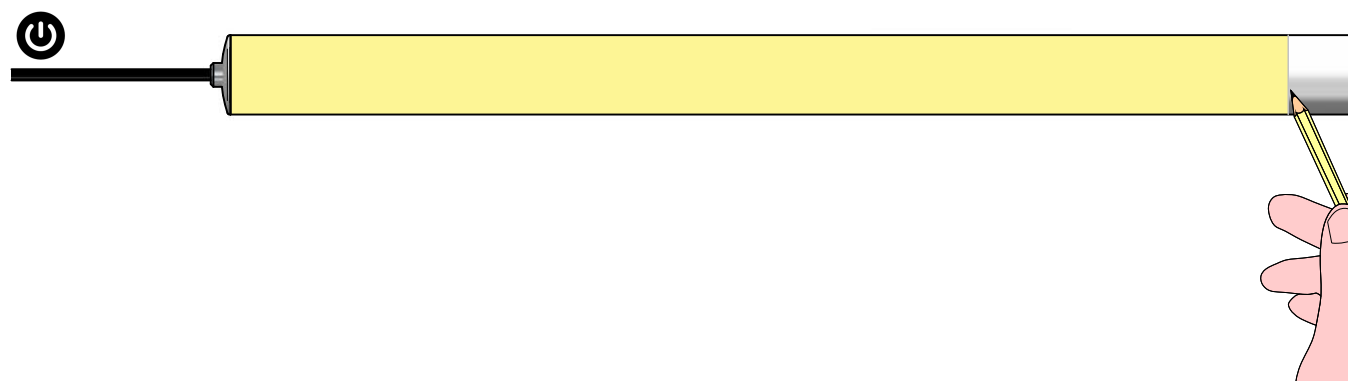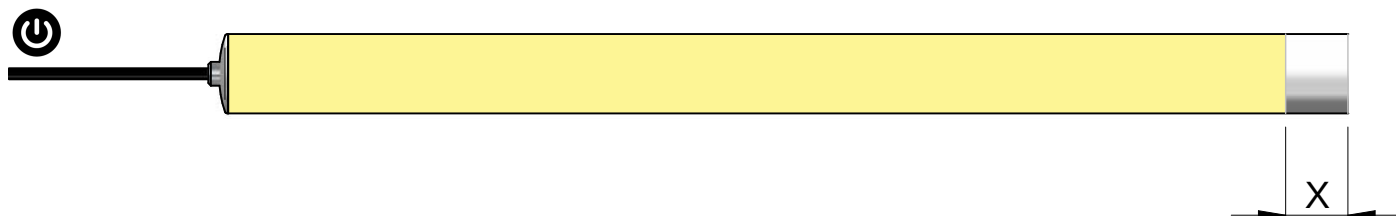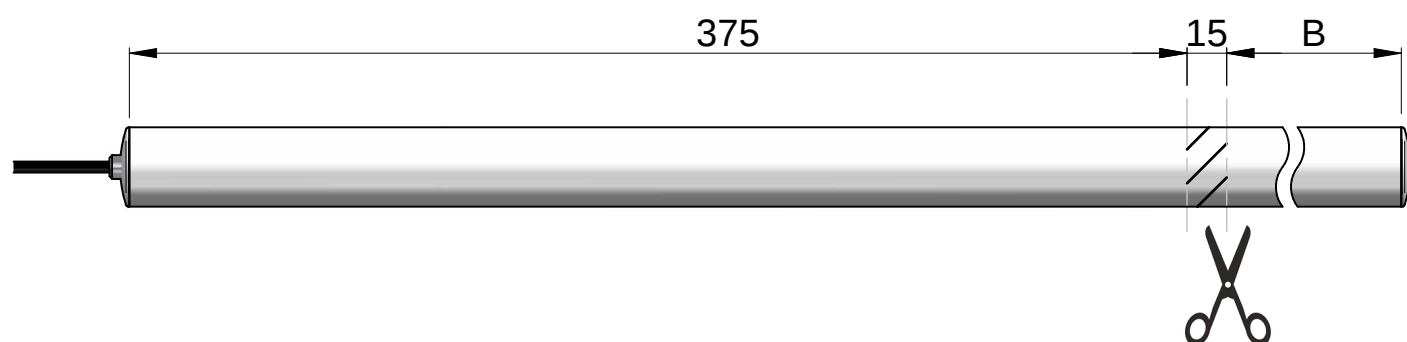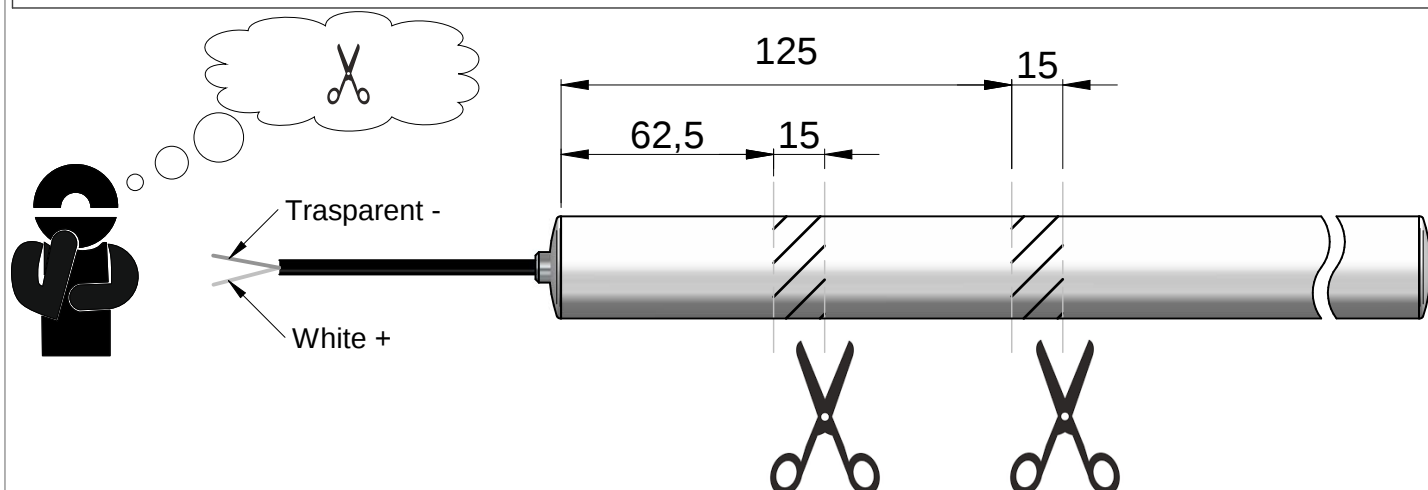


1


C-K400076
Kit not included

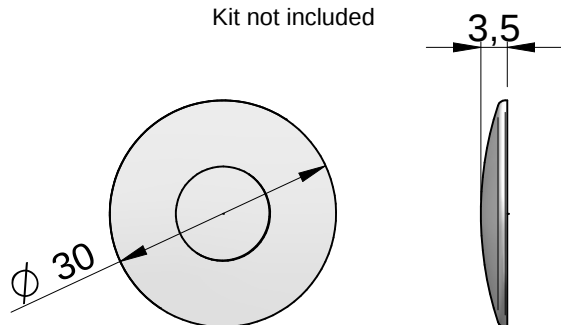


Kit not included
C-K400080

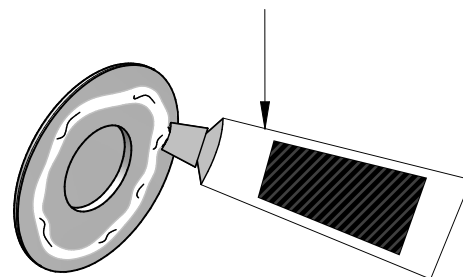


2

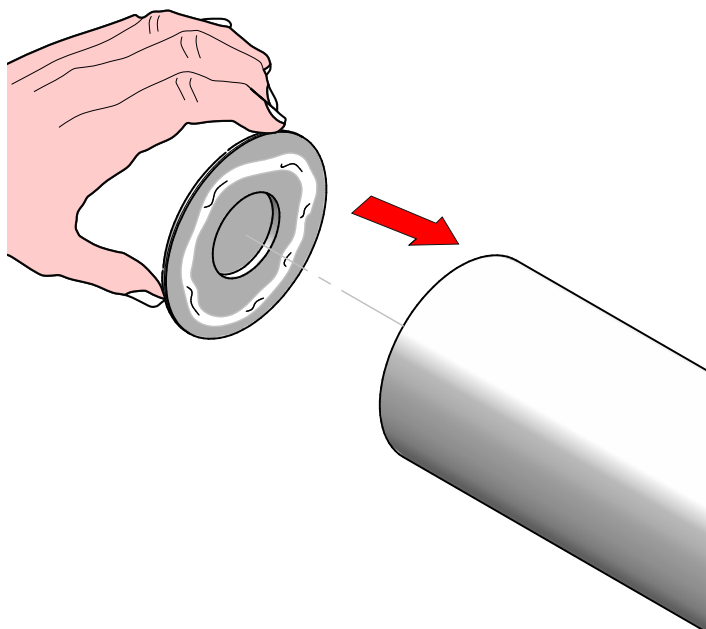




3

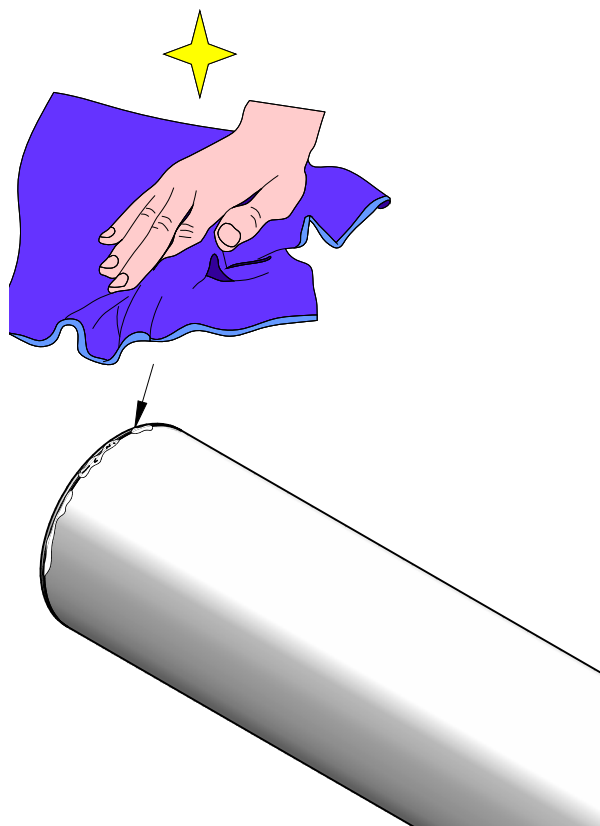

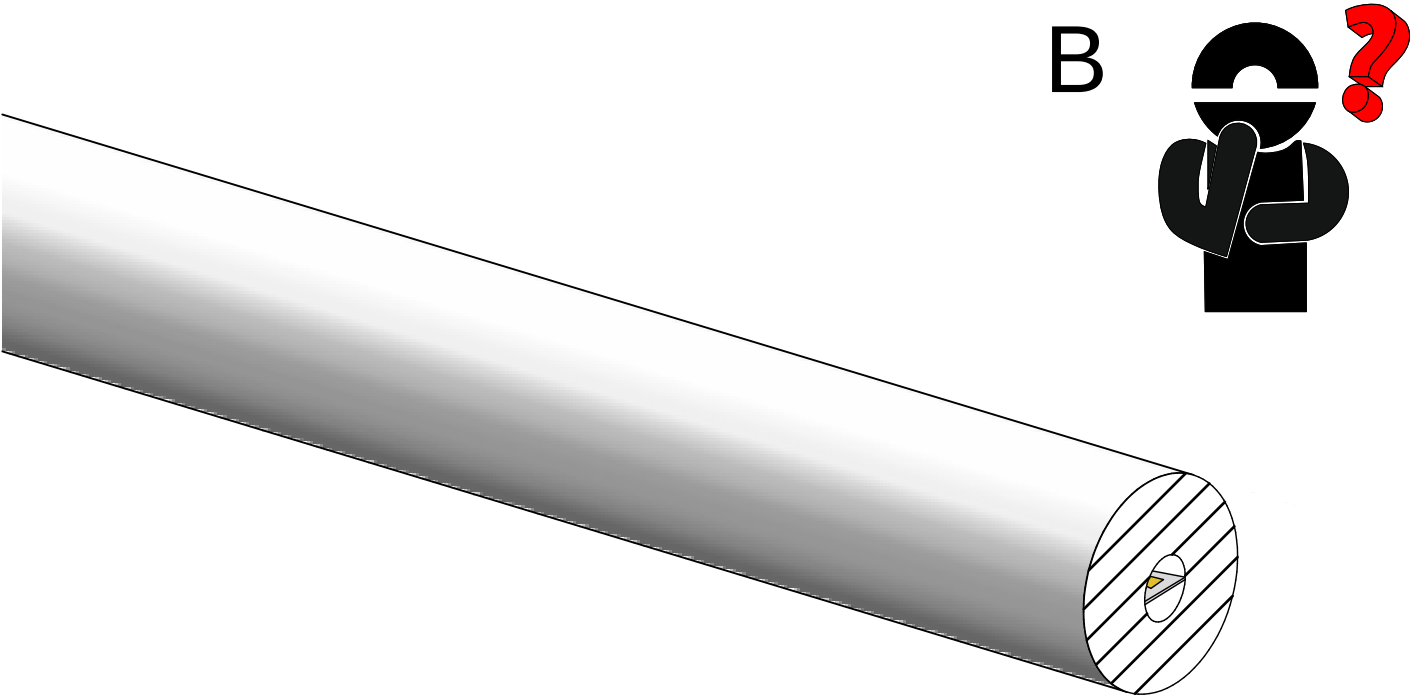




C-K400077

Kit not included

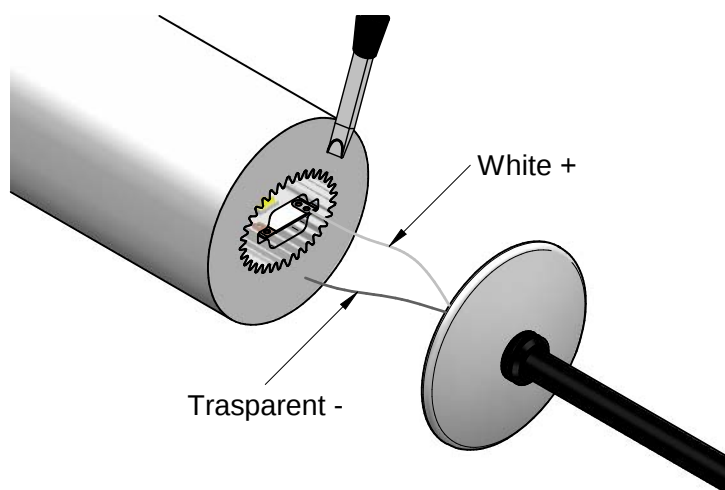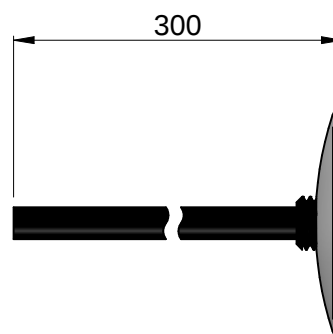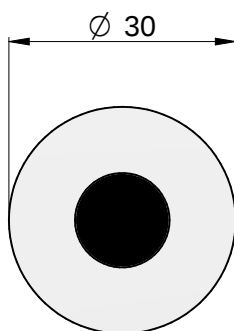

Kit not included

C-K400080

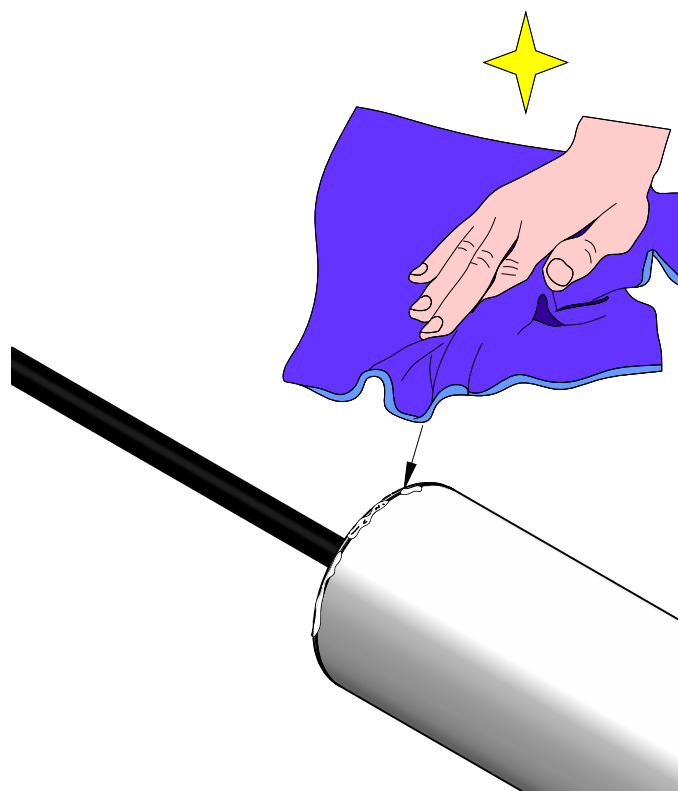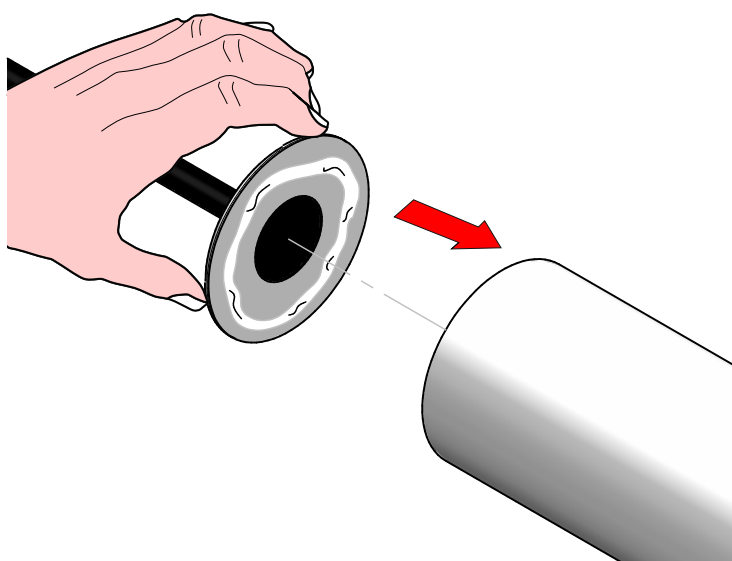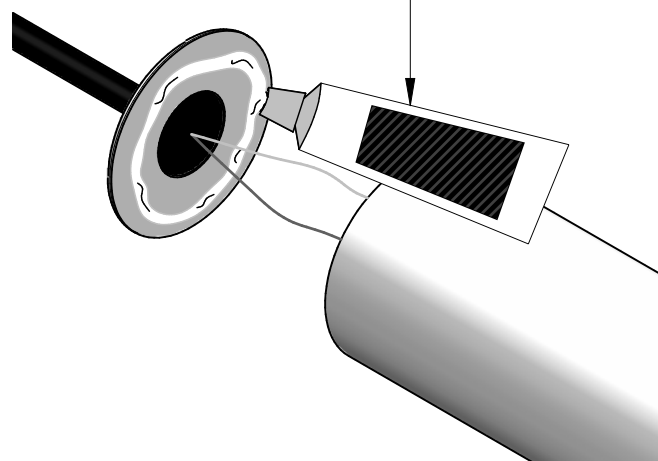

Posizionare il cellofan e
tenderla per tenere saldo il tappo,
finchè la colla si asciugherà

Place the cellophane and
pull it to hold the cap firmly in place,
until the glue dries

Legen Sie das Zellophan ein und
ziehen Sie daran, um die Kappe fest zu halten,
bis der Kleber trocknet



Placez la cellophane et tirez-la pour maintenir
le bouchon fermement en place.
Tirez dessus pour maintenir le
bouchon fermement en place,
jusqu'à ce que la colle sèche

Rimuovere il cellofan dopo
8 ORE di asciugatura

Remove cellophane after
8 hour of drying


Entfernen Sie das Zellophan nach
8 STUNDEN Trocknungszeit

Retirer la cellophane après
8 HEURES de séchage


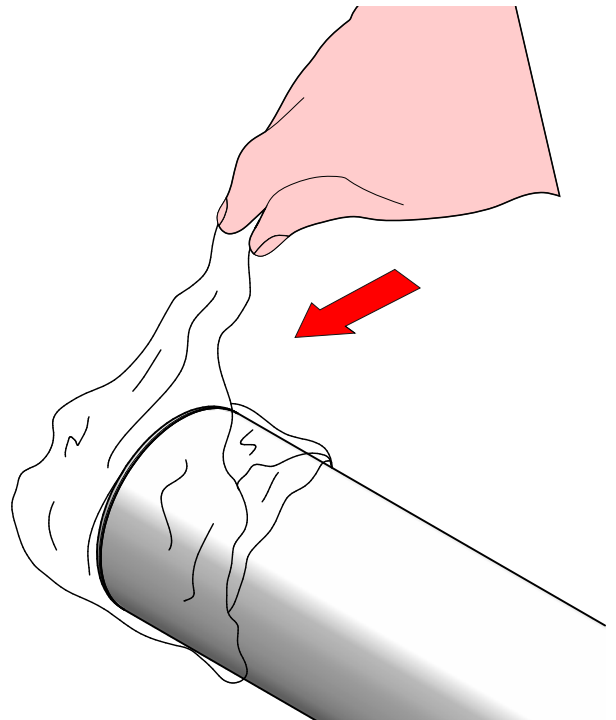
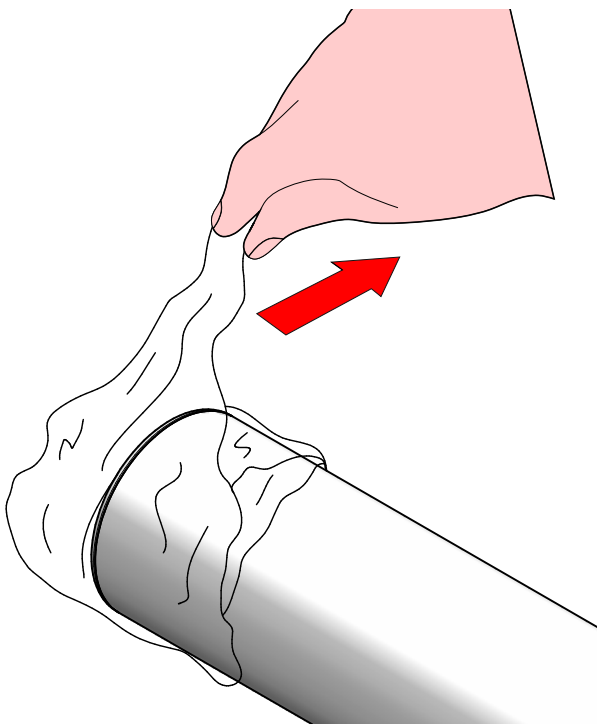


Cellophane not included

 Single color


	Xmm	L1 max	L2 max
	0,75	35m	5m
	0,75	20m	10m
	1,5	50m	5m
	1,5	40m	10m
	2,5	50m	5m
	2,5	40m	10m

$L2 = L3 + L4$

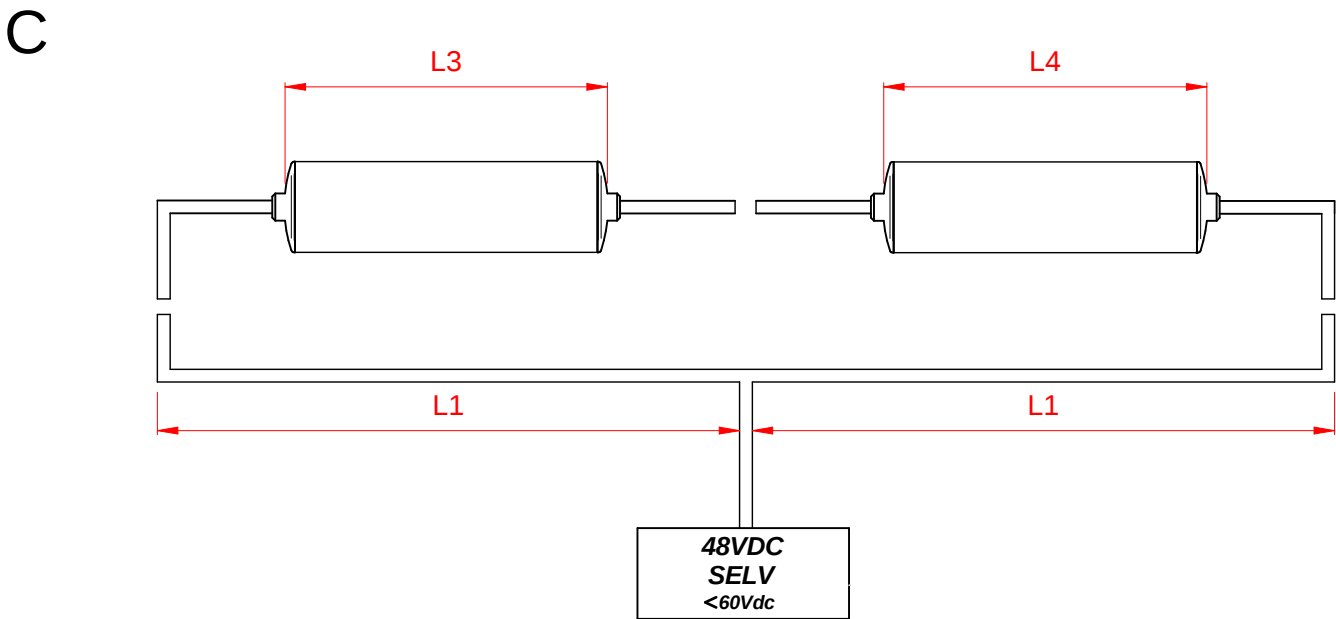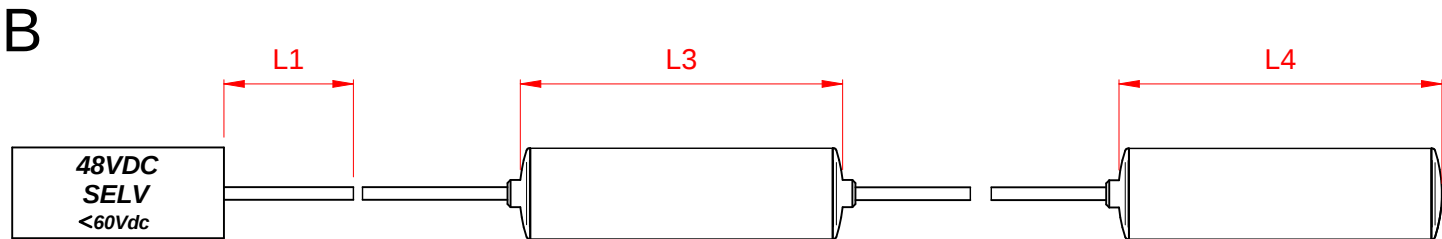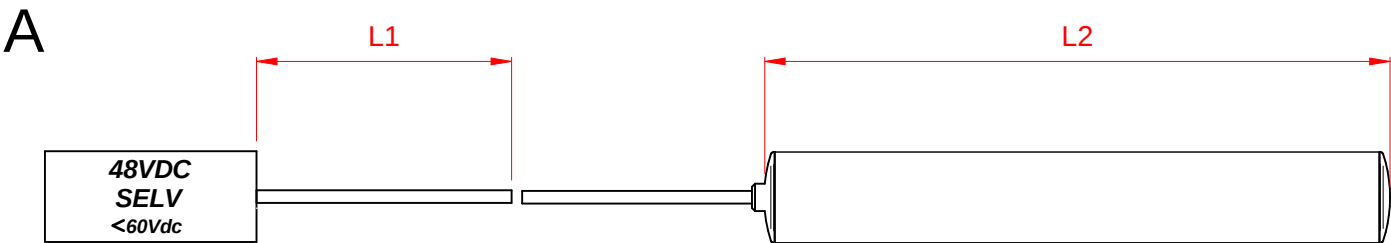


1.1


C-F300005
C-F300006
C-F300007
C-F300008

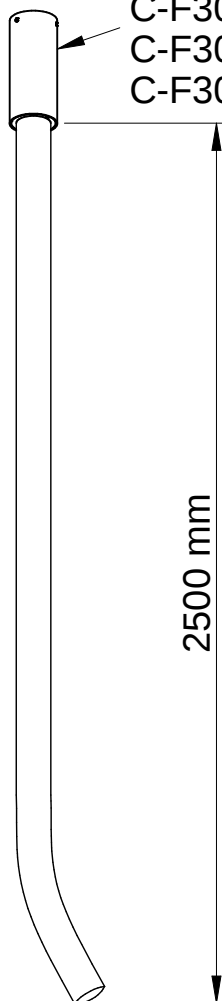


1.2

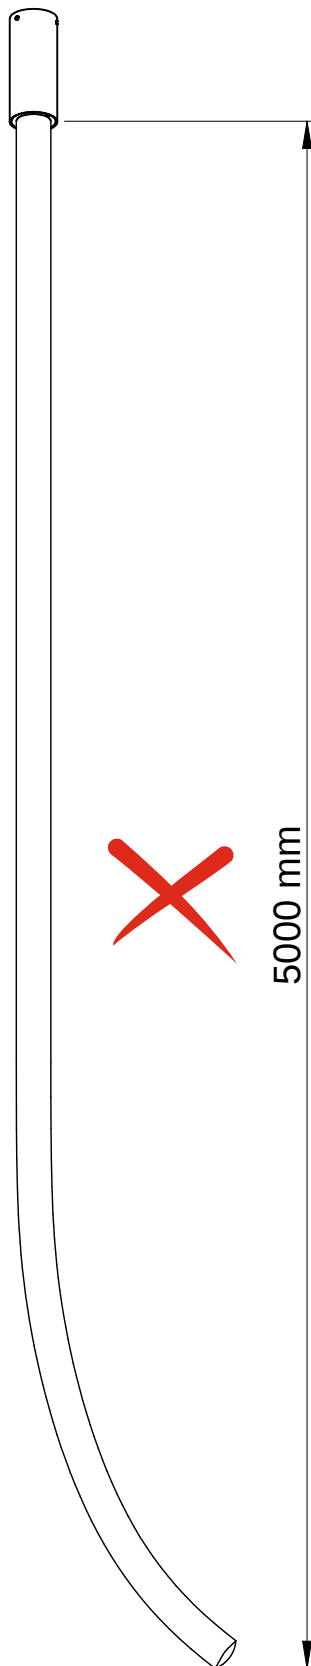


1.3

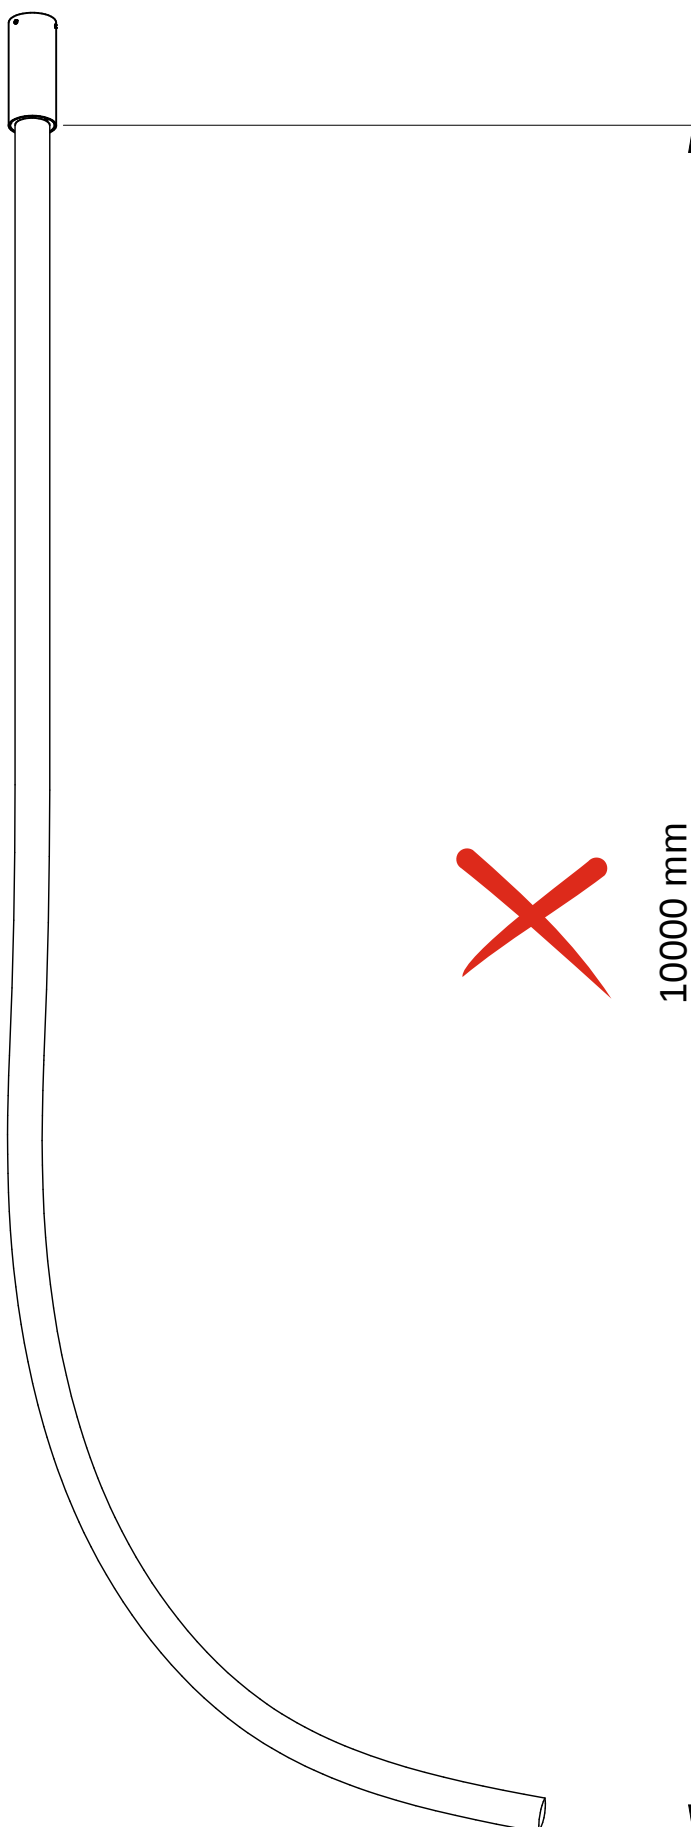


2.1

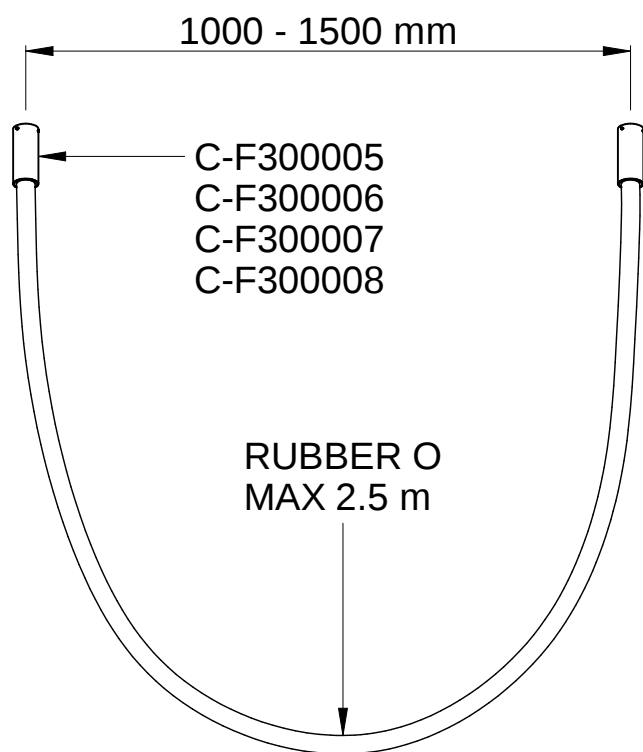


2.2

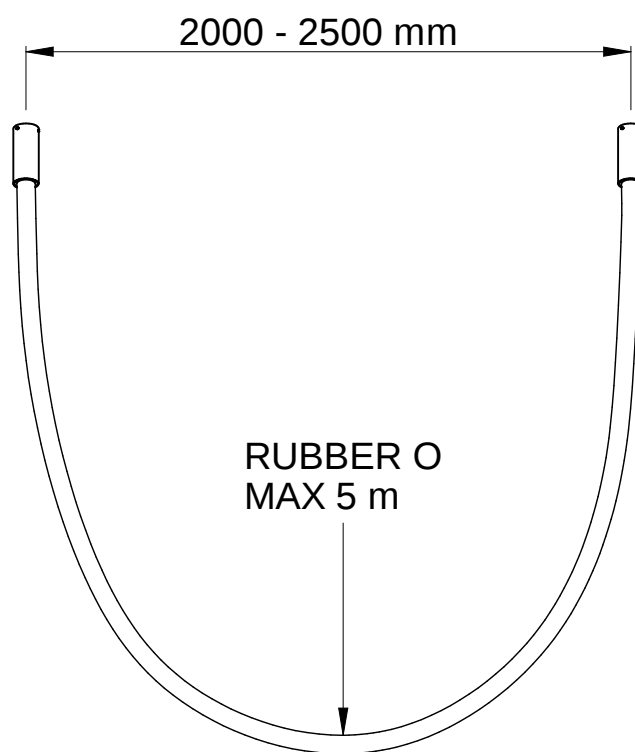

2.3

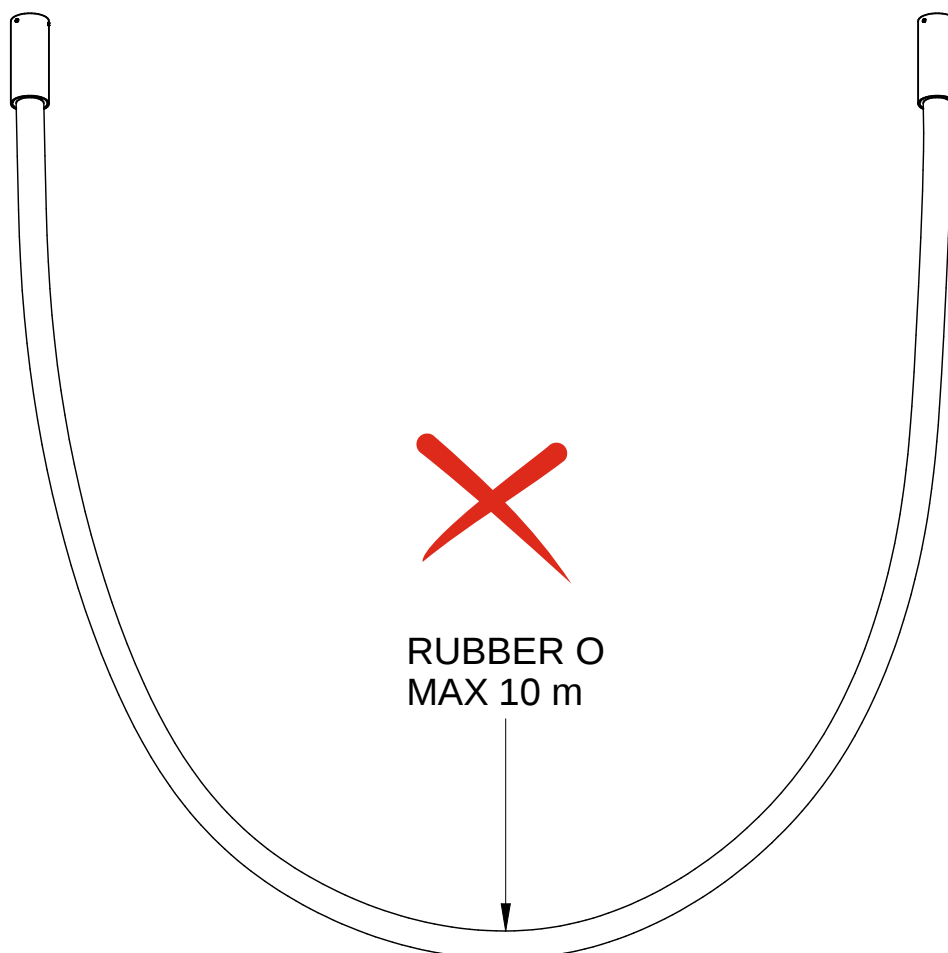


2.5

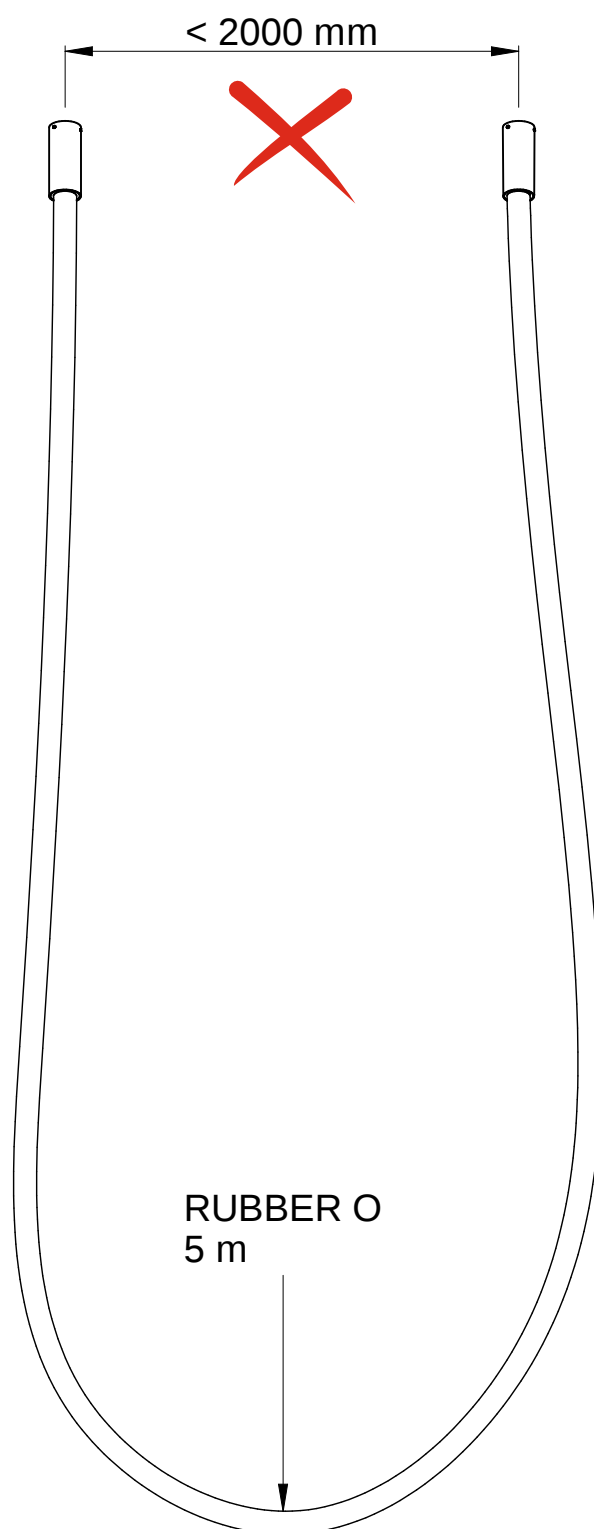


3.1

> 1000

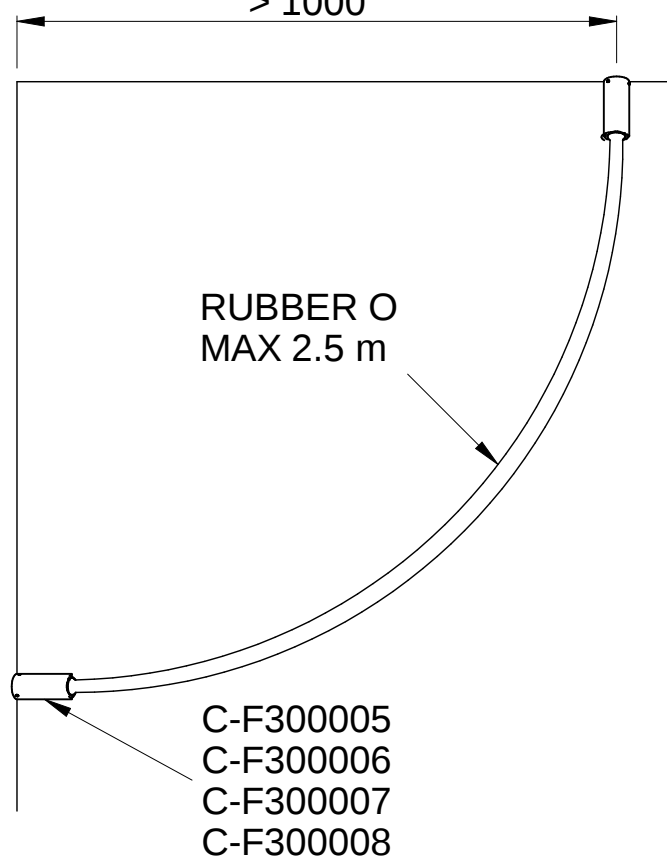



3.2

> 2000 mm



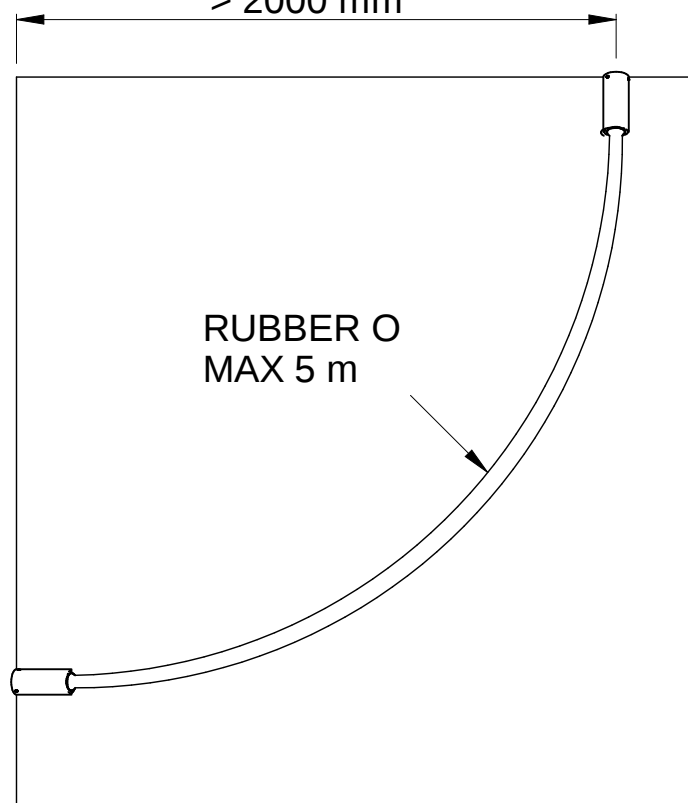


3.3

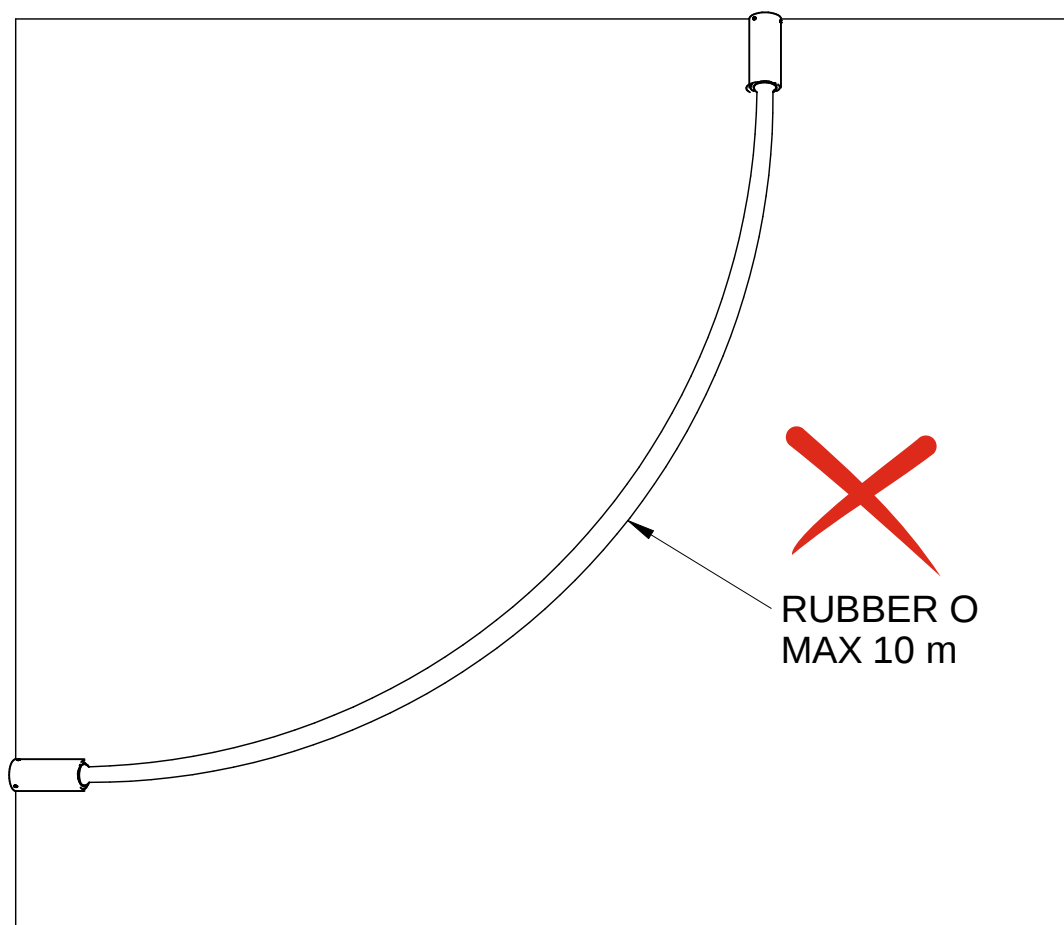

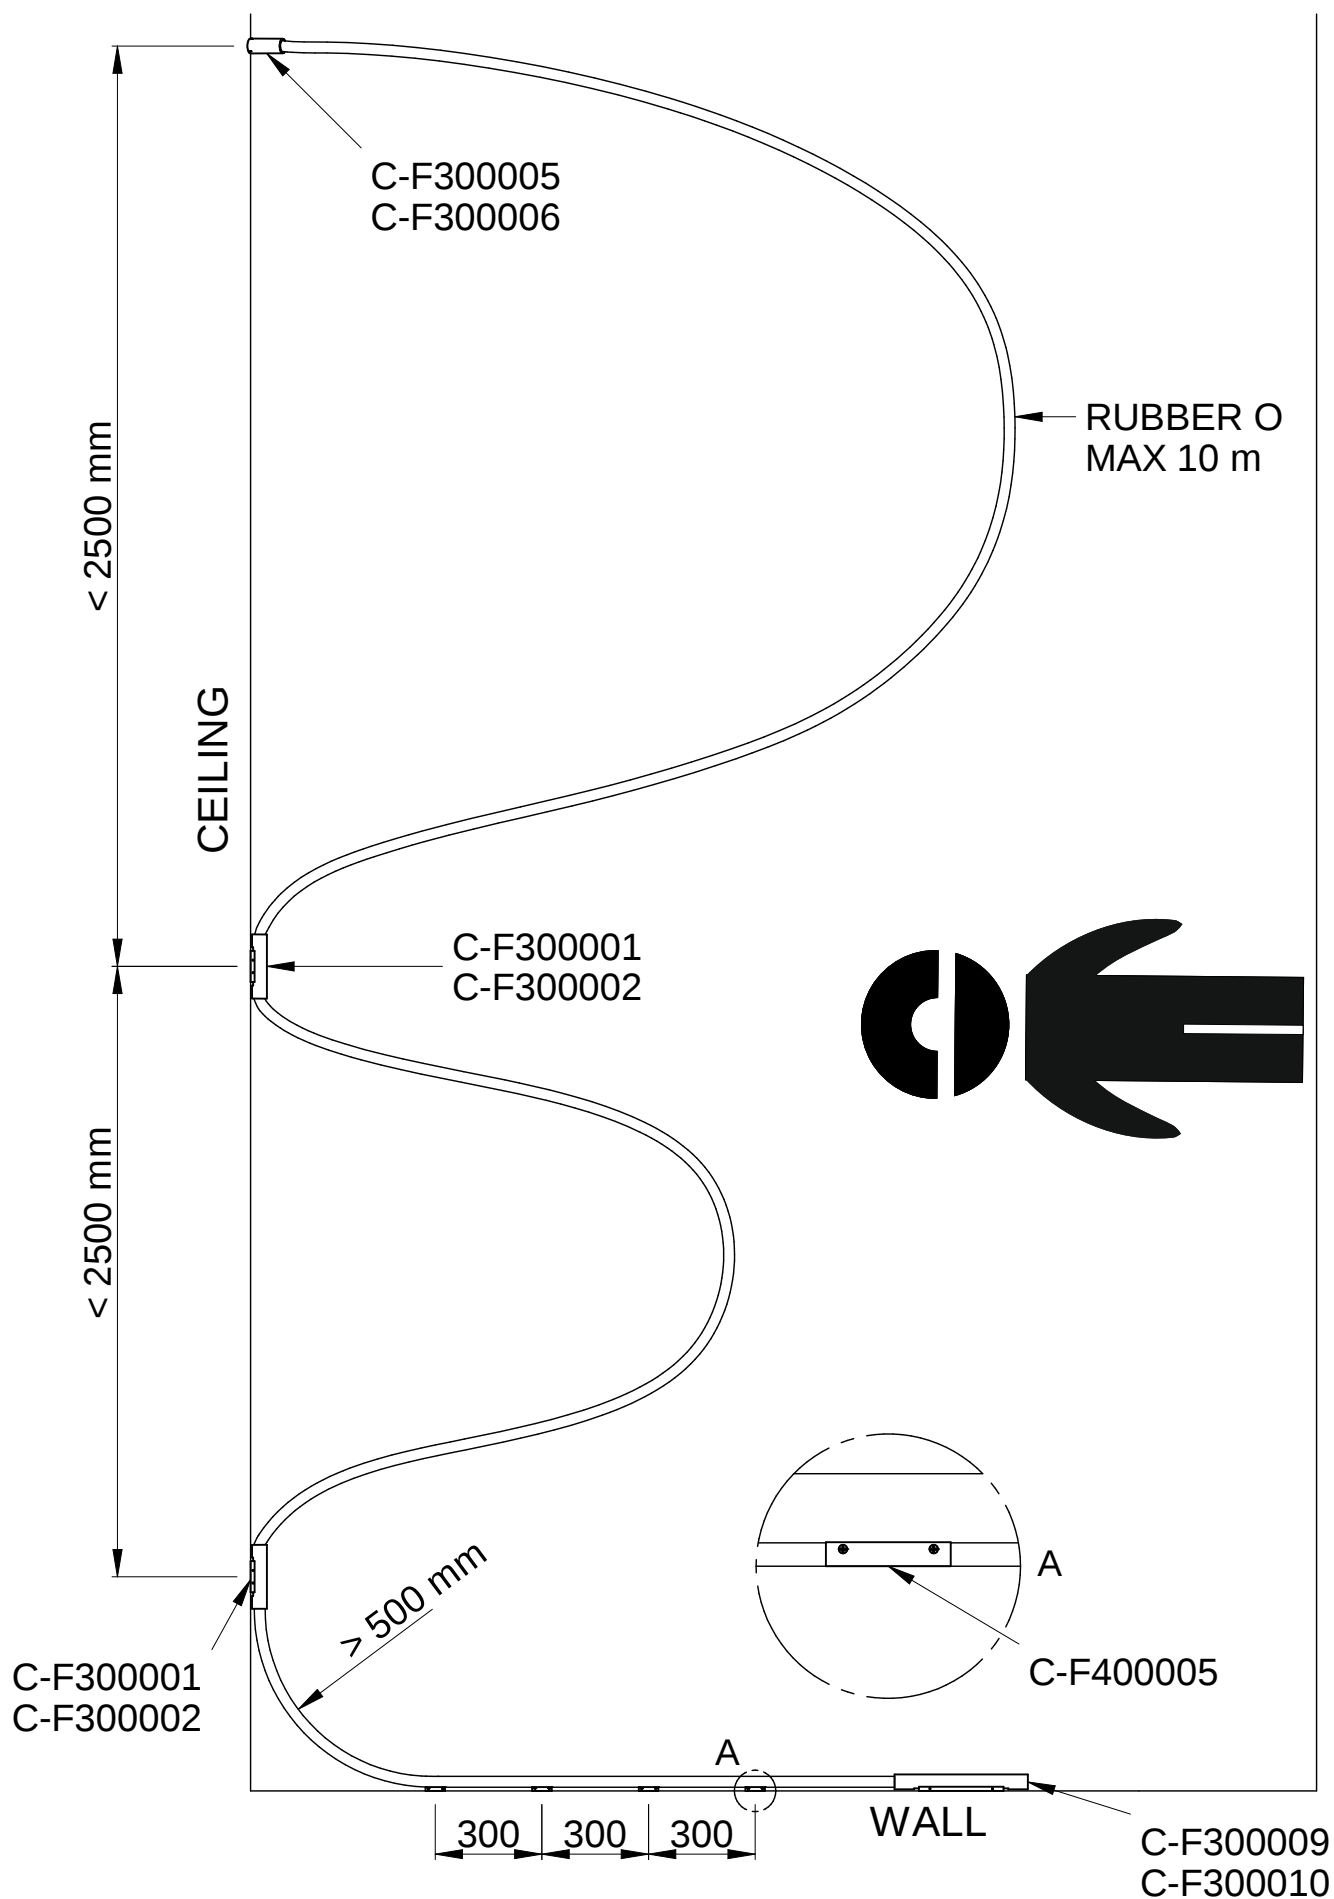

ISTRUZIONI PER IL LAVAGGIO DELL'APPARECCHIO D'ILLUMINAZIONE
LUMINAIRE CARE INSTRUCTIONS
ISTRUCCIONES PARA LIMPIAR LA LUMINARA
INSTRUCTIONS POUR LE LAVAGE DE L'APPAREIL D'ECLAIRAGE
ANLEITUNG ZUR REINIGUNG DES BELEUCHTUNGSGERATS

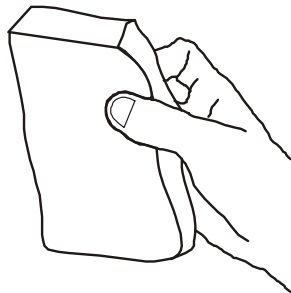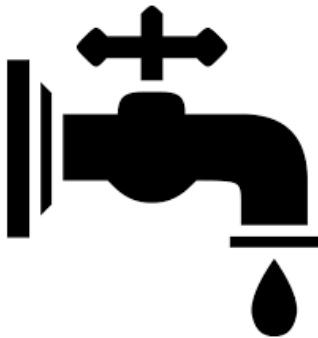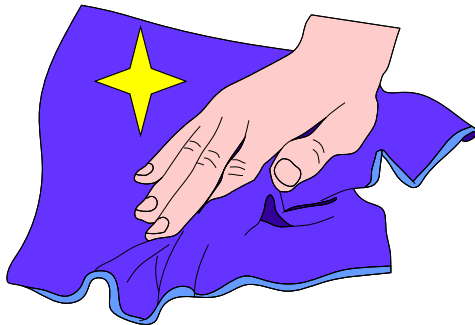

IT - ATTENZIONE!!!

Lavare la superficie del diffusore luce con panno umido, utilizzando solo acqua e sapone neutro.

EN - WARNING!!!

Wipe clean with a cloth dampened in water with neutral detergent.

ES - ATENCION!!!



Limpiar la superficie del difusor con un pano humedecido con agua y jabon neutro.

FR - ATTENTION!!!

Laver la surface du diffuseur de lumiere a l'aide d'un chiffon humide et en utilisant seulement de l'eau et du savon neutre.

DE - ACHTUNG!!!

Die oberfläche vom lampenschirm mit einem feuchten lappen reinigen. De lappen mit wasser und neutralseife befeuchten.

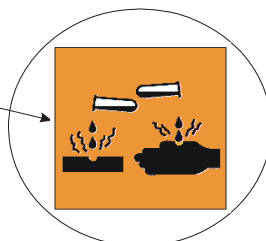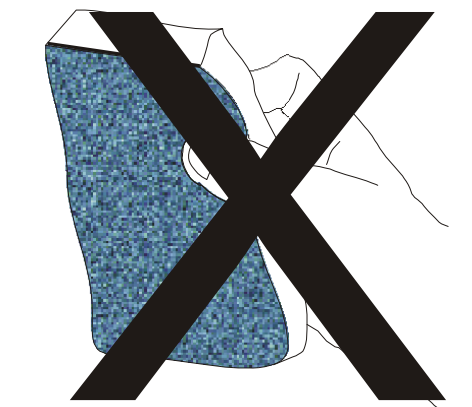

IT - ATTENZIONE!!!

Non utilizzare panni abrasivi e/o solventi.

EN - WARNING!!!

Avoiding the use of chemical solvents and/or abrasive cloths.

ES - ATENCION!!!

No utilizar panos abrasivos y solventes.

FR - ATTENTION!!!

Ne pas utiliser de chiffons abrasifs ou de dissolvants.

DE - ACHTUNG!!!

Abschleifende tuche und/oder losungsmittel nicht benutzen.