



TOUCH 03 L1

 
Power supply units and control gears - Alimentatori ed elettronica di controllo




Technical specs:

TOUCH 03L1 RGBW Touch Panel - 4 zones

Input Voltage: 100~240Vac
Output Signal: DMX512 (4 zones)
Working Temp.: -30°C ~55°C
Dimensions: L86×W86×H36(mm)
Weight(G.W.): 225g

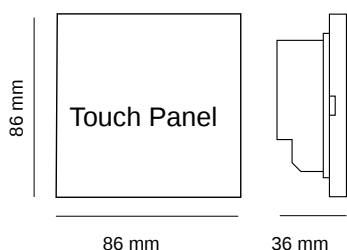

Functions:

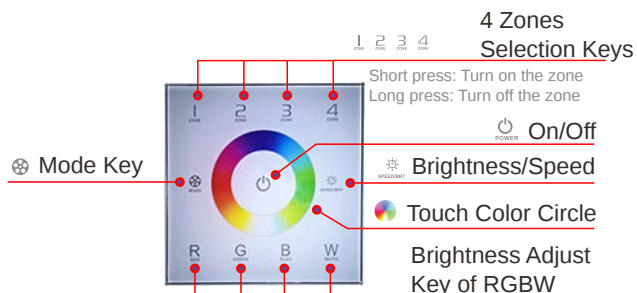 

*Long press  to turn on/off the tone.

Changing Mode

1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth

DMX512 addresses:

 
- Zone 1: adrss 1/2/3/4
Zone 2: adrss 5/6/7/8
Zone 3: adrss 9/10/11/12
Zone 4: adrss 13/14/15/16

Installation Instruction:

90x90x50 mm



compulsory outercasing
WC0302

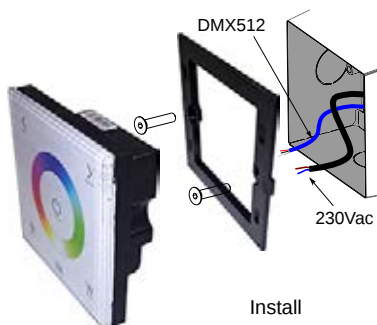


Install



Uninstall

 Connection:

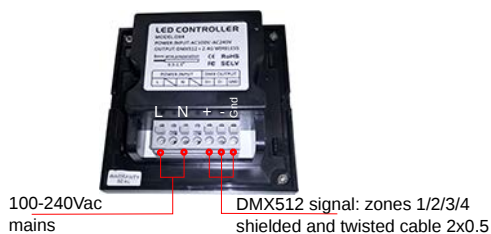



TOUCH 03 L1

 
Power supply units and control gears - Alimentatori ed elettronica di controllo




Dati tecnici:

TOUCH 03L1 RGBW Touch Panel - 4 zone

Input: 100~240Vac
Segnale uscita: DMX512 (4 zone)
Temp.funzionamento: -30°C ~55°C
Dimensioni: L86×W86×H36(mm)
Peso: 225g

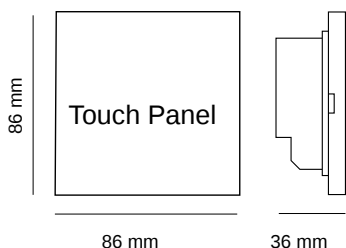

Funzioni:

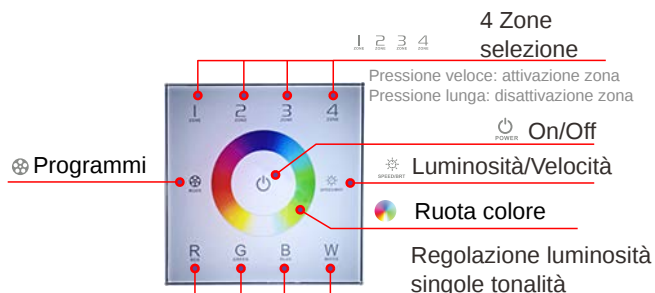 

* Pressione prolungata per spegnere i toni pulsante

Programmi:

1. Rosso
2. Verde
3. Blue
4. Giallo
5. Rosa
6. Ciano
7. Bianco R+G+B
8. RGB Jumping
9. Cambio 7 colori a salto
10. Variazione RGB morbida
11. Cambio 7 colori morbido

Indirizzi DMX512:

 
- Zona 1: adrss 1/2/3/4
Zona 2: adrss 5/6/7/8
Zona 3: adrss 9/10/11/12
Zona 4: adrss 13/14/15/16

Installazione:

90x90x50 mm



cassaforma obbligatoria
WC0302

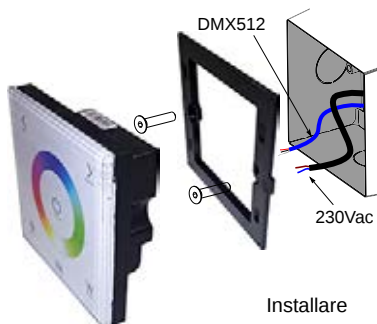

Installare



Disinstallare

Connessione:

