



**STOP**

*READ ALL OF THE FOLLOWING INSTRUCTIONS BEFORE  
REMOVING **CABINET** FROM SKID*


# PANDUIT® Enterprise Network Cabinets

(E6212B1, E6412B2 - Server Configured)

## INSTRUCTIONS CM646

© Panduit Corp. 2013

**NOTE - Some views in this document may vary slightly from your actual cabinet configuration.**

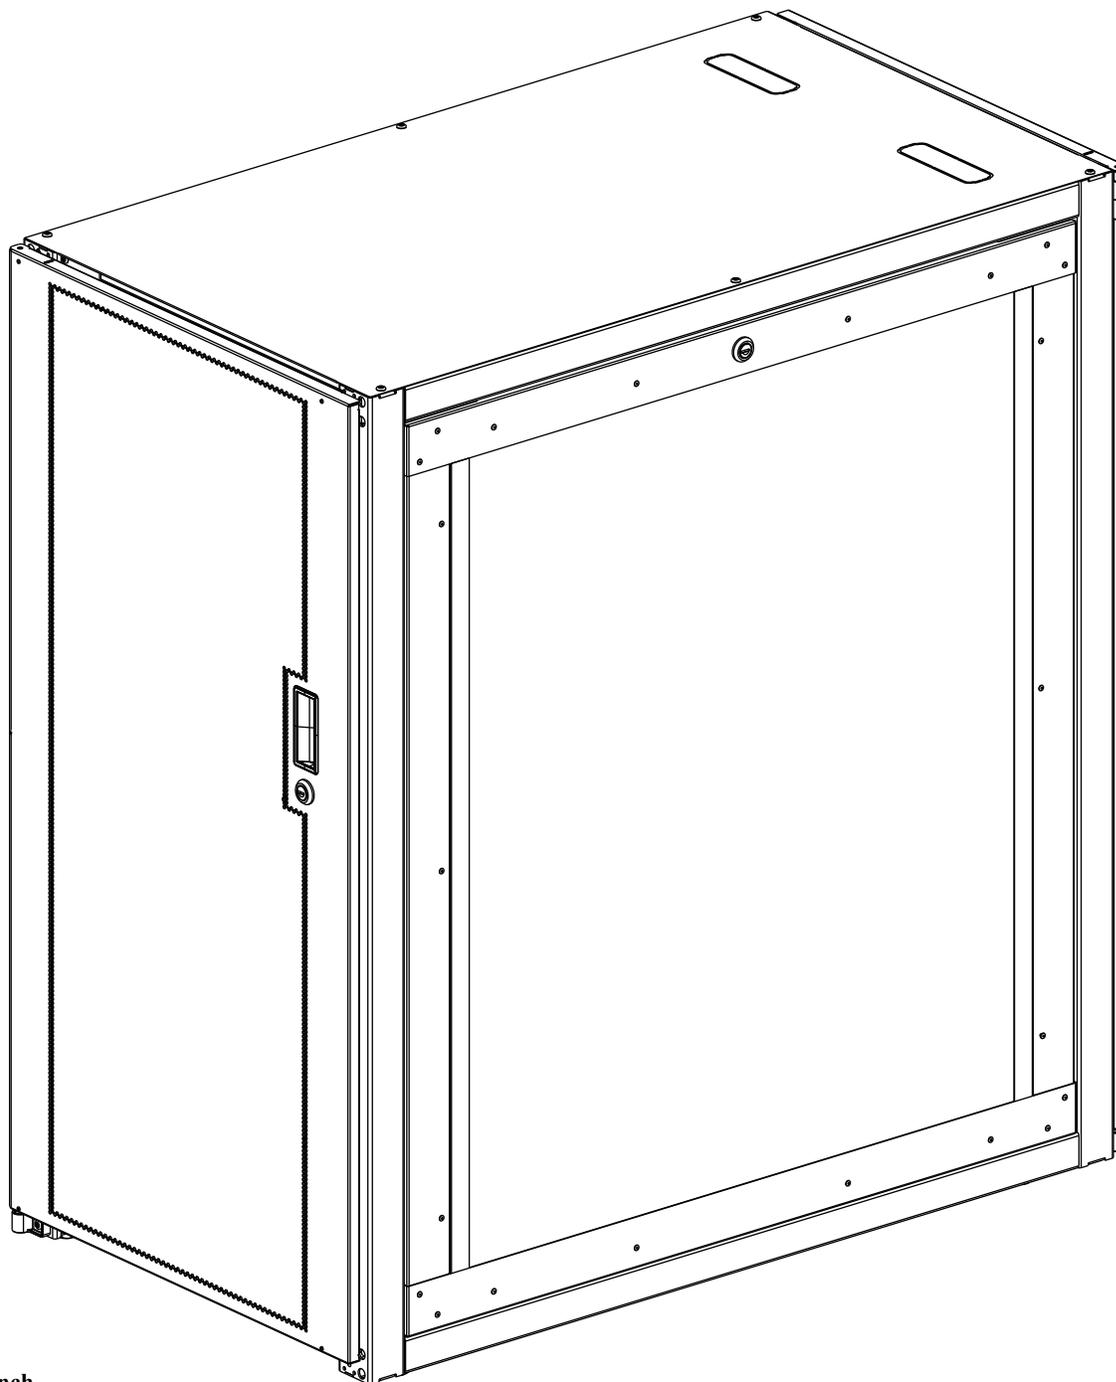

**Tool List:**

- 22mm wrench
- 10mm wrench
- 13mm socket wrench
- T30 Torx bit (included with cabinet configuration)
- Wire Cutter

**FOR TECHNICAL SUPPORT [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)**

## Table of Contents

<b>General Cabinet Operation</b>	<b>Page</b>
Packaging Material Removal.....	4
Leveling.....	5
Grounding.....	6
Equipment Rail Adjustment.....	7
Overhead Cable Openings.....	8
Front & Rear Doors ( <i>Removal and Installation</i> ) .....	9
Side Panels ( <i>Removal and Installation</i> ) .....	10

## Packaging Material Removal

**Before removal of packaging material:**

Check tip indicator on the outside of cabinet to ensure cabinet was shipped in the upright position. If tip indicator shows improper handling, inspect cabinet for damage before accepting cabinet.

**Before handling cabinet:**


Small glide strips are installed at various locations around the cabinet to protect the cabinet's finish during shipping. These strips are to be removed prior to handling of cabinet.

### REMOVAL INSTRUCTIONS

- Remove all stretchwrap and protective cardboard from outside of cabinet
- Remove [2] Shipping Hold Down Brackets at front and rear of cabinet
- Use [2] people to carefully lift and remove cabinet from pallet

### IMPORTANT:

Leveling Legs must be fully retracted before the cabinet is moved into place. Sliding cabinet on leveling legs may result in damage to the leveling legs. (Leveling Legs ship in retracted position)

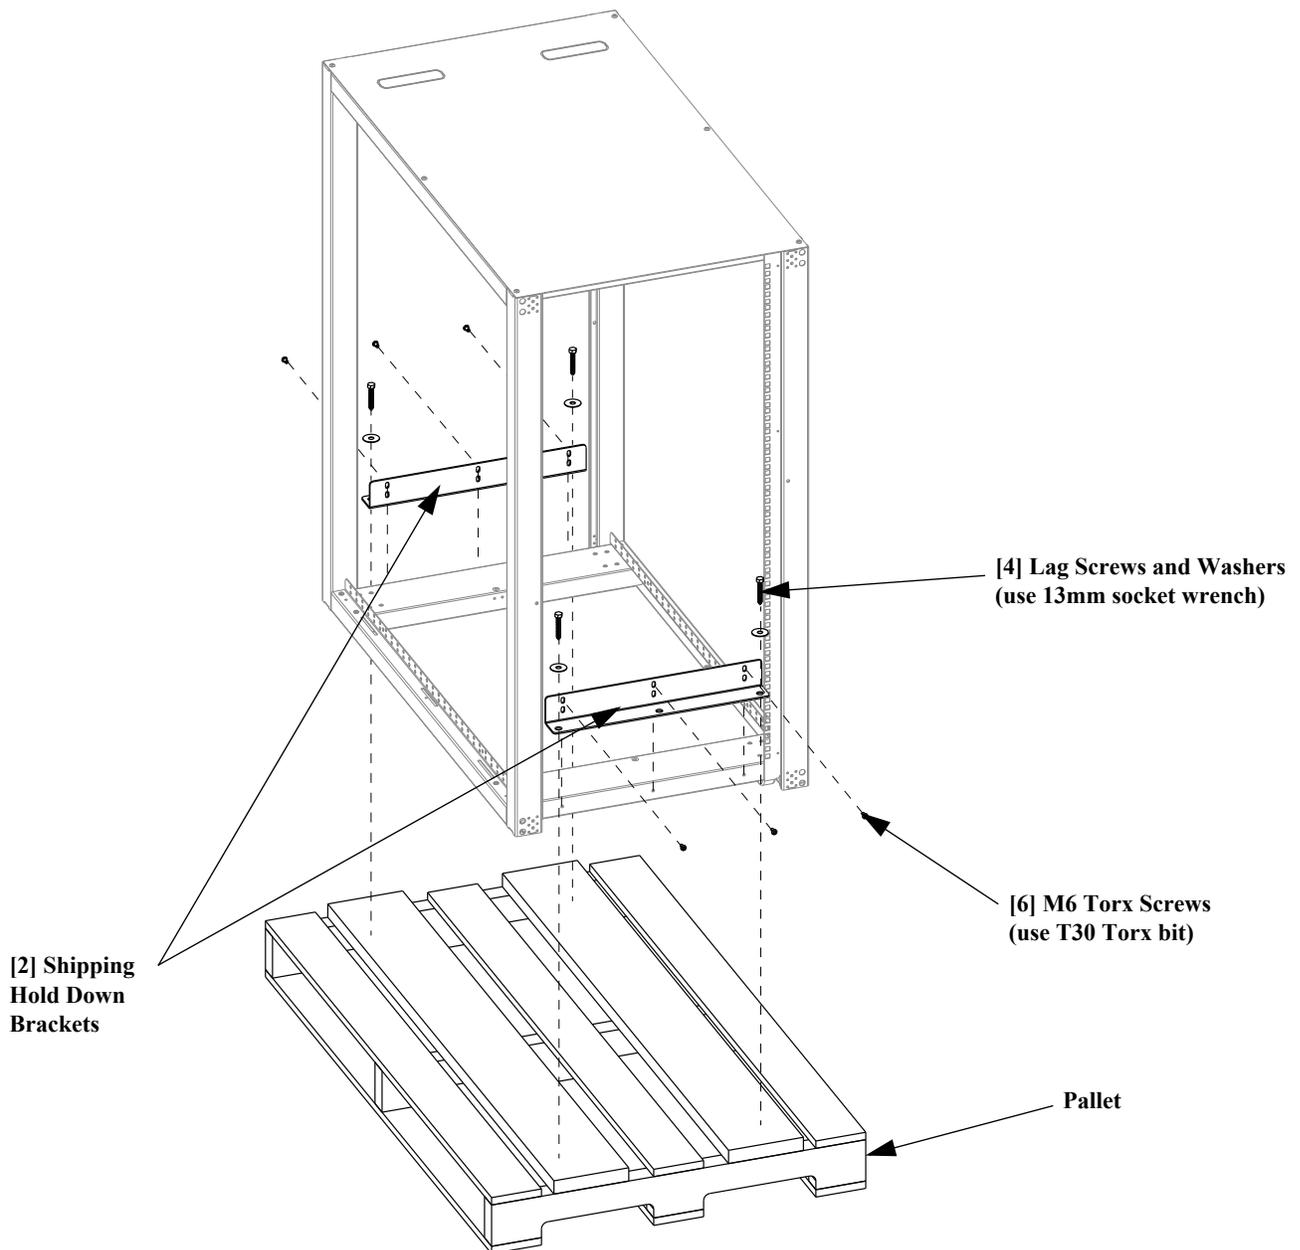


**Note:** Doors, Side panels, and other components are removed for clarity.


## Leveling

- Ensure that [4] Leveling Legs are fully retracted
- Slide Cabinet into final position
- Lower the [4] Leveling Legs until the cabinet weight is fully supported
- Adjust the [4] Leveling Legs so that the cabinet is level front-to-back and side-to-side

### Front-to-Back Cabinet Leveling

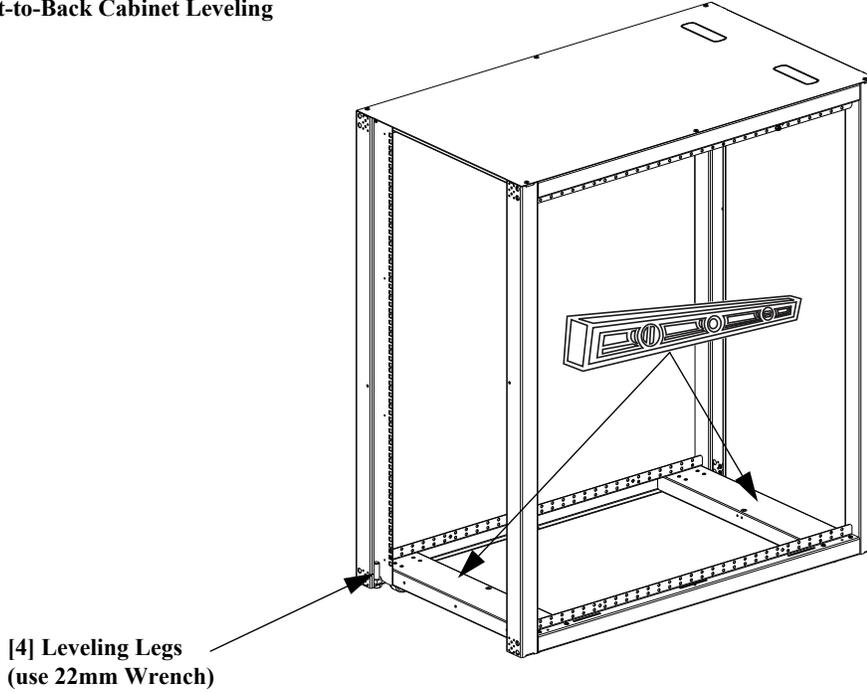



### Side-to-Side Cabinet Leveling

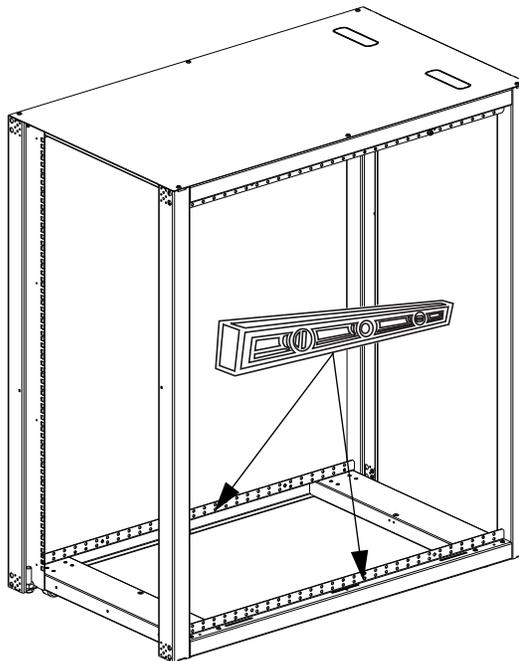

## Grounding


- Attach Grounding Lug or Grounding Bar at any of the [2] location(s) shown below
- Grounding location is indicated by universal ground symbol
- Use M5 bonding screw

[8] Grounding Lug Locations  
(Front and Rear of Beams)

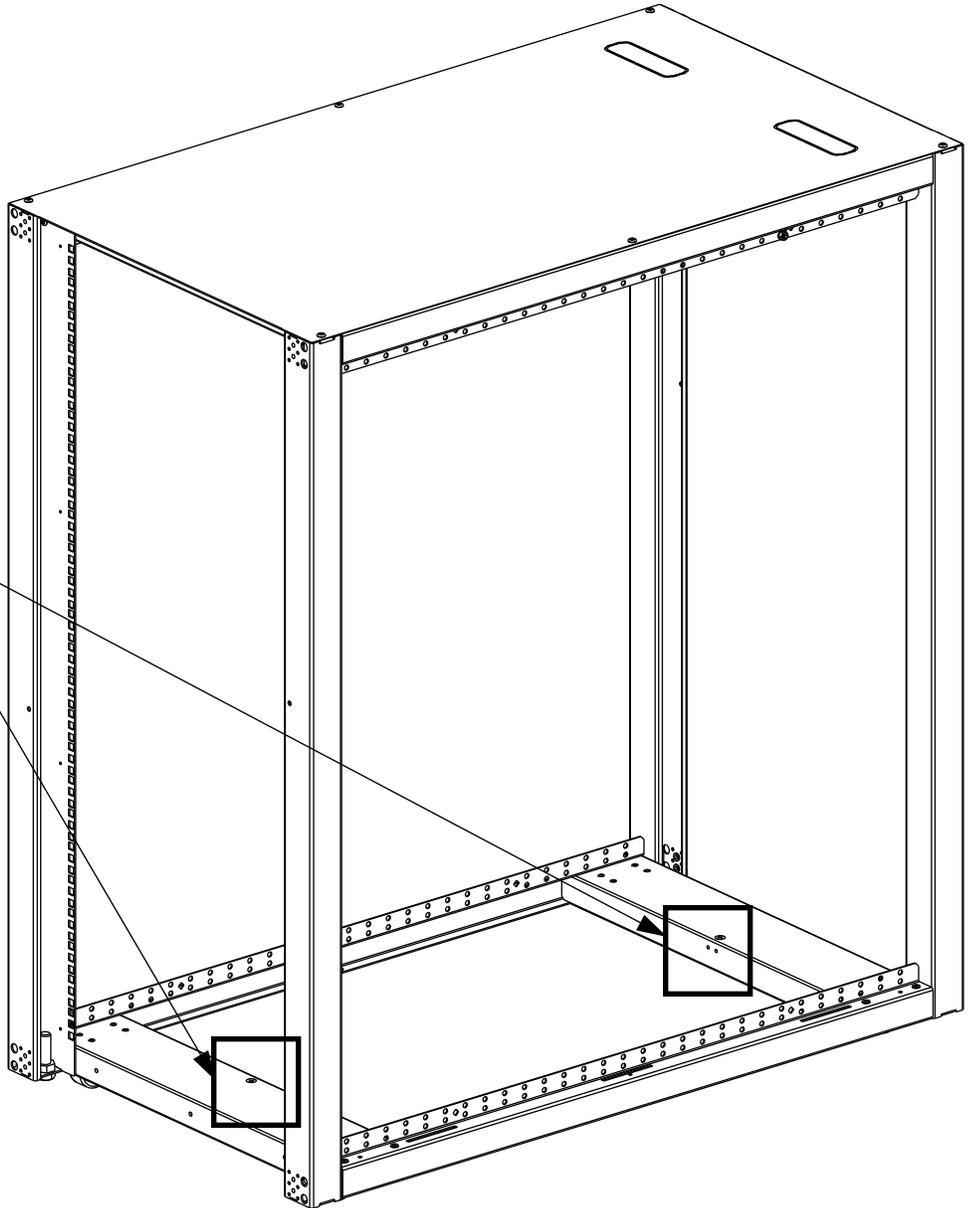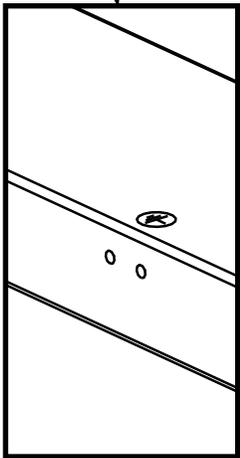


## Equipment Rail Adjustment

- Remove [4] Torx screws and [4] hex nuts per equipment rail
- Move equipment rail to desired position
- Secure equipment rail to cabinet with [4] Torx screws and [4] hex nuts per rail
- NOTE: Front equipment rails are integral to the cabinet frame and are in a fixed position

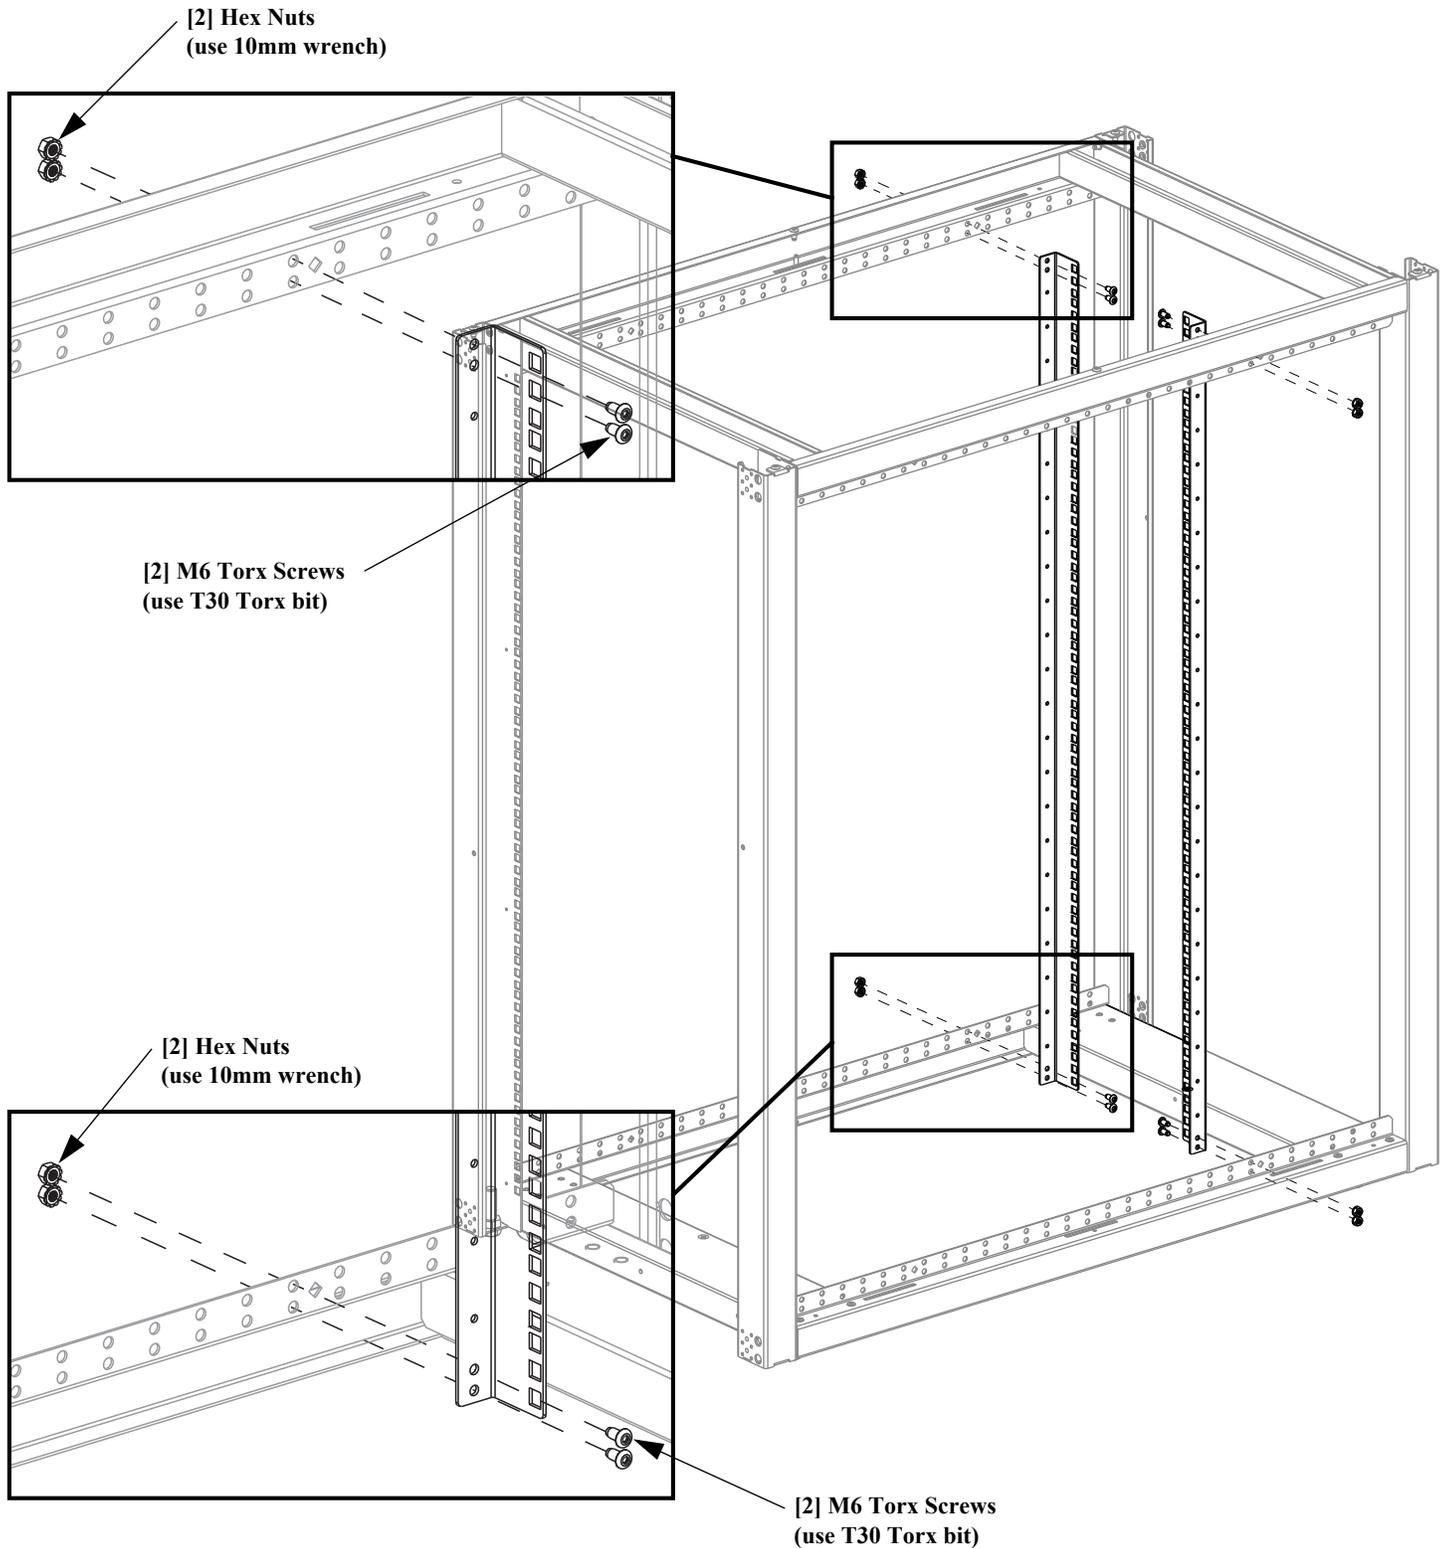


## Overhead Cable Openings

- Cut [4] tabs with wire cutter to open each cable opening - OPTIONAL

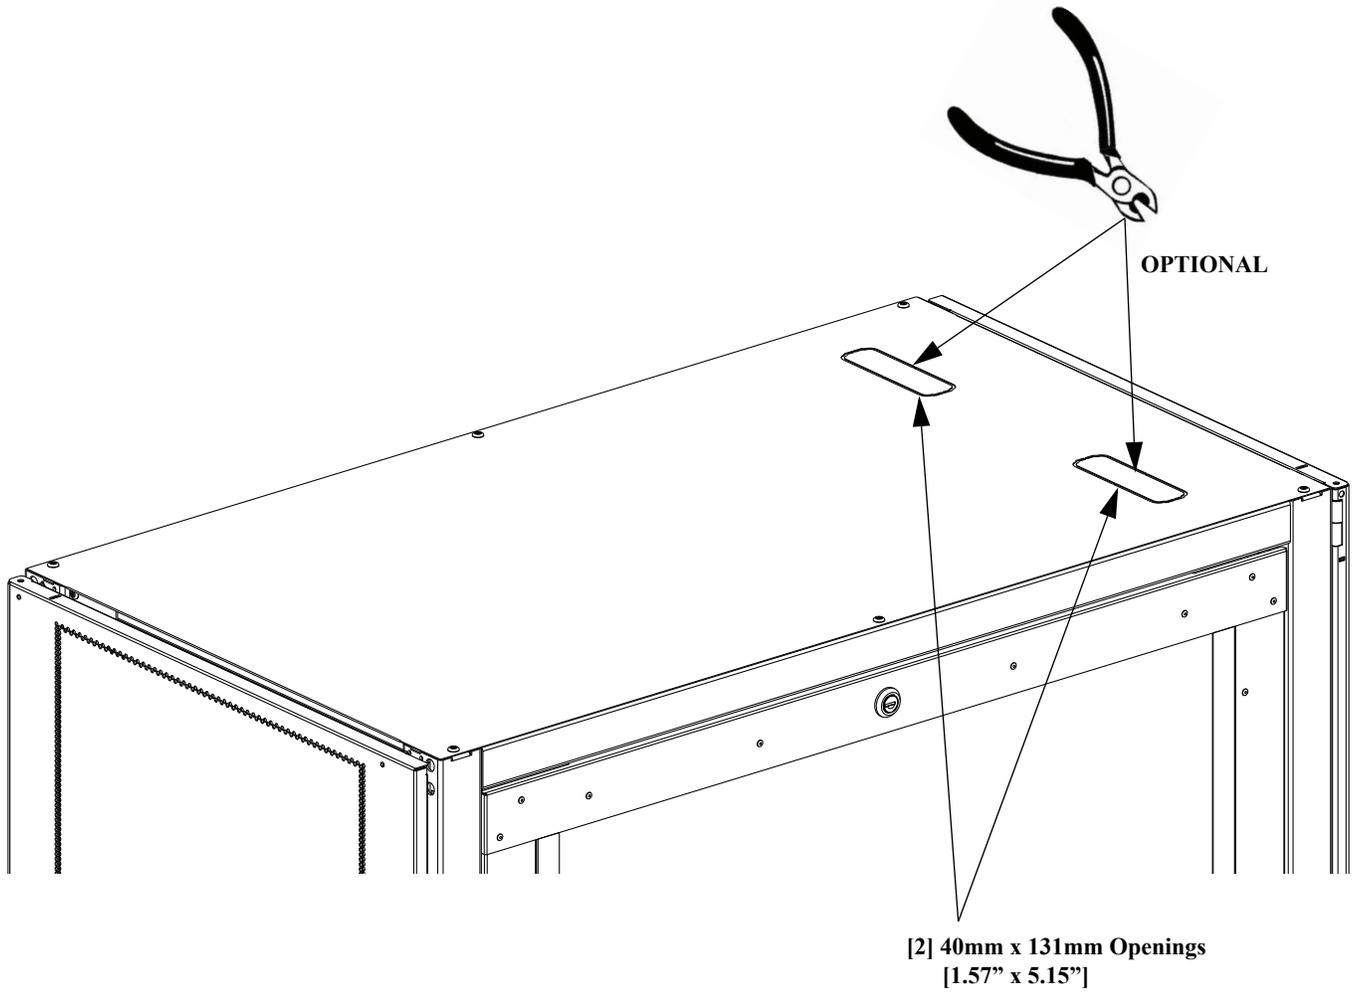


## Front & Rear Doors (Removal and Installation)

- Open Door(s) to approximately 90°
- Lift Door(s) up and pull away from cabinet frame
- REVERSE STEPS to install Front & Rear Doors

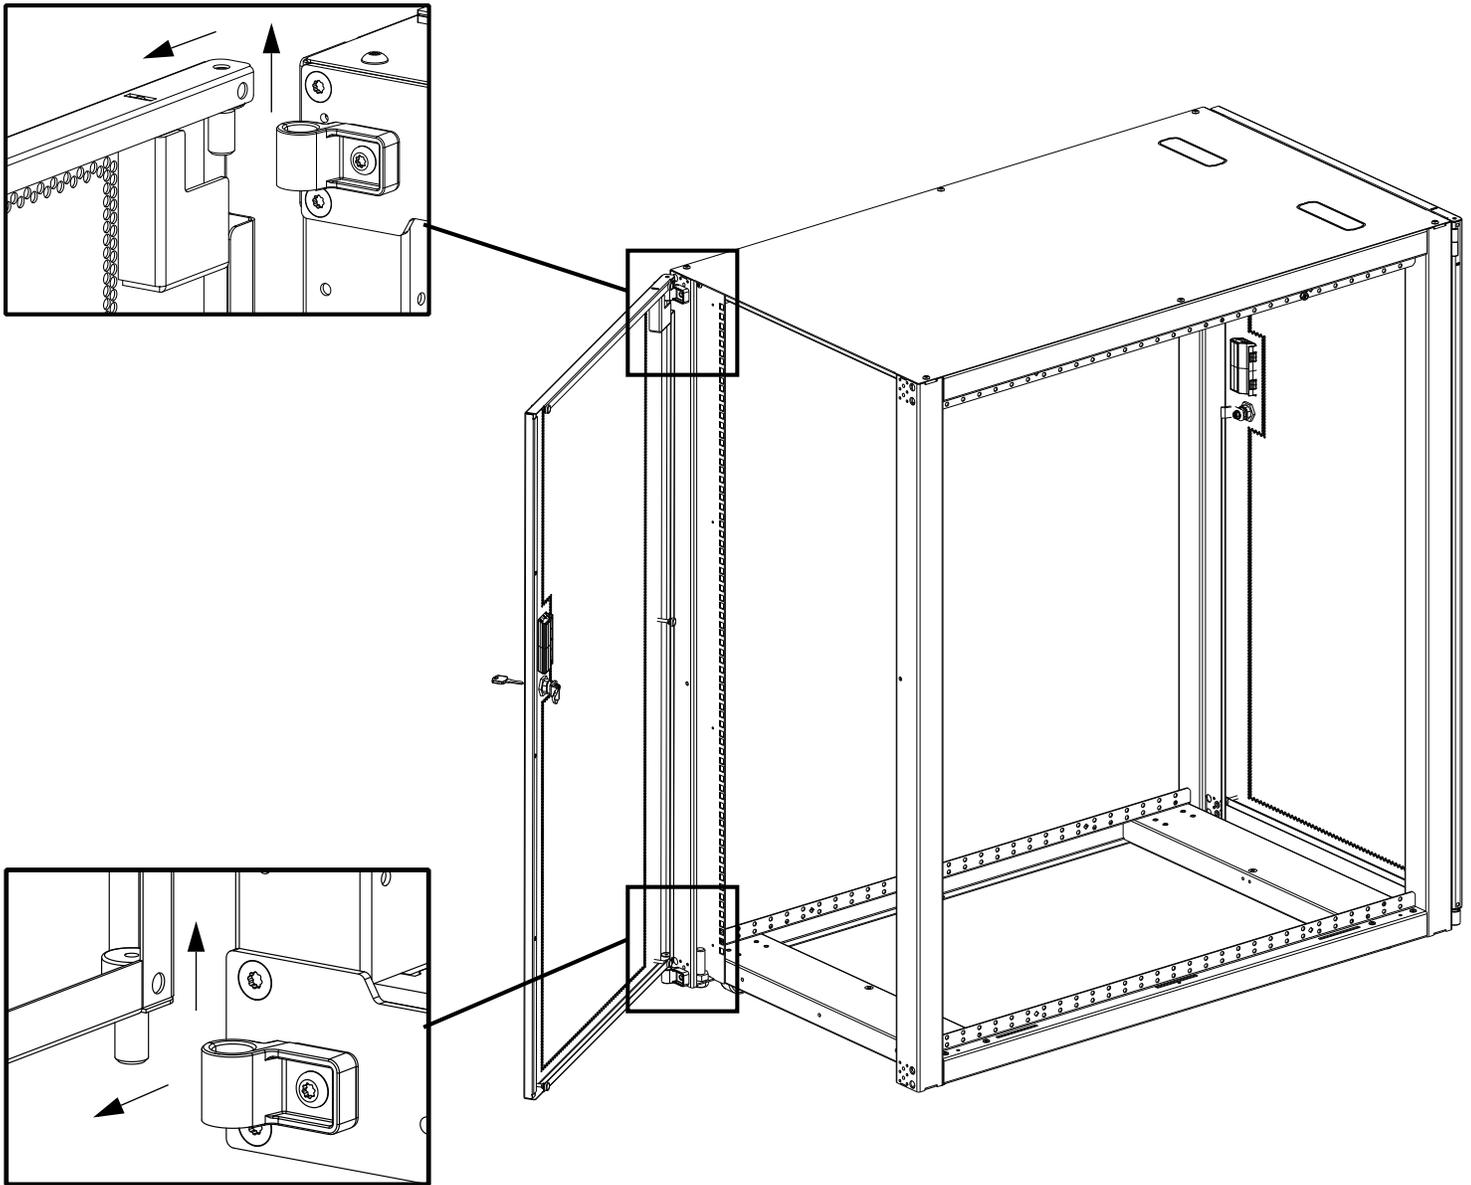

## Side Panels (Removal and Installation)

- Unlock side panel
- Pull top of side panel away from cabinet frame
- Lift bottom tabs out of cabinet frame
- REVERSE STEPS to install Side Panel

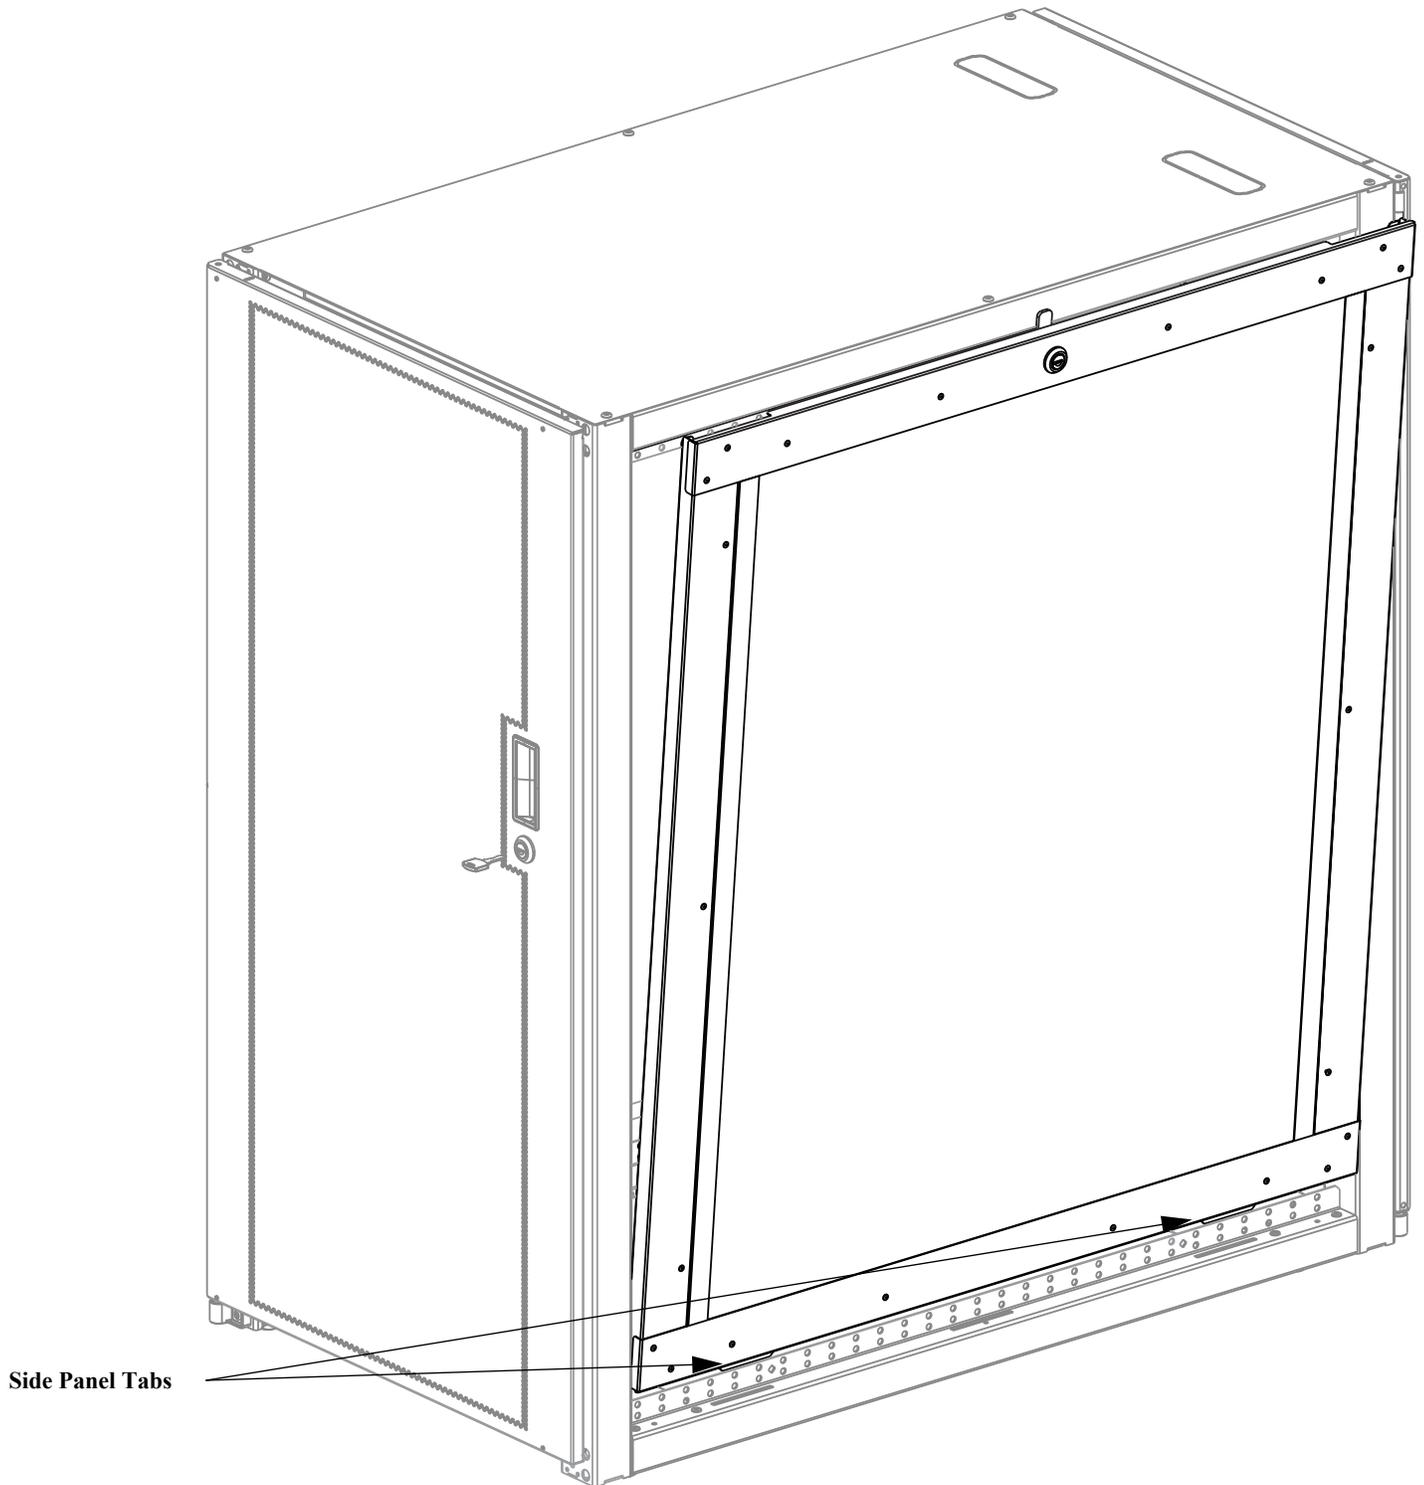

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**<sup>®</sup>  
www.panduit.com

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)  
Phone:  
866-405-6654