


### Parts

1. Valve handle cover
2. Multiple lock-out sliding piece
3. Sliding adjusting piece
4. Front extension


Figure A

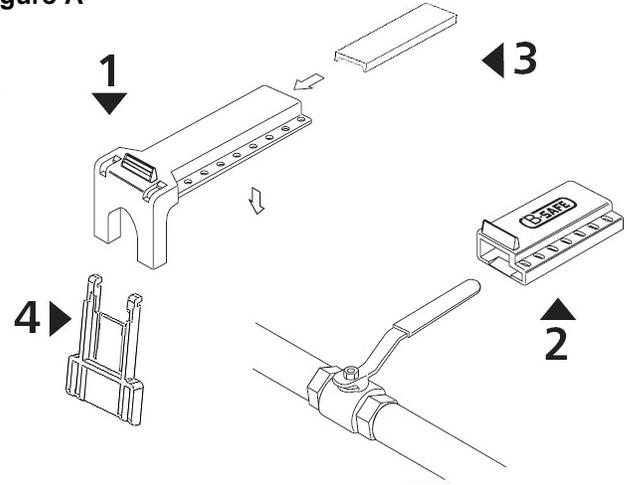

### Installation

1. Cover the valve handle with the valve handle cover (part 1).
2. For a large ball valve (2" to 3"), slide the front extension (part 4) into the front of the valve handle cover. – Figure A
3. For maximum adjustment, depending on the thickness of the valve handle, insert the sliding adjusting piece (part 3). – Figure A
4. Slide the multiple lock-out sliding piece (part 2) over parts 1 and 3.
5. Apply padlock.


Figure B

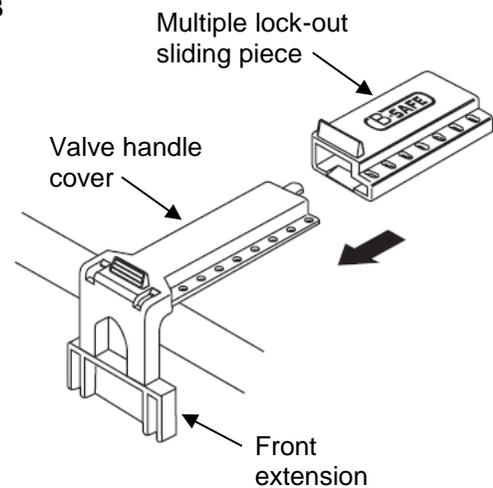

### Orientation

1. Locked valve in closed position.

Figure C

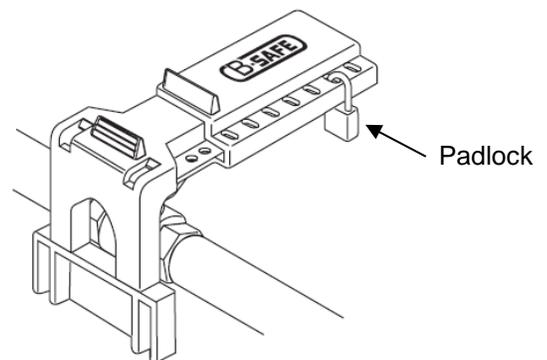

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**  
[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654