



Swing Handle Lock
Qty: 1

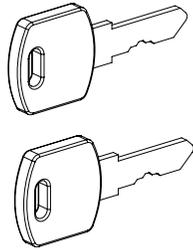

Swing Handle Lock Key
Qty: 2

Tool List:


- 10mm Hex Driver

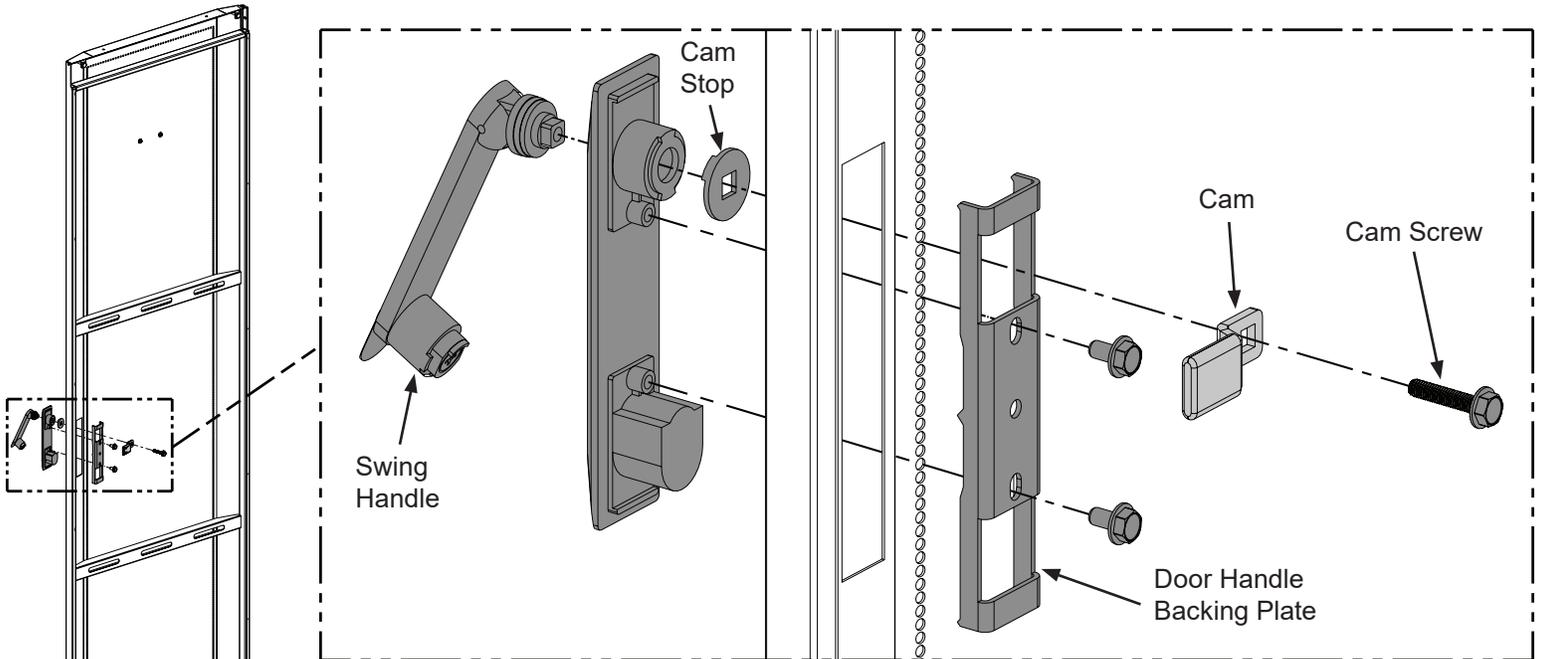

S-Type Single Hinge Door Lock Swing Handle Replacement

- Remove Cam Screw (use 10mm socket wrench), Cam Stop (**note orientation of Cam Stop**), and Cam from existing handle
- Remove Door Handle Backing Plate and remove existing door handle (use 10mm socket wrench)
- Install Swing Handle by securing Door Handle Backing Plate to Swing Handle (use 10mm socket wrench)
- Install Cam, Cam Stop, and Cam Screw (use 10mm socket wrench)
- When replacing Cam Stop, ensure that the orientation is the same as when it was removed.

Door Rods must fit behind Door Rod Guides

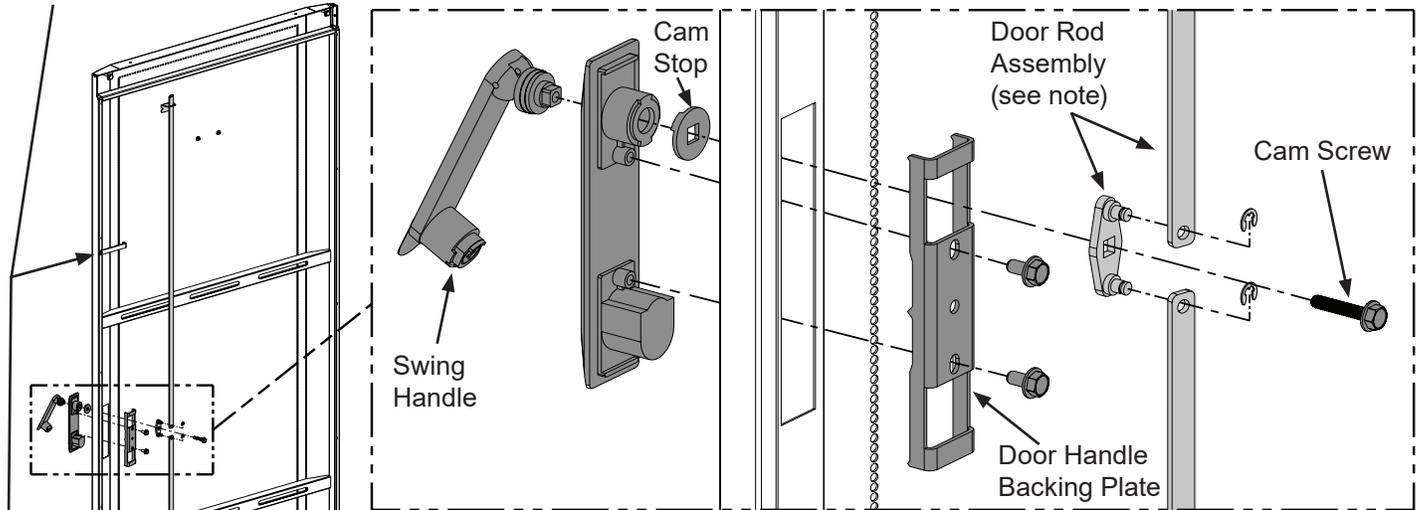


N-Type Single Hinge Door; N-Type & S-Type Solid Rear Door

Lock Swing Handle Replacement

- Remove Cam Screw (use 10mm socket wrench) and Cam Stop (note orientation of Cam Stop) from existing handle
- Remove Door Handle Backing Plate and remove existing door handle (use 10mm socket wrench)
- Install Swing Handle by securing Door Handle Backing Plate to Swing Handle with (use 10mm socket wrench)
- Install Cam Stop and Cam Screw (use 10mm socket wrench)
- Note orientation of Cam Stop
- Ensure that square cutout of Door Rod Assembly sits securely on Swing Handle
- Ensure that door rods are behind door rod guides

Note: Door Rod Assembly does not have to be disassembled. Can be maneuvered out of way to install lock.

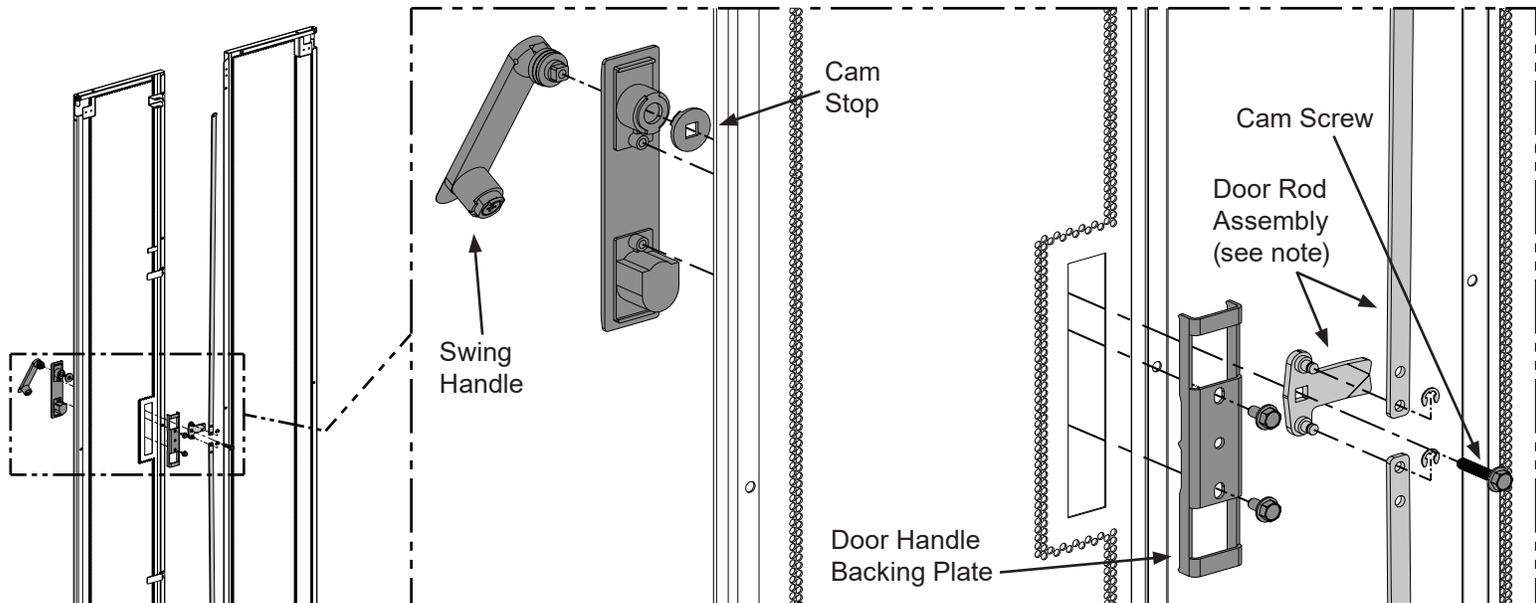

N-Type and S-Type Split Door

Combination Lock Swing Handle Replacement

- Remove Cam Screw (use 10mm socket wrench) and Cam Stop (note orientation of Cam Stop) from existing handle
- Remove Door Handle Backing Plate and remove existing door handle (use 10mm socket wrench)
- Install Swing Handle by securing Door Handle Backing Plate to Swing Handle (use 10mm socket wrench)
- Install Cam Stop and Cam Screw (use 10mm socket wrench)
- Note orientation of Cam Stop
- Ensure that square cutout of Door Rod Assembly sits securely on Lock Swing Handle

Note: Door Rod Assembly does not have to be disassembled. Can be maneuvered out of way to install lock.

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail: techsupport@panduit.com

Phone: 866-405-6654