
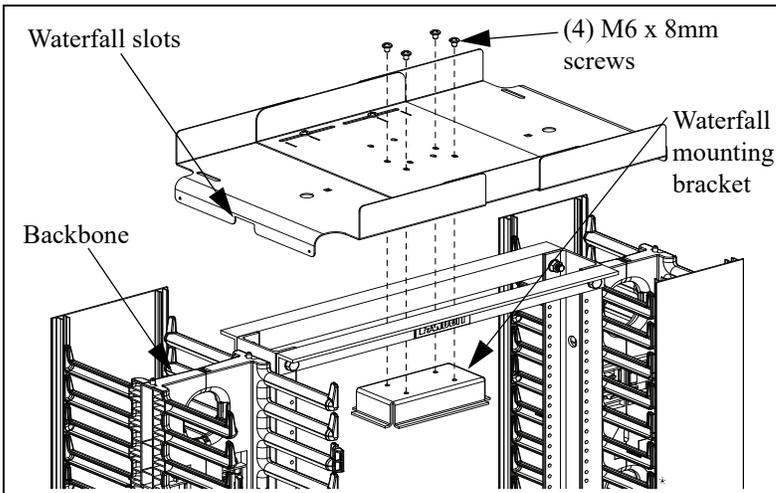


VERTICAL CABLE MANAGERS COMPATIBLE WITH WMPVWF	
FRONT/REAR	FRONT ONLY
WMPV22E	WMPVF22E
WMPV45E	WMPVF45E
WMPVHC45E	WMPVHCF45E


#### Width adjustment of WMPVWF

1. Adjust the width of the waterfall to fit your rack by loosening the (4) Phillips head screws (do not remove) and align them with the corresponding markers for your specific rack.
2. Tighten the (4) Phillips head screws.

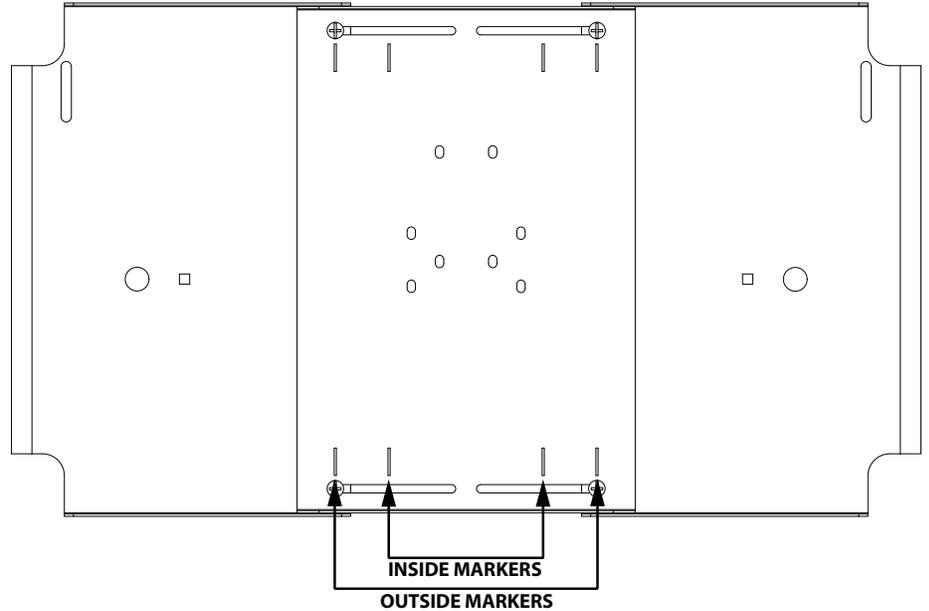


#### For R2P: Use Inside markers

1. Align waterfall slots around the backbone part of the manager as shown.
2. Place waterfall mounting bracket under rack between the top angles so that the flanges will stop the bracket. Align holes in the bracket with the holes in the waterfall.
3. Fasten components together using (4) M6 x 8mm screws.

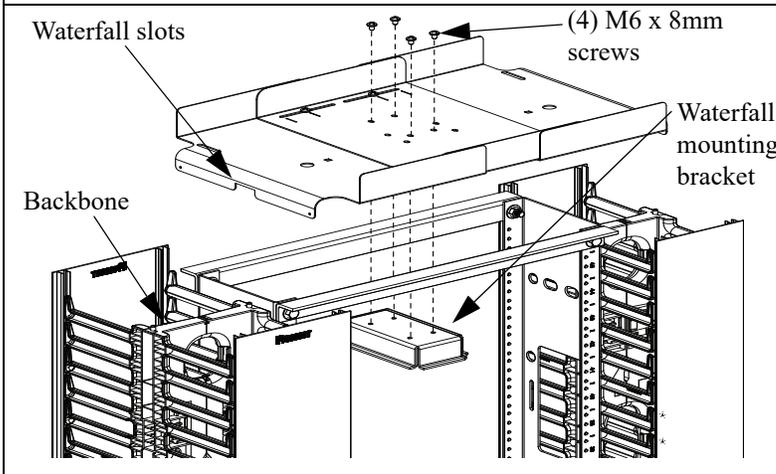


#### For R2P6S: Use Inside markers

1. Align waterfall slots around the backbone part of the manager as shown.
2. Place waterfall mounting bracket under rack between the top angles so that the flanges will stop the bracket. Align holes in the bracket with the holes in the waterfall.
3. Fasten components together using (4) M6 x 8mm screws.

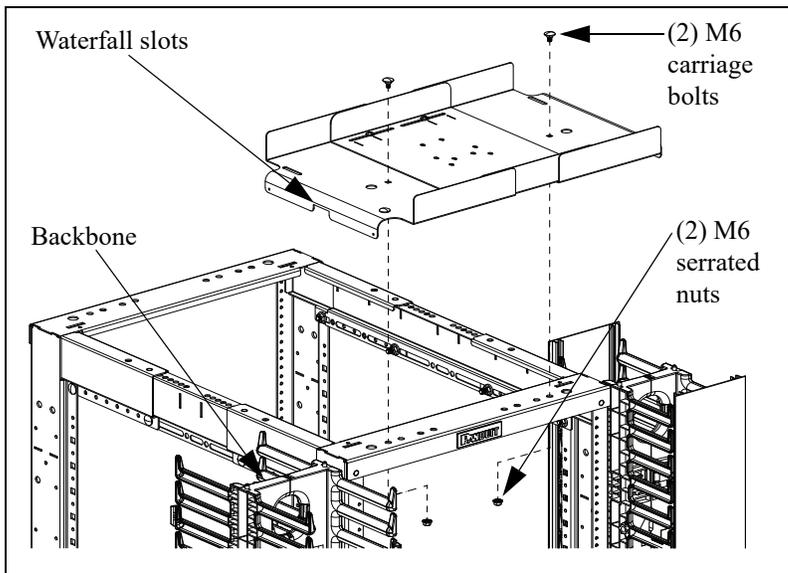**For AR4P: Use Inside markers**

1. Align waterfall slots around the backbone part of the manager as shown.
2. Align holes in waterfall with holes in rack.
3. Fasten components together using (2) M6 carriage bolts & (2) M6 serrated nuts.

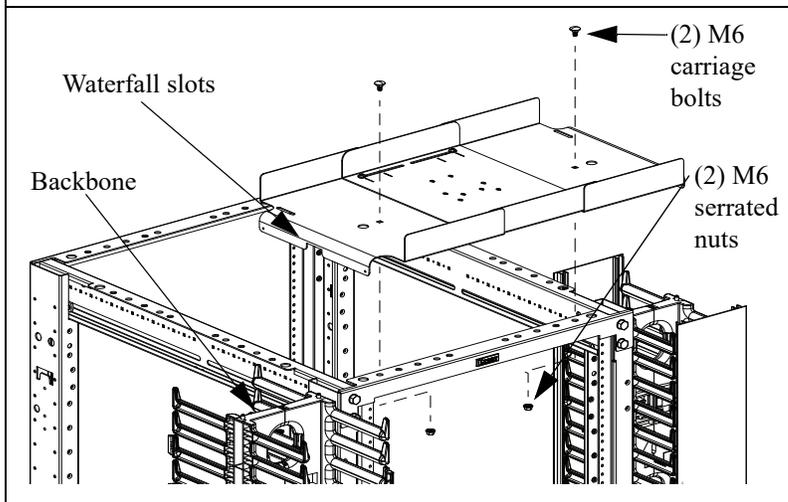**For R4P: Use Outside markers**

1. Align waterfall slots around the backbone part of the manager as shown.
2. Align holes in waterfall with holes in rack.
3. Fasten components together using (2) M6 carriage bolts & (2) M6 serrated nuts.

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**

[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654