


Ultrasonic sensor UB400-12GM-U-V1

- Analog output 0 ... 10 VMeasuring window adjustable
- Program input
- Temperature compensation

Single head system



Dimensions

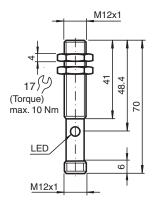

Technical Data

General specifications

Sensing range		30 400 mm
Adjustment range		50 400 mm
Dead band		0 30 mm
Standard target plate		100 mm x 100 mm
Transducer frequency		approx. 310 kHz
Response delay		approx. 50 ms
Indicators/operating means		
LED yellow		solid yellow: object in the evaluation range yellow, flashing: program function, object detected
LED red		solid red: Error red, flashing: program function, object not detected
Electrical specifications		
Operating voltage	U_B	15 30 V DC , ripple 10 %ss
No-load supply current	I ₀	≤ 30 mA
Input		
Input type		1 program input lower evaluation limit A1: -U _B +1 V, upper evaluation limit A2: +4 V +U _B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s
Output		
Output type		1 analog output 0 10 V

Technical Data

nesolution	0.17 ((((()
Deviation of the characteristic curve	± 1 % of full-scale value
Repeat accuracy	± 0.5 % of full-scale value
Load impedance	> 1 kOhm
Temperature influence	± 1.5 % of full-scale value

Compliance with standards and directives

Standard	conformity

Standards	EN IEC 60947-5-2:2020
	IEC 60947-5-2:2019
	EN 60947-5-7:2003
	IEC 60947-5-7:2003

Approvals and certificates

UL approval	cULus Listed, Class 2 Power Source
CCC approval	CCC approval / marking not required for products rated ≤36 V

Ambient conditions

Ambient temperature	-25 70 °C (-13 158 °F)
Storage temperature	-40 85 °C (-40 185 °F)

Mechanical specifications

Connection type	Connector plug M12 x 1 , 4-pin
Degree of protection	IP67
Material	
Housing	brass, nickel-plated
Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT


Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane,
Mass	25 g
Dimensions	

Length	70 mm
Diameter	12 mm

Connection Assignment

Standard symbol/Connections:

 (version U)



Core colours in accordance with EN 60947-5-2.

Connection Assignment



Ultrasonic sensor UB400-12GM-U-V1

Connection Assignment

Wire colors in accordance with EN 60947-5-2


(brown) 2 WH (white) 3 BU (blue) 4 BK (black)

Installation Conditions

If the sensor is installed at places where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing


Characteristic Curve

Characteristic response curve

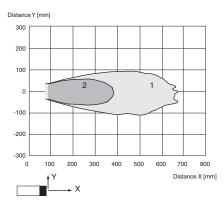

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

 Programming the analog output mode



Programming

The sensor features a programmable analog output with two programmable evaluation boundaries. Programming the evaluation boundaries and the operating mode is done by applying the supply voltage $-U_B$ or $+U_B$ to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

Evaluation boundaries may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the evaluation boundaries later, the user may specify the desired values only after a new Power

Note:

If a programming adapter UB-PROG2 is used for the programming procedure, button A1 is assigned to -U_B and button A2 is assigned to +U_B.

Programming the analog output Rising ramp

- 1. Place the target at the near end of the desired evaluation range
- 2. Program the evaluation boundary by applying $-U_B$ to the Teach-In input (yellow LED flashes)

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Release date: 2025-05-22 Date of issue: 2025-05-22 Filename: 120343_eng.pdf

Programming

- 3. Disconnect the Teach-In input from -U_B to save the evaluation boundary
- 4. Place the target at the far end of the desired evaluation range
- 5. Program the evaluation boundary by applying +U_B to the Teach-In input (yellow LED flashes)
- 6. Disconnect the Teach-In input from +U_B to save the evaluation boundary

- Falling ramp

 1. Place the target at the far end of the desired evaluation range
- 2. Program the evaluation boundary by applying -U_B to the Teach-In input (yellow LED flashes)
- 3. Disconnect the Teach-In input from - U_B to save the evaluation boundary
- 4. Place the target at the near end of the desired evaluation range
- 5. Program the evaluation boundary by applying $+U_B$ to the Teach-In input (yellow LED flashes)
- 6. Disconnect the Teach-In input from +U_B to save the evaluation boundary