


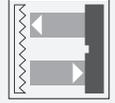

# Distance sensor (PRT)

## OMR50M-R300-IEP-V1




- Pulse Ranging Technology (PRT)
- Analog output 4 ... 20 mA
- Good alignability due to red transmission LED
- Reliable detection of reflecting metall objects



### Function

The sensors in the R300 series represent a versatile product line and adopt various functional principles. All sensors operate using proven Pulse Ranging Technology (PRT) and are characterized by high sensing ranges and detection ranges. Contained within the compact housing of the 28 series of light barriers, the R300 offers all of the properties of PRT such as maximum reliability when detecting objects and immunity against ambient light and cross-talk. To achieve this, the sensors in the R300 series make use of a number of different kinds of measurement data. What's more, the sensors are equipped with red light that is safe for the human eye as standard, making it easier to align the devices, even across expansive work areas. These features, combined with an innovative and intuitive operating concept, provide solutions for conventional automation tasks delivering the highest level of performance.

### Dimensions

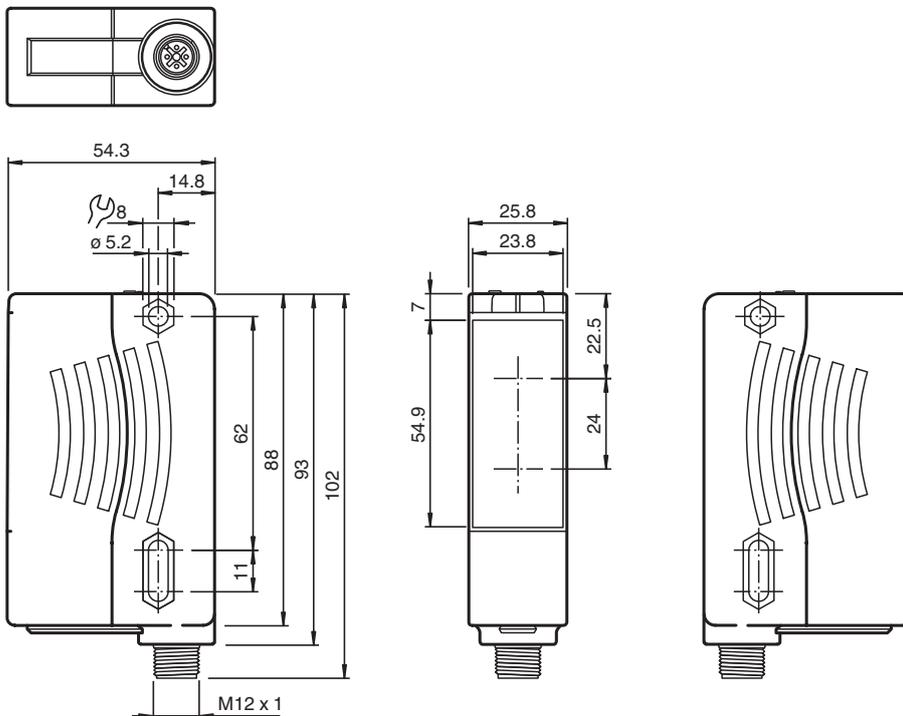

### Technical Data

#### General specifications

Effective detection range	0 ... 50 m
Reflector distance	0.2 ... 50 m

Release date: 2023-04-05 Date of issue: 2023-04-05 Filename: 297739\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**PF** PEPPERL+FUCHS

## Technical Data

Reference target	3 x REF-H100	
Light source	LED	
Light type	modulated visible red light	
LED risk group labelling	exempt group	
Angle deviation	max. $\pm 2^\circ$	
Measuring method	Pulse Ranging Technology (PRT)	
Diameter of the light spot	approx. 16 cm x 18 cm at a distance of 10 m	
Ambient light limit	50000 Lux	
Resolution	12 bit, however > 0.5 mm	
<b>Functional safety related parameters</b>		
MTTF <sub>d</sub>	100 a	
Mission Time (T <sub>M</sub> )	10 a	
Diagnostic Coverage (DC)	0 %	
<b>Indicators/operating means</b>		
Operation indicator	LED green	
Function indicator	2 LEDs yellow for switching state	
Teach-In indicator	Teach-In: LED green/yellow equiphase flashing; 2.5 Hz Teach Error: LED green/yellow non equiphase flashing; 8.0 Hz	
Control elements	5-step rotary switch for operating modes selection (threshold setting and operating modes)	
Control elements	Switch for setting the threshold values	
<b>Electrical specifications</b>		
Operating voltage	U <sub>B</sub>	10 ... 30 V DC
Ripple	10 % within the supply tolerance	
No-load supply current	I <sub>0</sub>	≤ 80 mA / 24 V DC
Time delay before availability	t <sub>v</sub>	< 0.7 s , for temperatures <-30°C compliance of the specification 5 mins after power on
<b>Output</b>		
Signal output	1 push-pull (4 in 1) output, short-circuit protected, reverse polarity protected, overvoltage protected 1 analog output 4 ... 20 mA, short-circuit/overload protected	
Switching voltage	max. 30 V DC	
Switching current	max. 100 mA	
Measurement output	1 analog output 4 ... 20 mA ; R <sub>max</sub> = 470 Ω	
Switching frequency	f	50 Hz
Response time	5 ms	
<b>Conformity</b>		
Product standard	EN 60947-5-2	
<b>Measurement accuracy</b>		
Repeat accuracy	< 5 mm	
<b>Approvals and certificates</b>		
UL approval	E87056 , cULus Listed , class 2 power supply , type rating 1	
<b>Ambient conditions</b>		
Ambient temperature	-40 ... 55 °C (-40 ... 131 °F)	
Storage temperature	-40 ... 70 °C (-40 ... 158 °F)	
<b>Mechanical specifications</b>		
Housing width	25.8 mm	
Housing height	88 mm	
Housing depth	54.3 mm	
Degree of protection	IP67	
Connection	4-pin, M12 x 1 connector	
<b>Material</b>		
Housing	Plastic ABS	
Optical face	PMMA	
Mass	90 g	


Release date: 2023-04-05 Date of issue: 2023-04-05 Filename: 297739\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group  
www.pepperl-fuchs.comUSA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.comGermany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.comSingapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**PEPPERL+FUCHS**

## Connection

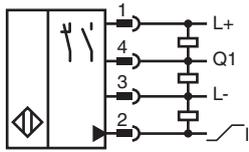


## Connection Assignment

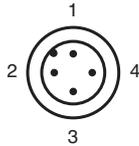

Wire colors in accordance with EN 60947-5-2


- 1 | BN (brown)
- 2 | WH (white)
- 3 | BU (blue)
- 4 | BK (black)

## Assembly

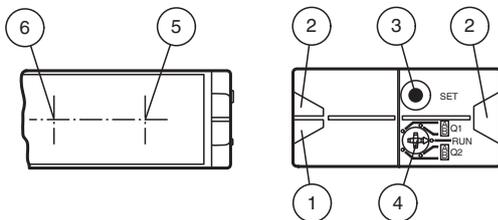

1	Operating indicator	green
2	Signal indicator	yellow
3	Teach-in push button	
4	Mode rotary switch	
5	Emitter	
6	Receiver	

## Characteristic Curve

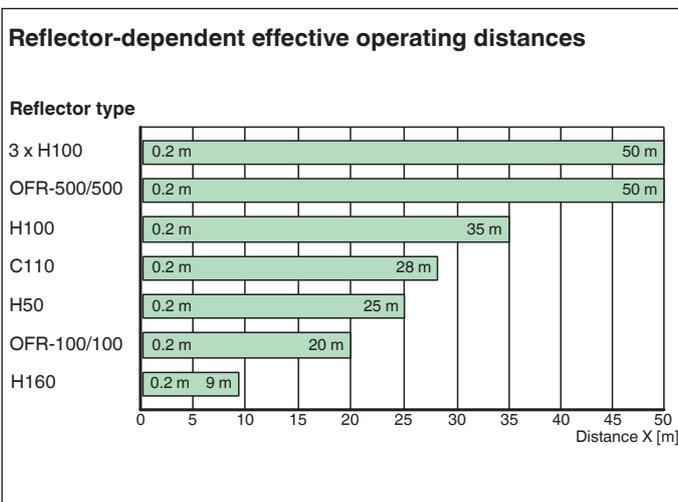

Release date: 2023-04-05 Date of issue: 2023-04-05 Filename: 297739\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

## Accessories

	<b>OMH-05</b>	Mounting aid for round steel $\varnothing$ 12 mm or sheet 1.5 mm ... 3 mm
	<b>OMH-07-01</b>	Mounting aid for round steel $\varnothing$ 12 mm or sheet 1.5 mm ... 3 mm
	<b>OMH-21</b>	Mounting bracket: mounting aid for sensors in the RL* series
	<b>OMH-22</b>	Mounting aid for RL* series
	<b>OMH-VDM28-01</b>	Metal enclosure for inserting protective panes or apertures
	<b>OMH-VDM28-02</b>	Mounting and fine adjustment device for sensors from the 28 series
	<b>OMH-RLK29-HW</b>	Mounting bracket for rear wall mounting
	<b>OMH-K01</b>	dove tail mounting clamp
	<b>OMH-K03</b>	dove tail mounting clamp
	<b>V1-G-2M-PUR</b>	Female cordset single-ended M12 straight A-coded, 4-pin, PUR cable grey
	<b>V1-W-2M-PUR</b>	Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey

## Intended Use

**Mounting instructions:**

The sensor can be mounted directly with thru-holes or by using a fixing bracket or mounting clamp (not included in the scope of delivery).

Ensure that the surface is level in order to prevent the housing from becoming distorted when the fittings are tightened. It is advisable to secure the nuts and screws to prevent the sensor from being misaligned.

**Connection:**

Connect the device as set out in the connection diagram.

**Adjustment:**

The green LED lights up when the operating voltage is applied.  
Adjust the sensor so that the light spot is on the center of the reflector.

## Installation Note

A pressure equalization membrane is fitted on the sensor nameplate.

## Settings

**Teach-in:**

Use the rotary switch for switching signal **Q1** to select the relevant switching threshold

A and/or B to teach in.

The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "SET" button until the yellow and green LEDs flash in phase (approx. 1 s). Teach-in starts when the "SET" button is released.

Successful Teach-in is indicated by the yellow and green LEDs flashing alternately (2.5 Hz). An unsuccessful Teach-in is indicated by the yellow and green LEDs rapidly flashing alternately (8 Hz).


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Different switching modes can be defined by teaching in the relevant distance data for switching thresholds A and B.

Single-point operation:

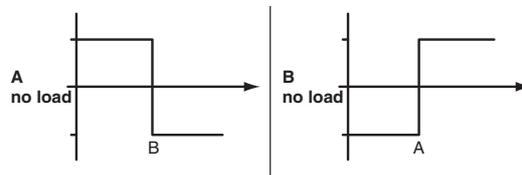

Window operation:

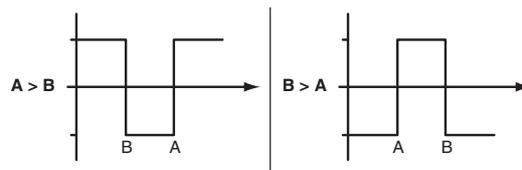


Every taught-in switching threshold can be retaught (overwritten) by pressing the "SET" button again.

A taught-in value can be reset by pressing the "SET" button for > 4 s. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed. The reset process starts when the "SET" button is released. A successful reset is indicated by the yellow and green LEDs flashing alternately (2.5 Hz). The minimum and maximum values for analog output **Q2** are taught in in the same way as for the switching output:


The following values apply: A = 4 mA  
B = 20 mA

This provides three different options for operation:

**A < B -> rising slope**

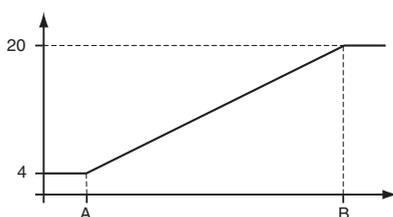

**A > B -> falling slope**

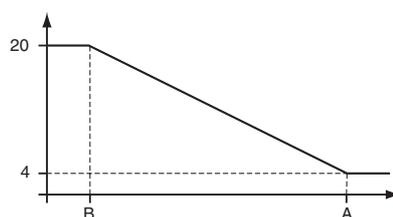

Release date: 2023-04-05 Date of issue: 2023-04-05 Filename: 297739\_eng.pdf

**Resetting to Factory Settings:**

Factory settings can be restored by pressing the "SET" button for > 10 s with the rotary switch in the "Run" position. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed. The reset starts when the "SET" button is released. The green LED lights up to indicate that the reset has completed successfully. After completing the reset, the sensor will immediately function with the factory settings.