

PHILIPS

Emergency Exit Sign

EM155C SLIM WL EXIT SIGN

legend

	Test	CCT (K)	Lumen (lm)	P (W)	
EM155C SLIM WL EXIT SIGN M3 ELP UP WH	auto	6500	10	<4W	0.646
EM155C SLIM WL EXIT SIGN M3 ELB UP WH	manual				
EM155Z SLIM WL EXIT SIGN LEGEND LEFT					
EM155Z SLIM WL EXIT SIGN LEGEND RIGHT					
EM155Z SLIM WL EXIT SIGN LEGEND DOWN					

Dimensions in mm

Inrush current


Electrical characteristics	
Inom (mA)	0.039
I max (A)	6.8
Tref (µs)	15
Luminaires	
MCB	Max.
B-10 A	125
B-13 A	163
B-16 A	201
C-10 A	179
C-13 A	233
C-16 A	287

ATTENTION
OBSERVE PRECAUTIONS FOR HANDLING
ELECTROSTATIC SENSITIVE DEVICES


- The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- When the light source reaches its end of life the whole luminaire shall be replaced.
- Clean with dry cloth.
- Philips Lighting warranty is applicable only if the indicated drivers are used.

912401483514 (EM155C SLIM WL EXIT SIGN M3 ELP UP WH)
 912401483515 (EM155C SLIM WL EXIT SIGN M3 ELB UP WH)
 912401483516 (EM155Z SLIM WL EXIT SIGN LEGEND LEFT)
 912401483517 (EM155Z SLIM WL EXIT SIGN LEGEND RIGHT)
 912401483518 (EM155Z SLIM WL EXIT SIGN LEGEND DOWN)
 © 7 / 2018, Philips Lighting Holding B.V. All rights reserved



ALWAYS SWITCH OFF THE MAINS SUPPLY BEFORE INSTALLATION OR SERVICING

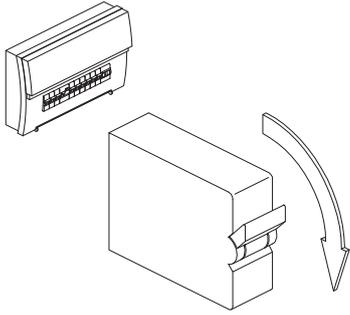


1

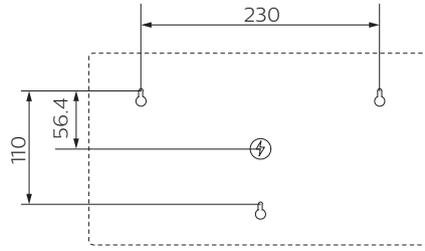


2

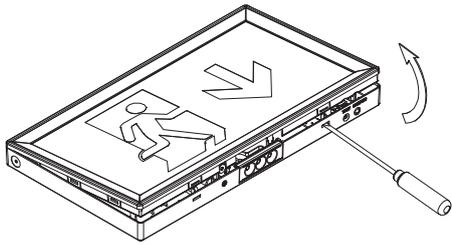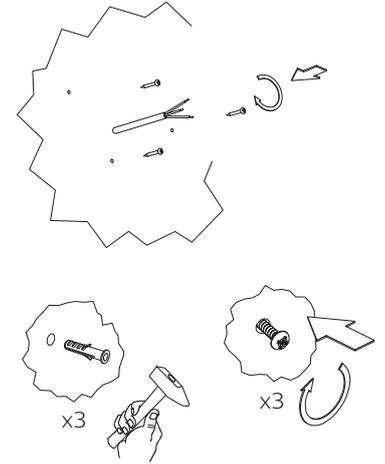



As there's no screw fixing for front cover but clip-on, could be no need torque value

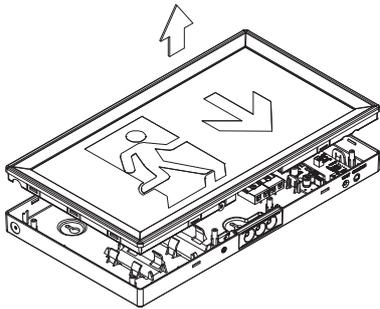

3

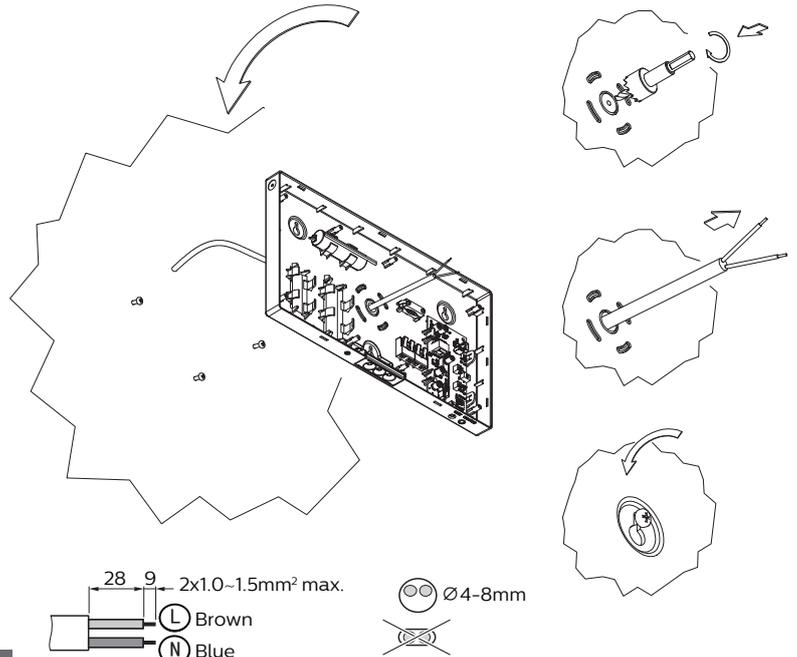

4

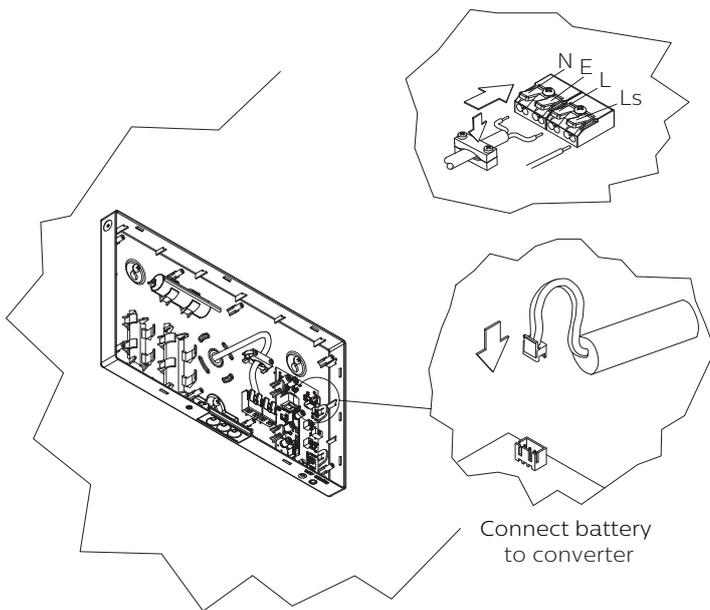 

Connect battery to converter

EMERGENCY TERMINATIONS

LUMINAIRE

Brown (Ls) →
Brown (L) →
(E) →
Blue (N) →

MAINS SUPPLY





SWITCHED SUPPLY
UNSWITCHED SUPPLY
For continuity of termination of CPC
NEUTRAL







Duration

	8H	3H	3H	1H
1	off	off	on	on
2	off	on	off	on

5

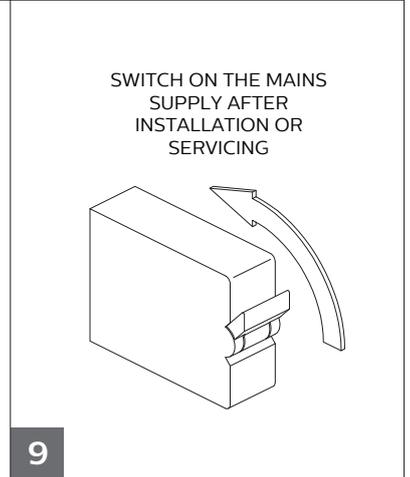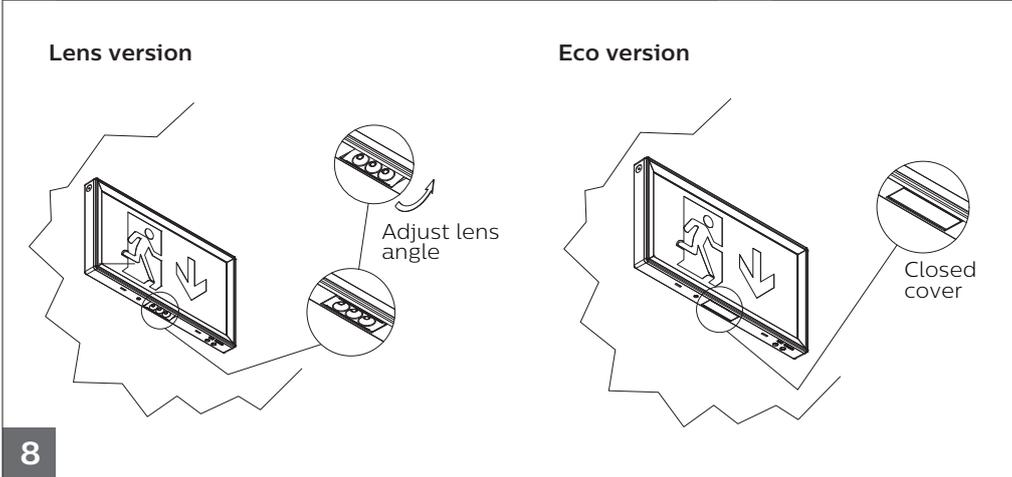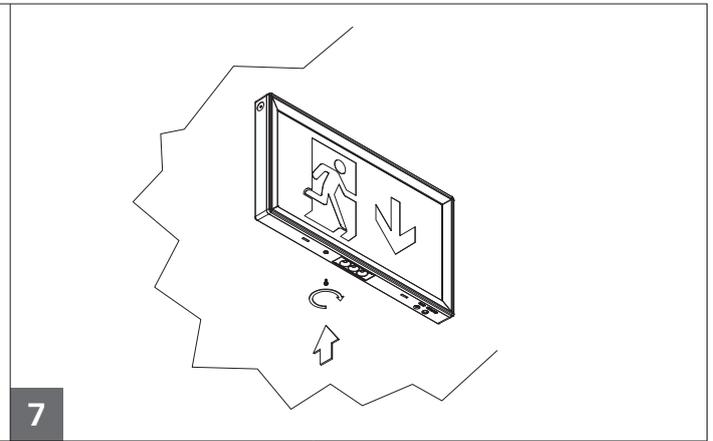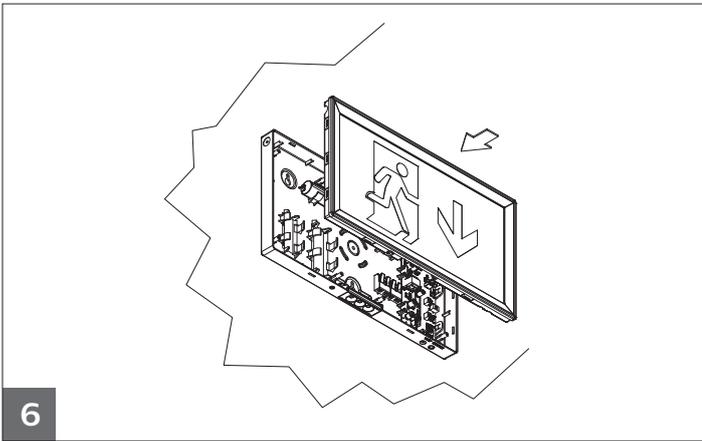


Pictogram Replacement

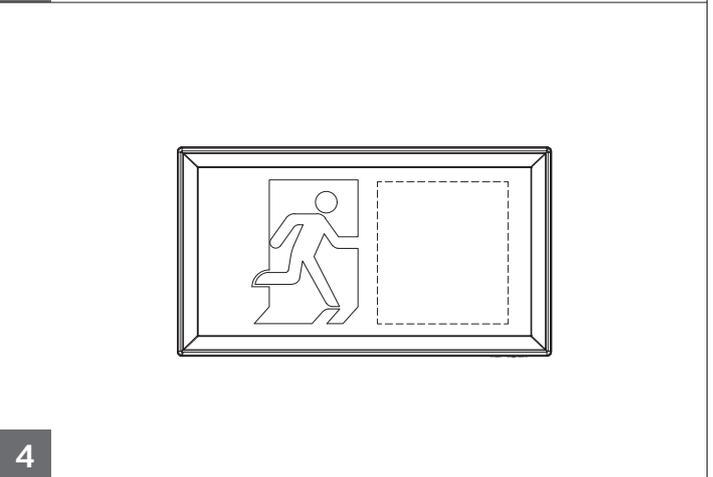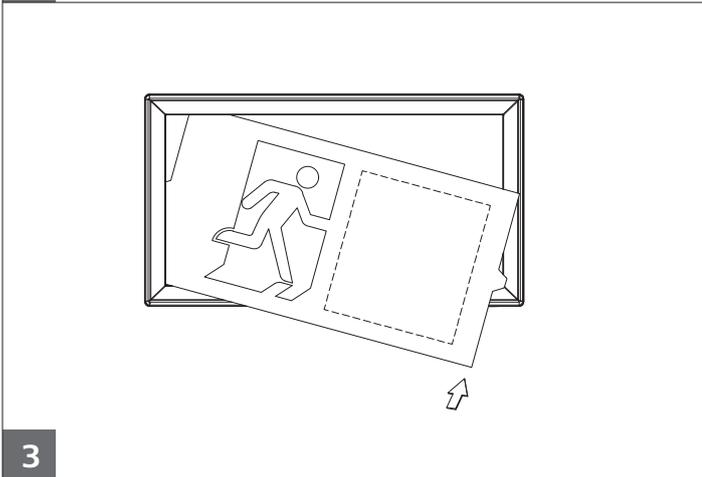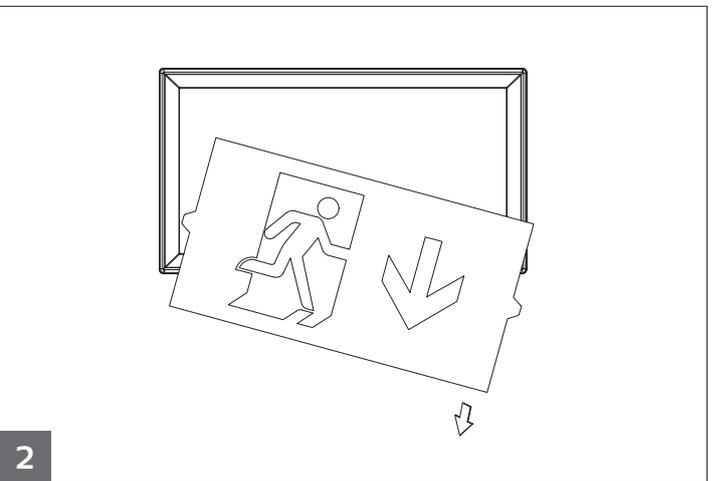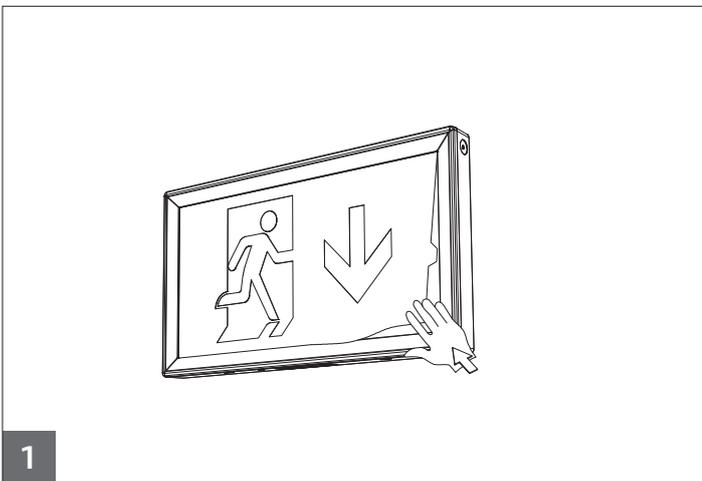


Battery replacement


LiFePO₄ -18650-1500mAh-3.2V

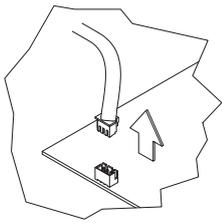


Disconnect battery to converter

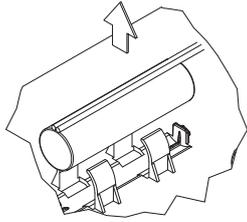

Remove the battery

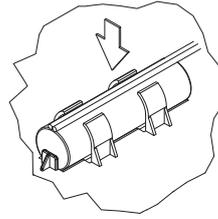


Replace the battery

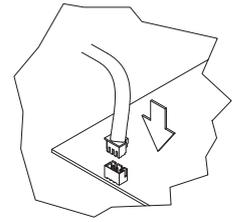


Connect battery to converter

Luminous Intensity Distribution

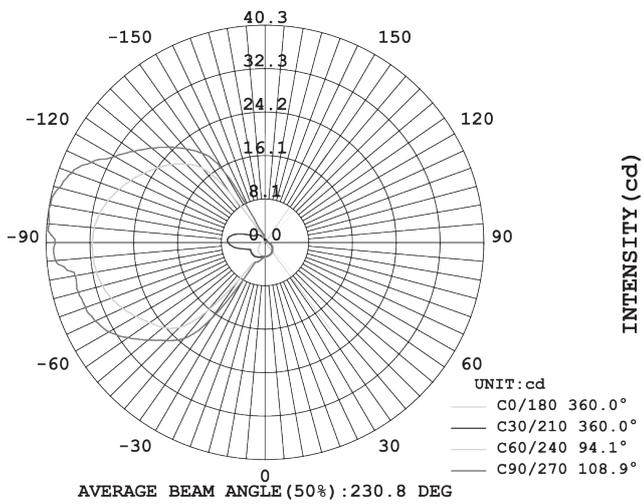

Viewing Distance

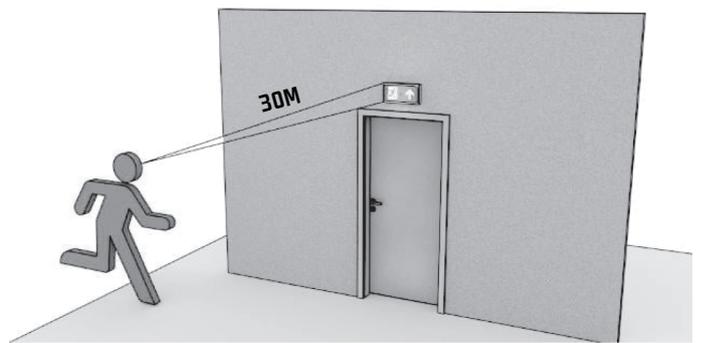



1. For indoor use only.
2. The luminaire complies with IEC60598-1/IEC 60598-2-22.
The luminaire must be installed by a qualified electrician and wired in accordance with the latest IEE Electrical regulations or the national requirements.
3. Turn off the power supply before checking, installation, maintenance or moving.
4. Do not switch on before complete installation.
5. Batteries shall only be replaced by the manufacturer or his service agent or a similar qualified person.
6. Batteries should be replaced when the luminaire no longer meets the 3 hours duration performance.
7. Product mains surge immunity is 0.5/1KV (diff. / comm. mode). To prevent excessive currents and voltages from damaging the device, make sure that the power supply input is equipped with additional protection devices such as surge protectors. For any questions regarding the product's surge protection, please consult the manufacturer's professional.



Please inform yourself about the local waste disposal, separation and collection system for electrical and electronic products and packaging. Please act according to your local rules and do not dispose your old product and packaging with your normal household waste. The correct disposal of the packaging, your product and/or batteries will help prevent potential negative consequences for the environment and human health. Batteries should be disposed separately from the municipal waste stream via designated collection facilities. When disposing a product that contains non-user replaceable batteries, the non-user replaceable batteries shall be removed by a professional.

Testing Record

Product: _____ Location: _____ Installation Date: _____

Month	Functional/Duration	Year 1	Year 2	Year 3	Year 4	Year 5
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						
11						
12						

Emergency Exit Sign

Specifications For Self Test

Function Test

The function test is conducted every month for 3 minutes to check whether the battery connection is abnormal and discharge the battery and the connection of LED module.

Duration Test

An initial duration test is conducted when the battery is connected to the controller for the first time and connected to mains, but after 24 hours charging.

The yearly duration test is conducted for 3 hours on one day within the 300th day to the 365th day every year. It will also check the connection of battery and LED module.

Description corresponding to the color and status of the charge indicator

Charge Indicator Color	Status	On Time (Seconds)	Off Time (Seconds)	Description
Green	 Permanent on	/	/	Normal status when mains connected
	 Slow flash	1s	1s	Duration test running
	 Fast flash	0.2s	0.2s	Function test running
	 Normal flash three times only	0.5s	0.5s	Time reset
Red	 Permanent on	/	/	Battery connection is abnormal or failure
	 Slow flash	1s	1s	Lamp connection is abnormal or failure
	 Fast flash	0.2s	0.2s	Duration failure - the capacity of the battery is insufficient
Both Off	 Off	/	/	Emergency mode

Failure indication status should be checked and rectified as soon as possible.

Test button for manual inspection on function test or duration test mode of operation

Duration	Description
Press for <2s	Simulate emergency mode.
Press for 3-5s	Start duration test manually. The test can be aborted by pressing off (1-2s). * Must be conducted when the initial duration test finished and after another 24 hours battery charging.
Press for 5-8s	Start Function test manually for 60s. The test can be aborted by pressing off (1-2s).
Press for >10s	Time Reset.

Note:

When the mains is on, the green indicator will be permanently on. It will check the connection of battery and the connection of LED module. If it is a non-maintained fitting, the connection of LED module no need to be checked. When the mains is off, no test will perform.

The luminaires on which we want to perform the function and duration tests must be connected to the mains supply for at least 24 uninterrupted hours. If the mains is off during these tests, the tests will be postponed for 3 days.

When the fault is corrected, the indicator will only be reset to its normal status after mains reconnected or test switch pressed.

An accuracy of the timing of the test interval is ensured that it has an accuracy of ± 75 s per week. The timing function will be retained through periods of mains supply failure or interruption for up to 7 days.