






S1A4559114

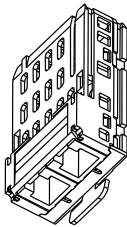


VW3A3601 / VW3A3608
VW3A3616 / VW3A3627
VW3A3619 / VW3A3647

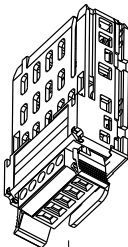

VW3A3609
VW3A3628
VW3A3725
VW3A3726
VW3M3301

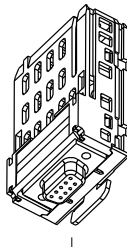

VW3A3607
VW3A3618

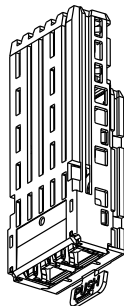

VW3A3720
VW3A3721
VW3M3308
VW3A3530D

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this equipment.
- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not deenergize all circuits.
- Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Before performing work and/or applying voltage on the equipment, follow the instructions given in the appropriate installation manual.

Failure to follow these instructions will result in death or serious injury.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this product.
© 2025 Schneider Electric. All Rights Reserved.



MANUFACTURER
Schneider Electric Industries SAS
35 rue Joseph Monier
Rueil Malmaison 92500 France

UK REPRESENTATIVE
Schneider Electric Limited
Stafford Park 5
Telford, TF3 3BL United Kingdom



Опция для продуктов Altivar и Altistart.
Пожалуйста, обратитесь к сообщению о преобразователе частоты EAC / программному сартере в приложении к началу работы, размещенном на веб-сайте производителя. Авторизованный поставщик в Республике Казахстан:
ТОО «Шнейдер Электрик»
Адрес: 050010, РК, г. Алматы, пр. Достык, 38, бизнес-центр «Кен Дала», 5 этаж, левое крыло.
Тел.: +7 (727) 339 23 57
Номер службы поддержки клиентов:
Тел.: +7 (727) 339 24 52

Altivar және Altistart өніміне арналған опция.
Өндірушінің веб-сайтында орналастырылған «Жұмысқа кірісу» қосымшасындағы EAC жиілік инвертер / бірқалыпты іске қосу құрылғысы хабарламасына сілтеме жасауыңызды сұраймыз.
Қазақстан Республикасындағы уәкілетті жеткізуші:
ЖШС «Шнейдер Электрик»
Мекен-жайы: 050010, ҚР, Алматы қаласы, Достық даңғылы, 38, «Кең дала» бизнес орталығы, 5-қабат, сол қанат.
тел.: +7 (727) 339 23 57
Клиенттерге қызмет көрсету нөмірі:
тел.: +7 (727) 339 24 52

Option Module	Lexium	Altivar Machine				Altivar Process	Altivar Soft Starter		Altivar HVAC	MV Drive
	LXM 32	ATV 32	ATV320	ATV340 ⁽¹⁾	ATV600 ⁽²⁾	ATV900	ATS480	ATS490	ATH200	ATV6000
Drive/Soft Starter version ≥ (Option Module version ≥)										
VW3A3601 EtherCAT	V14IE06 (V11IE08)	V12IE03 (V11IE08)	V2.7IE23 (V19IE09)	V1.1IE02 (V11IE01)		V12IE02 (V18IE05)				✓
VW3A3607 PROFIBUS DP	V10IE03 (V13IE01)	V11IE01 (V15IE01)	V2.7IE23 (V112IE01)	V1.1IE02 (V12IE01)	V11IE01 (V19IE01)	V11IE01 (V110IE01)	V11IE01 (V118IE08)	V11IE01 (V118IE08)		✓
VW3A3608 VW3A3618 VW3A3628 CANopen	V10IE03 (✓)	V12IE03 (V11IE01)	V2.7IE23 (V11IE01)	V1.1IE02 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)		✓
VW3A3609 DeviceNet		V11IE01 (V11IE01)	V2.7IE23 (V18IE01)	V1.1IE02 (V18IE01)	V11IE01 (V15IE05)	V11IE01 (V15IE05)				✓
VW3A3616 Ethernet TCP/IP	V10IE03 (V11IE31)	V11IE01 (V12IE01)	V2.7IE23 (V1EIE01)							
VW3A3619 POWERLINK		V15IE08 (V10IE08)	V2.7IE23 (V10IE08)	V15IE10 (V11IE04)	V2.2IE24 (V11IE04)	V18IE14 (V11IE04)				
VW3A3627 PROFINET		V18IE11 (V10IE15)	V2.7IE23 (V16IE01)	V1.1IE02 (V16IE01)	V11IE01 (V13IE01)	V11IE01 (V13IE01)				✓
VW3A3647 PROFINET + S2 Redundancy			V3.9IE60 (V3.2IE12)	V4.2IE36 (V3.2IE12)	V3.8IE42 (V3.1IE10)	V3.9IE36 (V3.1IE10)	V12IE03 (V3.2IE12)	V12IE03 (V3.2IE12)		✓

(1) Fieldbus modules can not be used on the ATV340***NS and ATV340***NE ≤ 22kW. For more information, see the ATV340 Installation Manual (NVE61069).

(2) ATV610 is compatible only with VW3A3607 PROFIBUS DP fieldbus module.

Option Module	Lexium	Altivar Machine				Altivar Process		Altivar Soft Starter		Altivar HVAC	MV Drive
	LXM32	ATV32	ATV320	ATV340 ⁽¹⁾	ATV600 ⁽²⁾	ATV900	ATS480	ATS490	ATH200	ATV6000	
Drive/Soft Starter version ≥ (Option Module version ≥)											
VW3A3720 Ethernet IP/ Modbus TCP					V15IE11 (V18IE12) (3)		V11IE01 (V2.1IE00)				
VW3A3721 Ethernet IP/ Modbus TCP + MultiDrive Link					V16IE12 (V18IE13) (3)						
VW3A3725 BACnet MS/TP					V17IE16 (V11IE●●)						
VW3A3726 BACnet IP										V10 (V1.0IE01)	
VW3M3301 DeviceNet	≥V10IE03 ≤V120IE05 (V10)										
VW3M3308 PROFINET	V124IE03 (V10IE11)										
VW3A3530D ATV dPAC Module					For the Altivar Firmware Version, contact your Schneider Electric Customer Care Center on www.se.com/CCC						


(1) Fieldbus modules can not be used on the ATV340...N4S and ATV340...N4E ≤ 22kW. For more information, see the ATV340 Installation Manual (NVE61069).

(2) ATV610 is compatible only with VW3A3807 PROFINET DP Fieldbus module.


(3) Drive version ≥ V2.2IE24 is only compatible with module version ≥ V1.15IE18.


ATV320 ATV32

Mounting

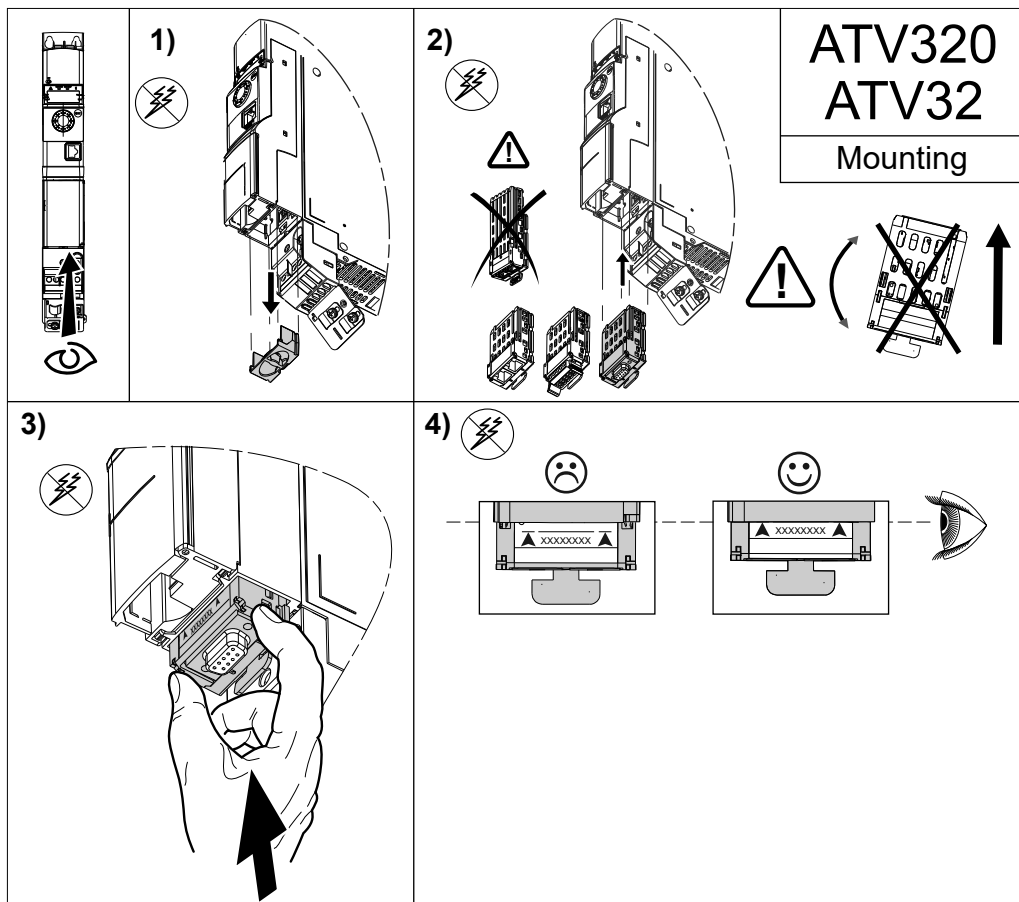

Removing

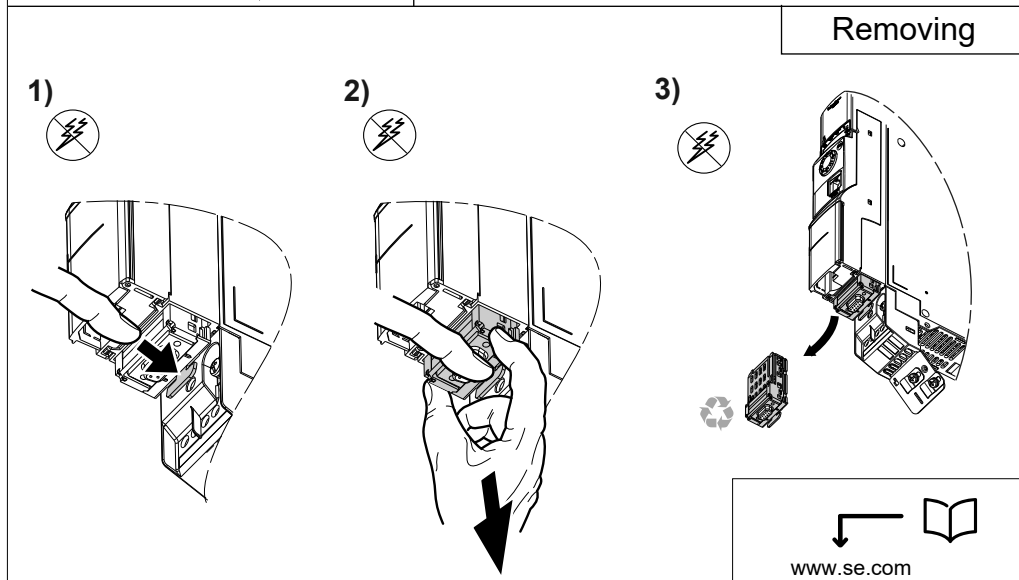

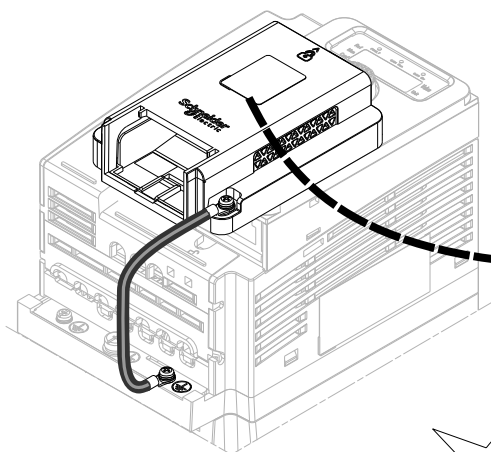





ATV320 ATH200 Mounting





NVE22661



VW3A3600

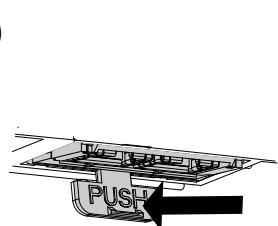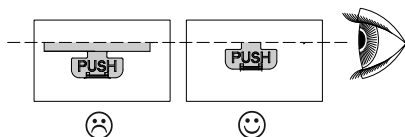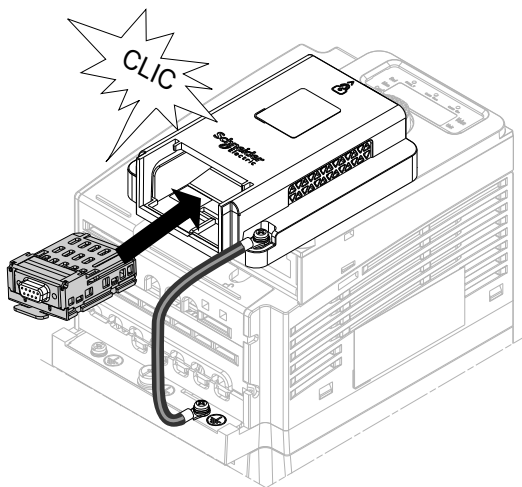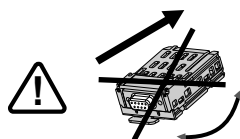


Removing

 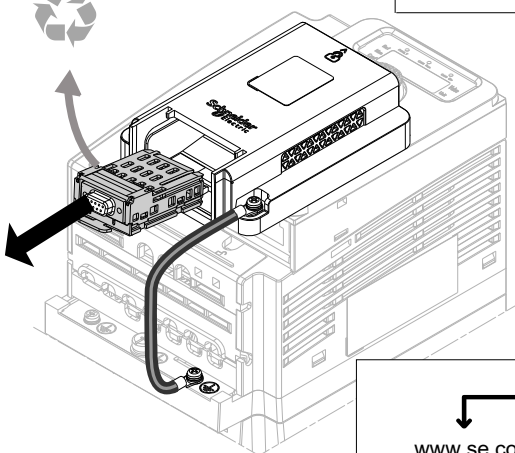

www.se.com


1

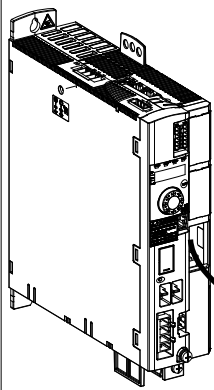

Slot 1

Slot 2 ☹

Slot 3 😊

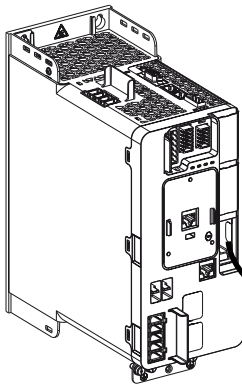

LXM32 ATV340


 
Mounting

GP-SF ☹



GP-ENC ☹

GP-FB 😊


2

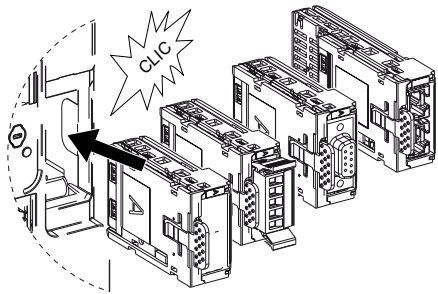


3

  


4

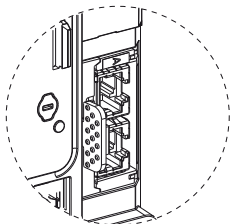


1

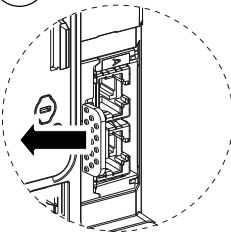

2

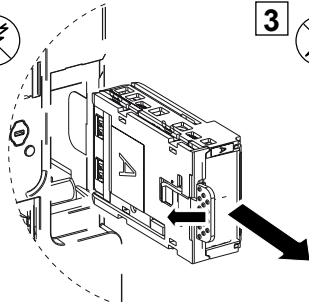

3

 


Removing




www.se.com




1) 

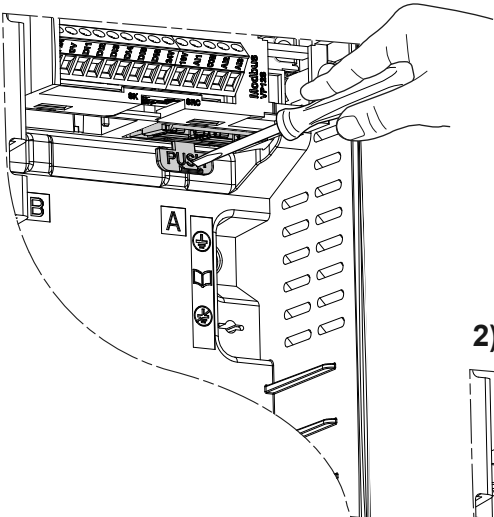


2) 

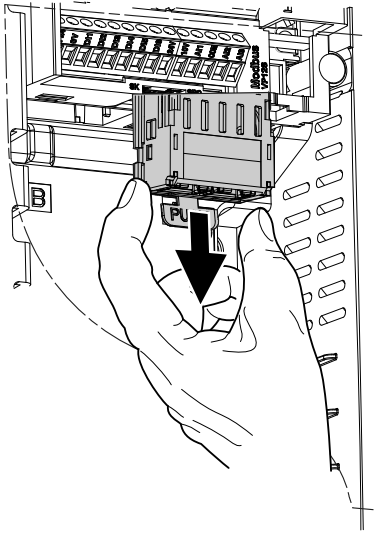






3) 

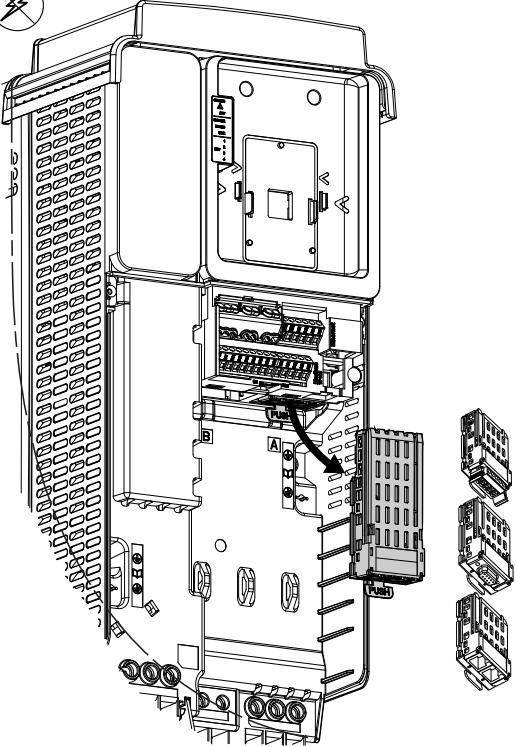


ATS480

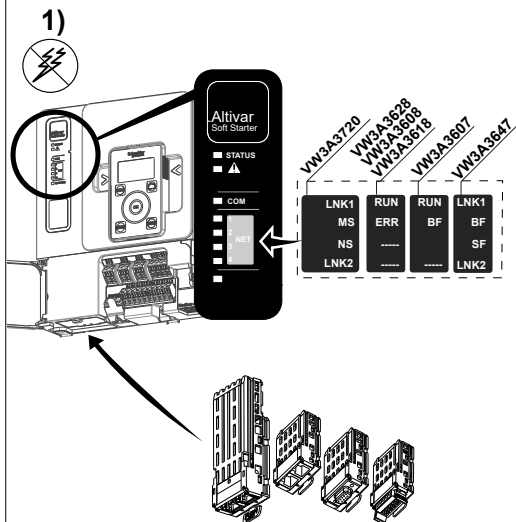



ATS490

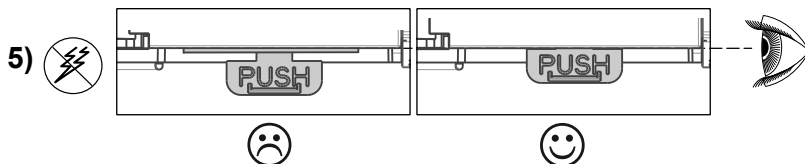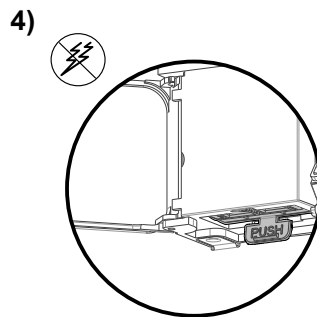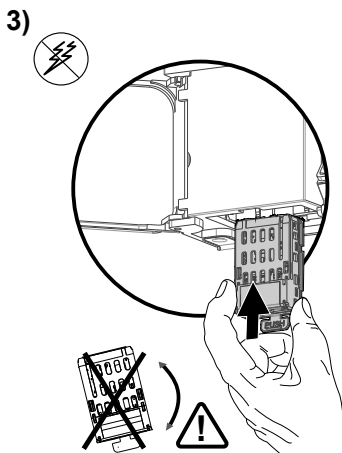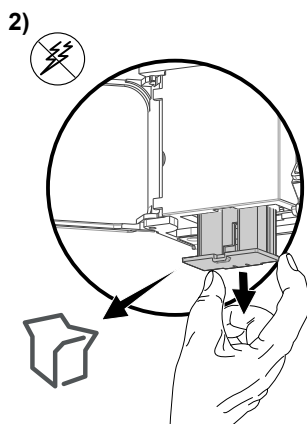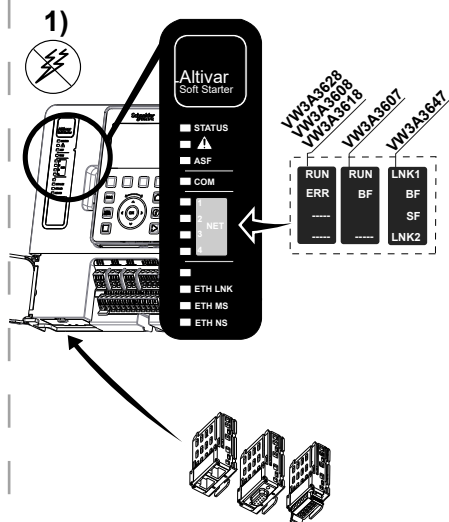

1)

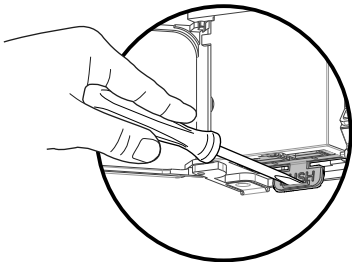

2)

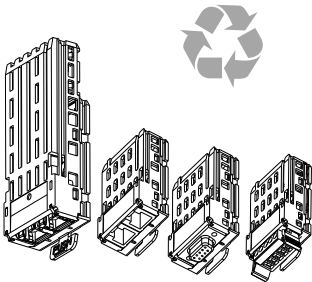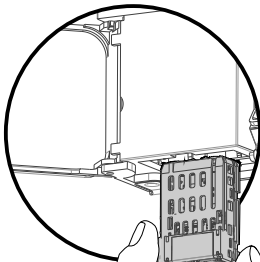

3)

