 
 





S1A4559116

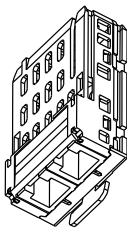


VW3A3601 / VW3A3608
VW3A3616 / VW3A3619
VW3A3627 / VW3A3647
VW3A3726 / VW3A3727

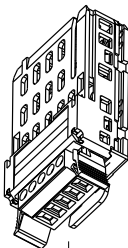

 VW3A3609
VW3A3628
VW3A3725
VW3M3301

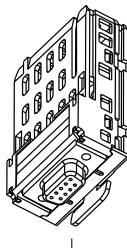

VW3A3607
VW3A3618

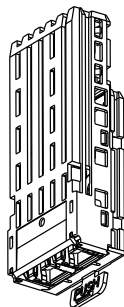 

VW3A3720
VW3A3721
VW3M3308
VW3A3530D

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this equipment.
- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not deenergize all circuits.
- Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Before performing work and/or applying voltage on the equipment, follow the instructions given in the appropriate installation manual.

Failure to follow these instructions will result in death or serious injury.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this product. © 2026 Schneider Electric. All Rights Reserved.



MANUFACTURER
Schneider Electric Industries SAS
1884 Boulevard de la Défense
92000 Nanterre France

UK REPRESENTATIVE
Schneider Electric Limited
Stafford Park 5
Telford, TF3 3BL United Kingdom



Опция для продуктов Altivar и Altistart. Пожалуйста, обратитесь к сообщению о преобразователе частоты EAC / программному сартере в приложении к началу работы, размещенном на веб-сайте производителя. Авторизованный поставщик в Республике Казахстан:

ТОО «Шнейдер Электрик»
Адрес: 050010, РК, г. Алматы, пр. Достык, 38, бизнес-центр «Кен Дала», 5 этаж, левое крыло.
Тел.: +7 (727) 339 23 57
Номер службы поддержки клиентов:
Тел.: +7 (727) 339 24 52

Altivar және Altistart өніміне арналған опция. Өндірушінің веб-сайтында орналастырылған «Жұмысқа кірісу» қосымшасындағы EAC жиілік инвертер / бірқалыпты іске қосу құрылғысы хабарламасына сілтеме жасауыңызды сұраймыз. Қазақстан Республикасындағы уәкілетті жеткізуші: ЖШС «Шнейдер Электрик»
Мекен-жайы: 050010, ҚР, Алматы қаласы, Достық даңғылы, 38, «Кең дала» бизнес орталығы, 5-қабат, сол қанат.
тел.: +7 (727) 339 23 57
Клиенттерге қызмет көрсету нөмірі:
тел.: +7 (727) 339 24 52

Option Module	Lexium	Altivar Machine			Altivar Process	Altivar Soft Starter		Altivar HVAC	MV Drive		
	LXM32	ATV32	ATV320	ATV340 (1)	ATV600 (2)	ATV900	ATS480	ATS490	ATH200	ATH600	ATV6000
Drive/Soft Starter version ≥ (Option Module version ≥)											
VW3A3601 EtherCAT	V14IE06 (V11IE08)	V12IE03 (V11IE08)	V2.7IE23 (V19IE09)	V11IE02 (V11IE01)		V12IE02 (V18IE05)					✓
VW3A3607 PROFIBUS DP	V10IE03 (V13IE01)	V11IE01 (V15IE01)	V2.7IE23 (V12IE01)	V11IE02 (V112IE01)	V11IE01 (V19IE01)	V11IE01 (V110IE01)	V11IE01 (V116IE08)	V11IE01 (V116IE08)			✓
VW3A3608 VW3A3618 VW3A3628 CANopen	V10IE03 (✓)	V12IE03 (V11IE01)	V2.7IE23 (V11IE01)	V11IE02 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)	V11IE01 (V11IE01)			✓
VW3A3609 DeviceNet		V11IE01 (V11IE01)	V2.7IE23 (V18IE01)	V11IE02 (V18IE01)	V11IE01 (V15IE05)	V11IE01 (V15IE05)					✓
VW3A3616 Ethernet TCP/IP	V10IE03 (V11IE31)	V11IE01 (V12IE01)	V2.7IE23 (V1EIE01)								
VW3A3619 POWERLINK		V15IE08 (V10IE08)	V2.7IE23 (V10IE08)	V15IE10 (V11IE04)	V22IE24 (V11IE04)	V18IE14 (V11IE04)					
VW3A3627 PROFINET		V18IE11 (V10IE15)	V2.7IE23 (V16IE01)	V11IE02 (V16IE01)	V11IE01 (V13IE01)	V11IE01 (V13IE01)					✓
VW3A3647 PROFINET + S2 Redundancy			V3.9IE50 (V3.2IE12)	V4.2IE36 (V3.2IE12)	V3.8IE42 (V3.1IE10)	V3.9IE36 (V3.1IE10)	V12IE03 (V3.2IE12)	V12IE03 (V3.2IE12)		V1.2IE04 (V3.2IE16)	✓

(1) Fieldbus modules can not be used on the ATV340***N4S and ATV340***N4E ≤ 22kW. For more information, see the ATV340 Installation Manual (NVE61089).




(2) ATV610 is compatible only with VW3A3607 PROFIBUS DP fieldbus module.

Option Module	Lexium	Altivar Machine			Altivar Process		Altivar Soft Starter		Altivar HVAC		MV Drive
	LXM32	ATV 32	ATV320	ATV340 ⁽¹⁾	ATV600 ⁽²⁾	ATV900	ATS480	ATS490	ATH200	ATH600	ATV6000
Drive/Soft Starter version ≥ (Option Module version ≥)											
VW3A3720 Ethernet IP/ Modbus TCP				V1.5IE11 (V1.8IE12) (3)		V1.1IE01 (V2.1IE00)				V1.2IE04 (V2.6IE46)	
VW3A3721 Ethernet IP/ Modbus TCP + MultiDrive Link				V1.6IE12 (V1.8IE13) (3)							
VW3A3725 BA Cnet MS/TP				V1.7IE16 (V1.1IE●●)							
VW3A3726 BA Cnet IP									V1.0IE00 (V1.0IE07)	V1.1IE02 (V1.0IE07)	
VW3A3727 PROFINET			V4.1IE51 (V1.0IE01)								
VW3M3301 DeviceNet	≥ V10IE03 ≤ V120IE05 (V10)										
VW3M3308 PROFINET	V1.24IE03 (V1.0IE11)										
VW3A3550D ATV dPAC Module				For the Altivar Firmware Version, contact your Schneider Electric Customer Care Center on www.se.com/CCC							

(1) Fieldbus modules can not be used on the ATV340...N4S and ATV340...N5E ≤ 22kW. For more information, see the ATV340 Installation Manual (NVE61069).

(2) ATV610 is compatible only with VW3A3607 PROFINET DP fieldbus module.

   
(3) Drive version ≥ V2.2IE24 is only compatible with module version ≥ V1.15IE18.

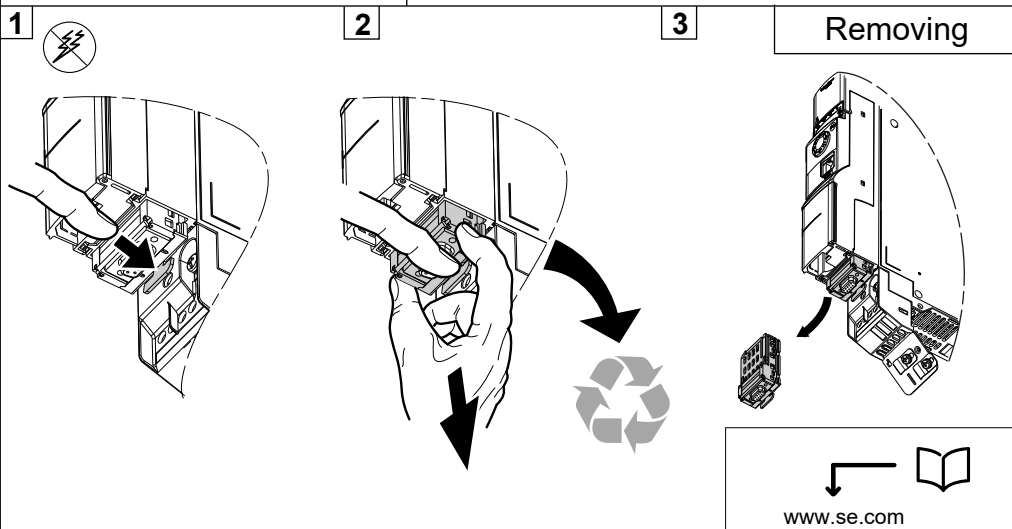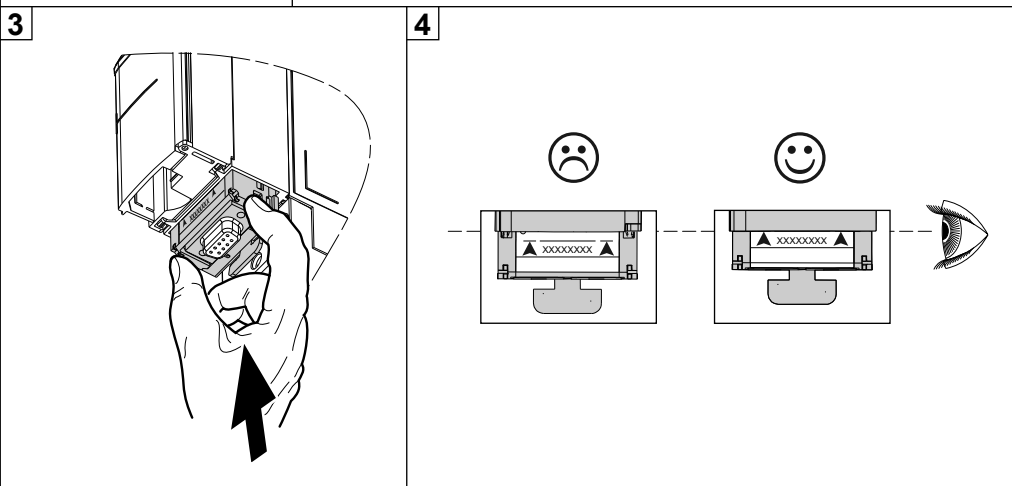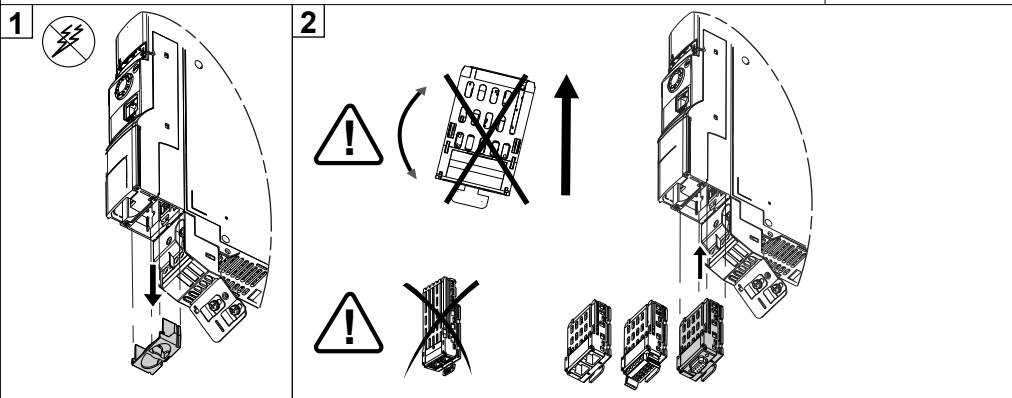

ATV320, ATH200, ATH600*

Mounting


 
*ATH630U07N4●...ATH630D18N4●

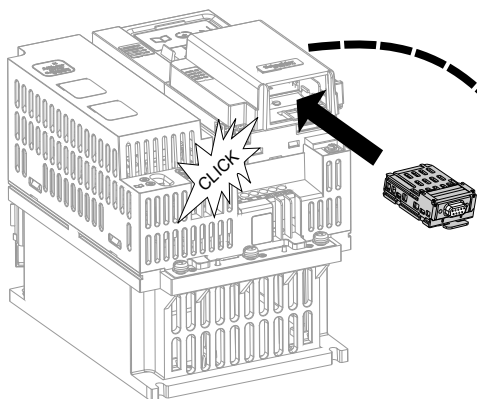


NVE22661: ATV320, ATH200
JPS84158: ATH600







 
 
VW3A3600: ATV320, ATH200
VW3A36001: ATH600

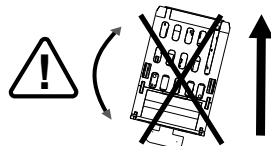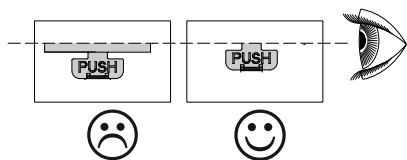

Removing

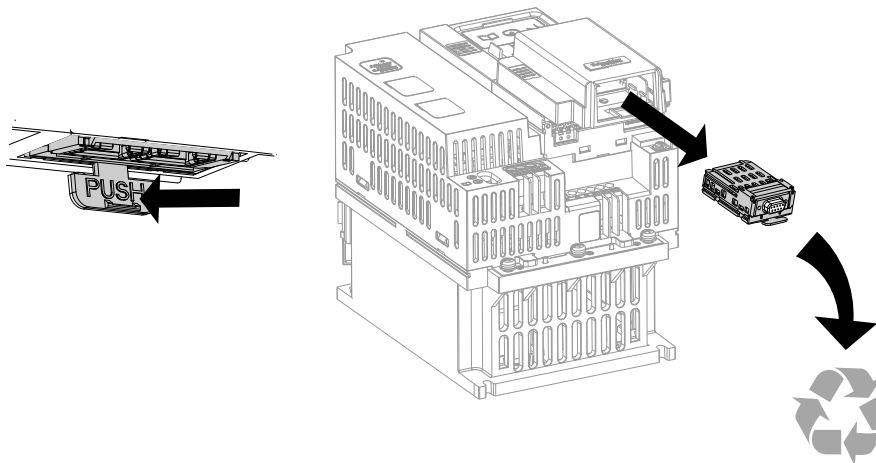 


 
www.se.com

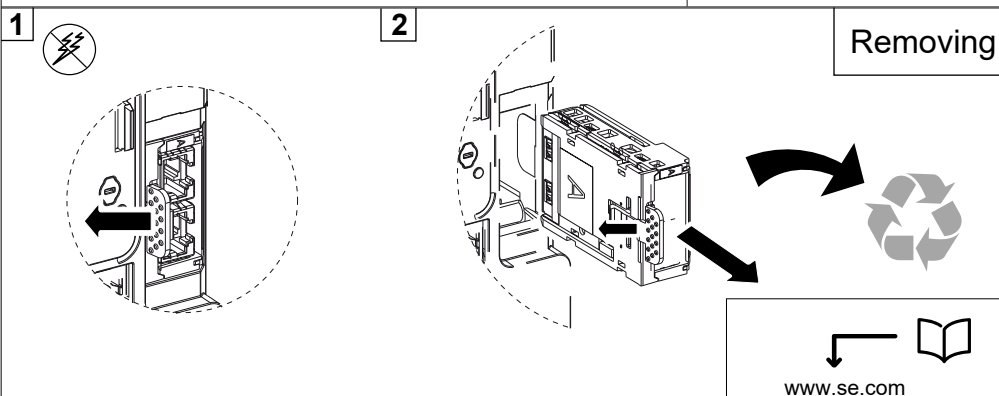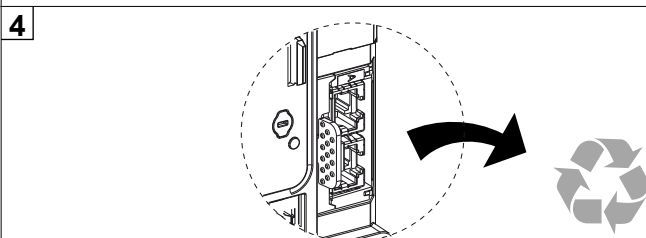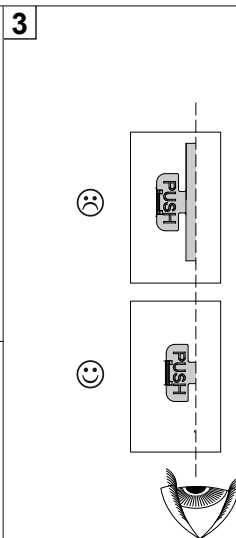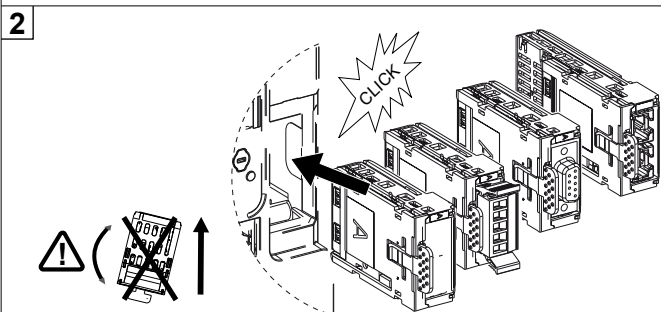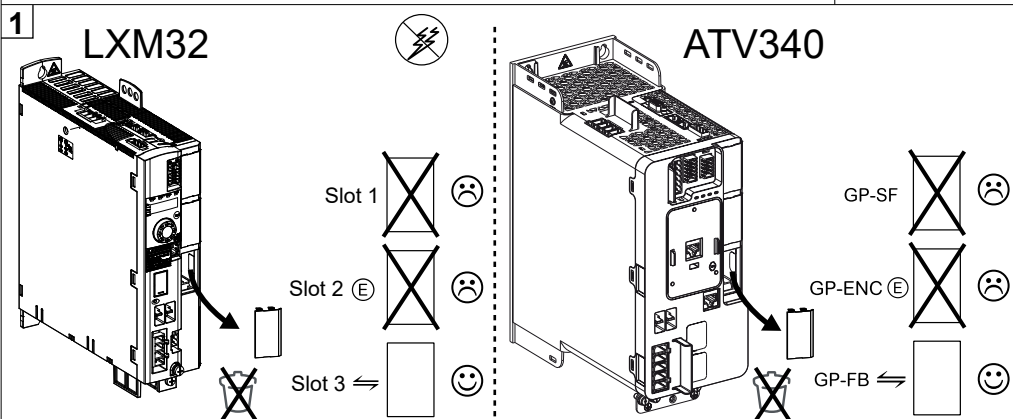     

1

 *ATH630D22N4●...ATH630C25N4●

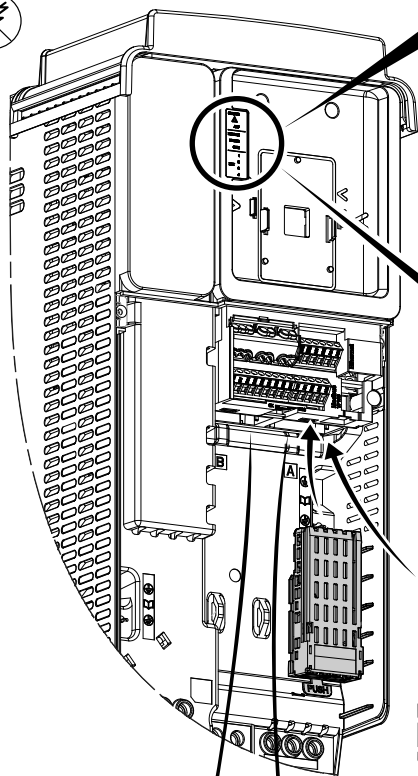

ATV600, ATH600




VW3A3721	VW3A3627	VW3A3627	VW3A3607	VW3A3628	VW3A3608	VW3A3618	VW3A3609	VW3A3725	VW3A3619	VW3A3530D
LNK1	LNK1	RUN	RUN	TX	L / A1	LNK1				
MS	BF	BF	ERR	MNS	MS	RUN/ERR				
NS	SF				RX	NS				
LNK2	LNK2				L / A2	LNK2				


ATV340, ATV900





VW3A3601	VW3A3627	VW3A3647	VW3A3607	VW3A3608	VW3A3618	VW3A3609	VW3A3619	VW3A3530D
ERR	SF		RUN	MNS	E	RUN/ERR		
EC1	BF	BF	ERR		S/E	NS		
RUN								

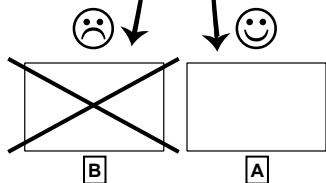 

2

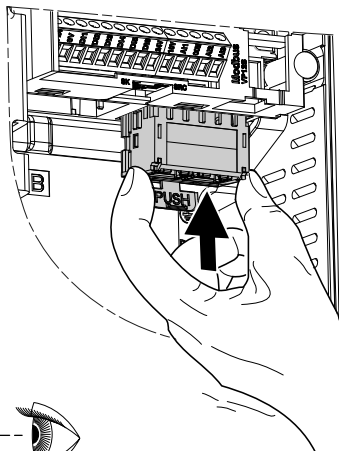 


3

 
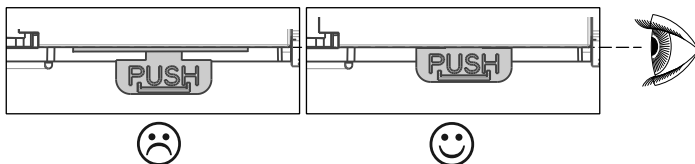 


www.se.com

 1

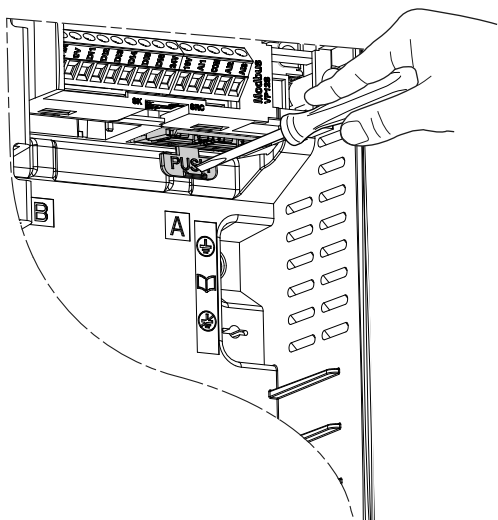


2

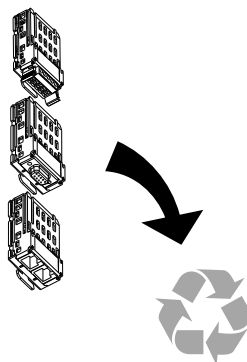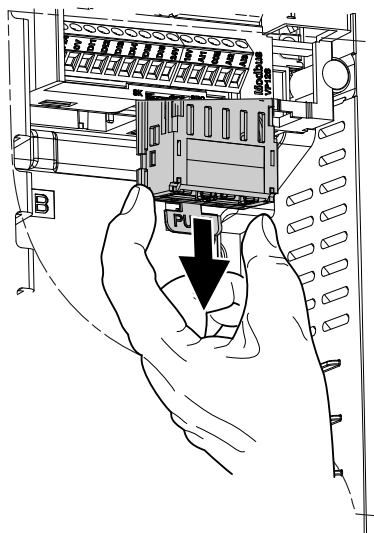  




ATS480

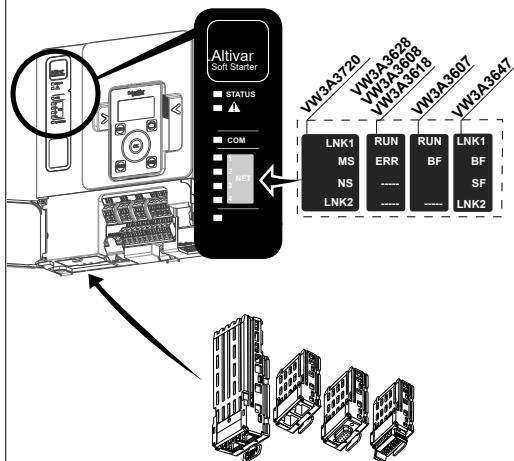 


ATS490

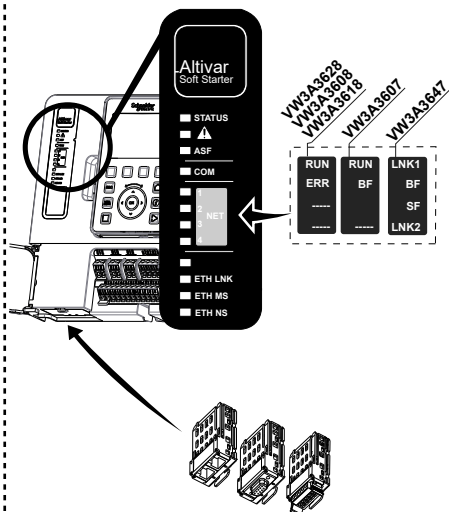 


2

3

 
4

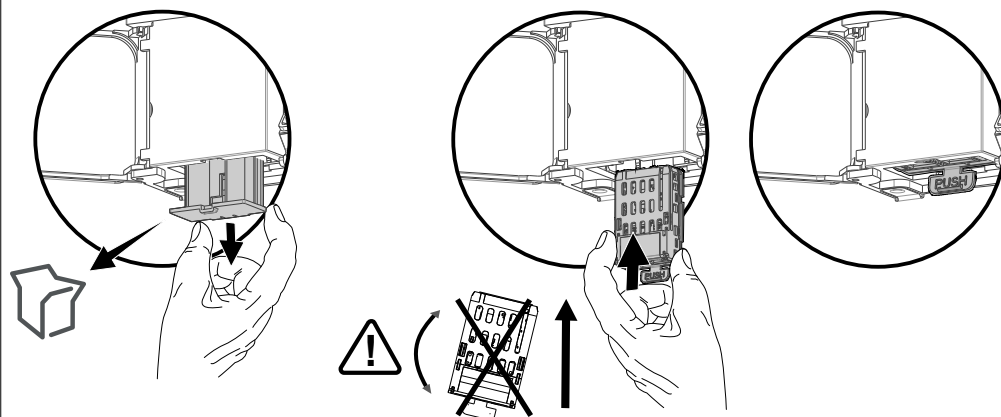


5

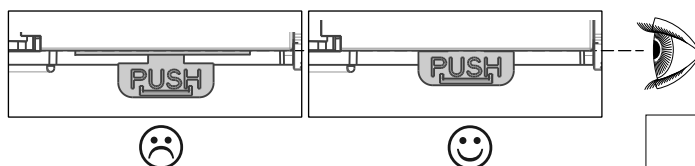 

1 

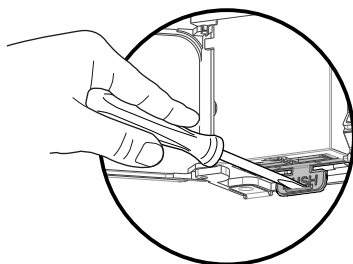 

2

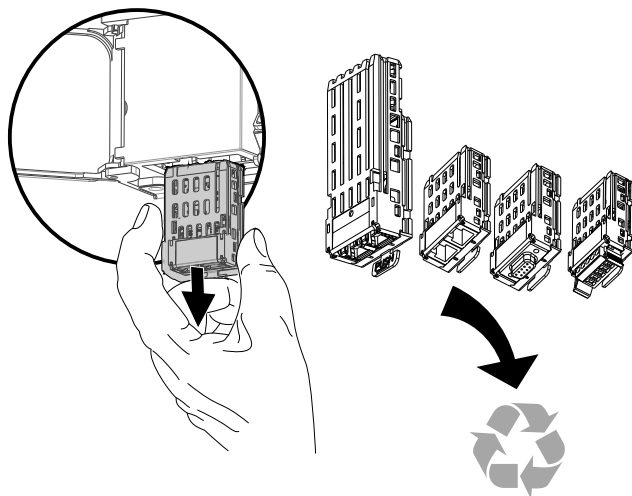 

3

