



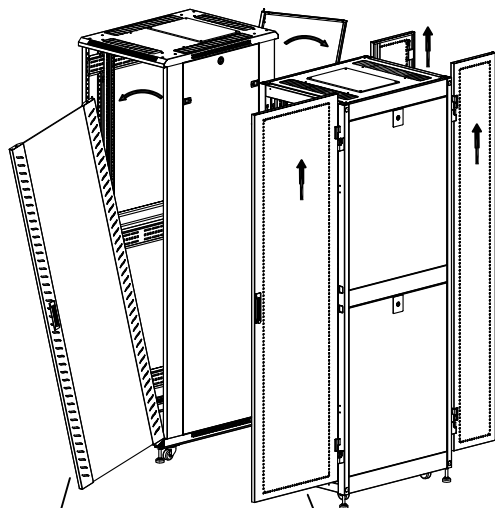

CR:
Remove front and
rear doors via quick
release spring loaded
hinge pins!


SR:
Remove front and rear
doors by opening and
simply lifting of the hinge
pin assembly!

①

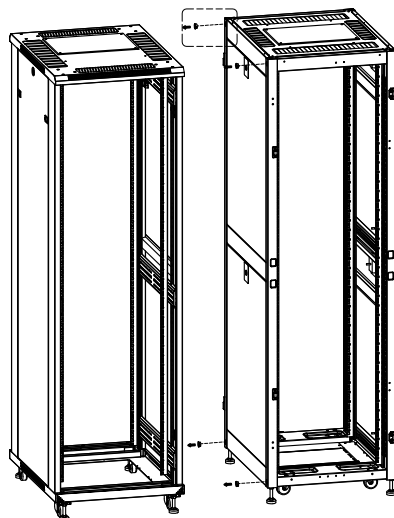


Remove plastic covers
from each corner at
the sides of the
cabinet as indicated

②

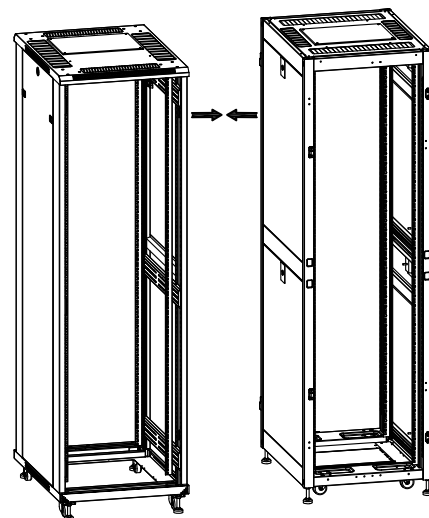


Move racks together until
sides are touching


③

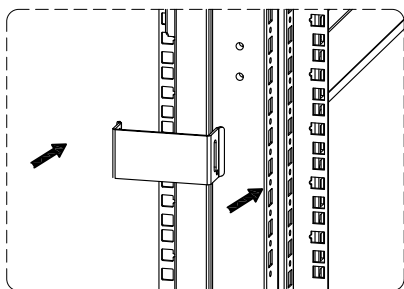

Fix the bracket to the top and bottom of
the front and rear rack frame posts

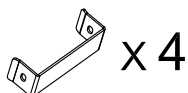


④

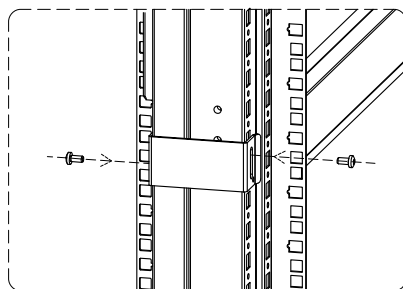

Secure each bracket with two
M5X10 Self-tapping screws



⑤

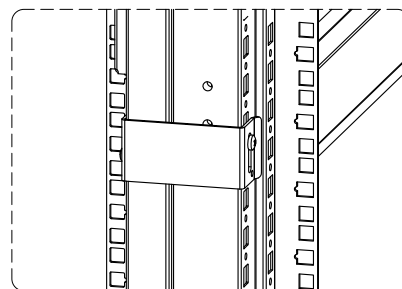

Baying is Complete

⑥