


KIT TESATE rev:0







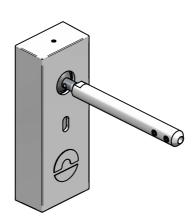


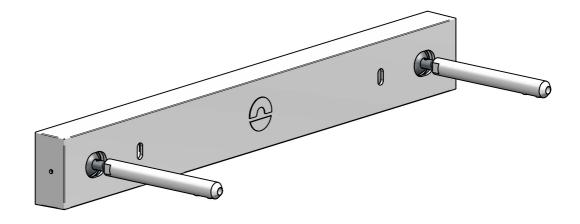










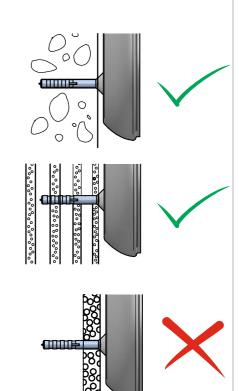

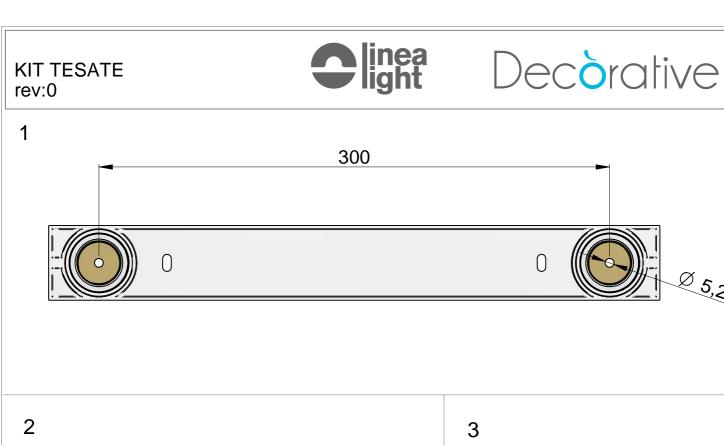

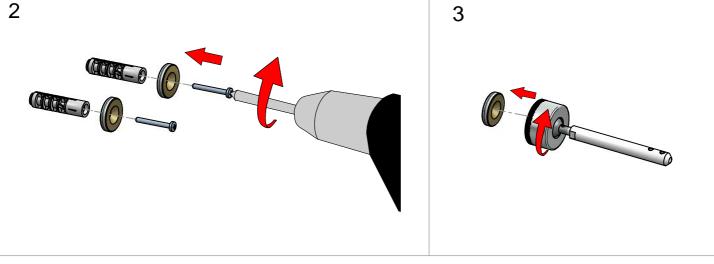

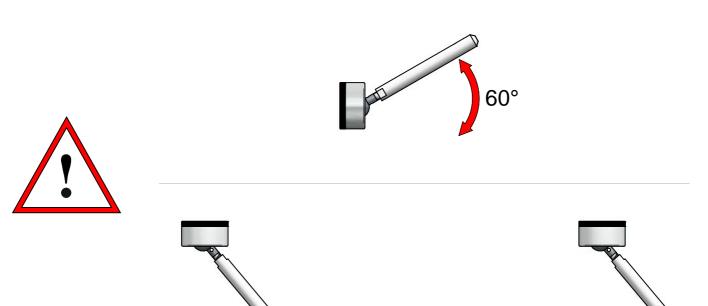

80°


80°


## KIT TESATE rev:0





## Decorative


4

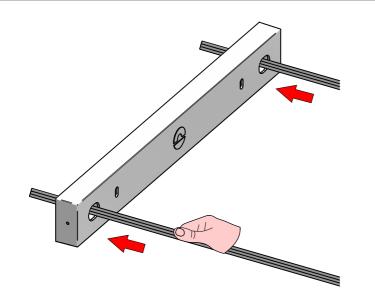


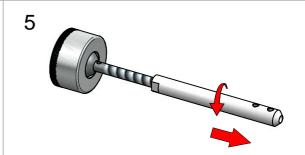





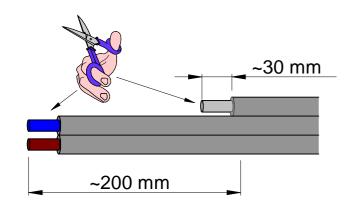

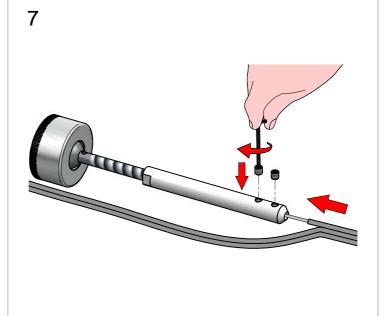

















## Decorative

9

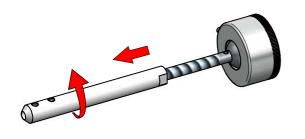


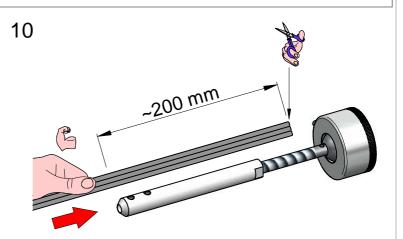

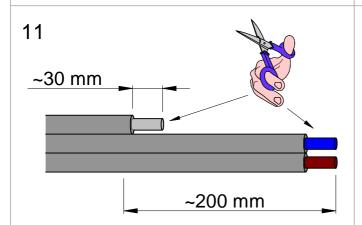


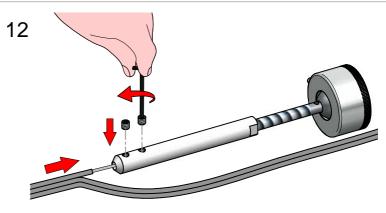




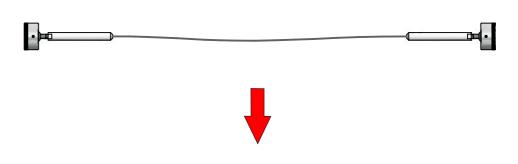



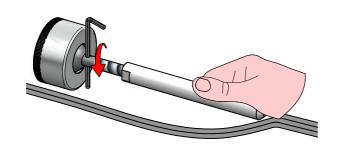


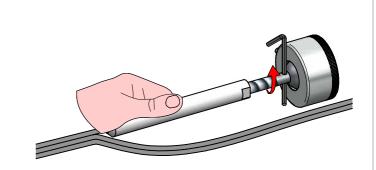


KIT TESATE rev:0



14

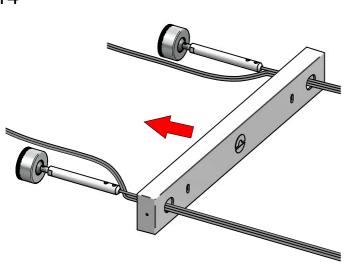

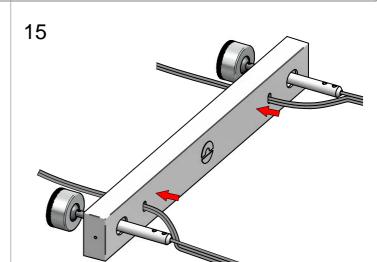

16

