

PANDUIT *NET-ACCESS N-Type Network Cabinets*


(Side Panels - N21SPS, N51SPS, N22SPS, N52SPS)

INSTRUCTIONS CM614A

© Panduit Corp. 2013-2014

Side Panel Support Bracket Installation

- Secure Side Panel Support Bracket to cabinet frame with [2] M5 Torx Screws.

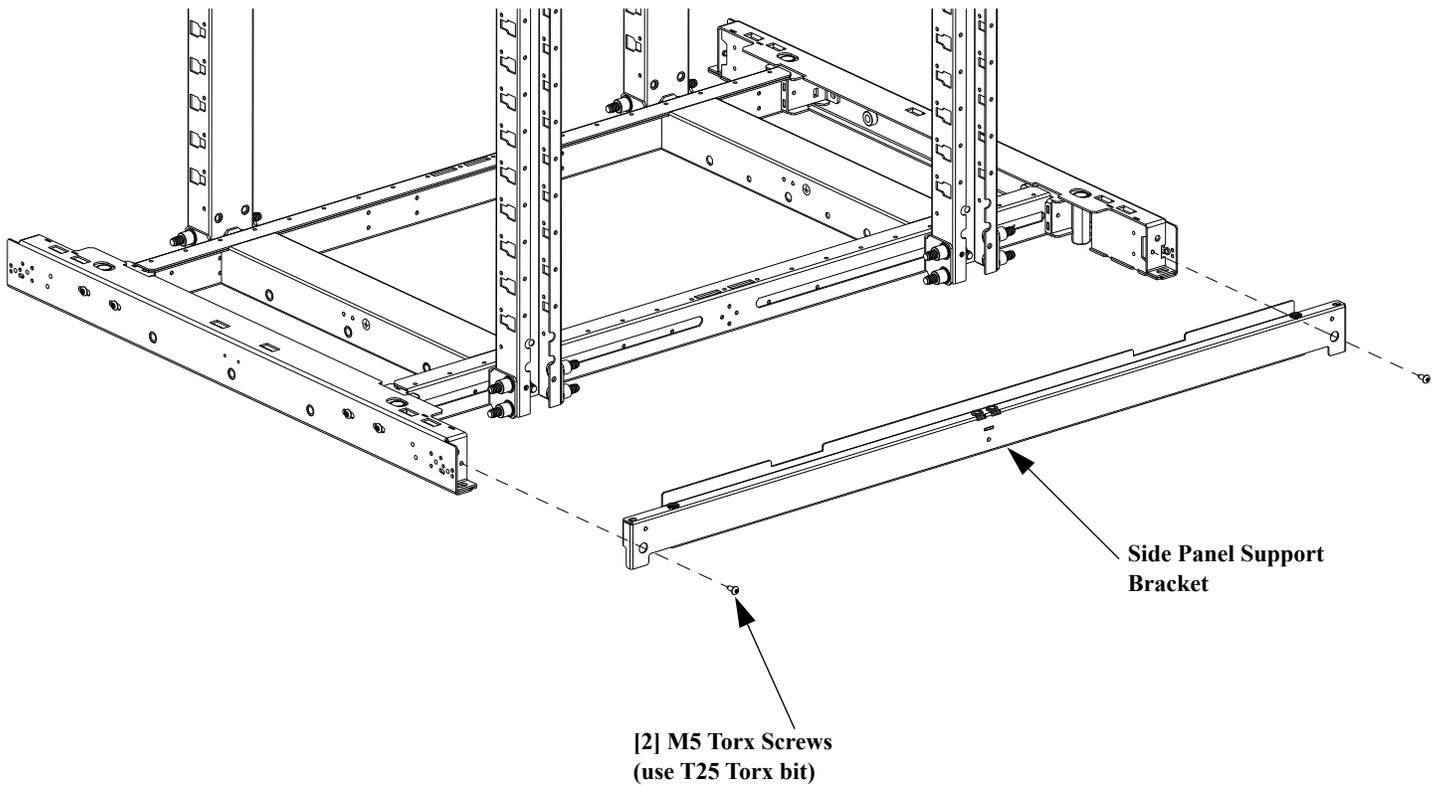


FOR TECHNICAL SUPPORT www.panduit.com/resources/install_maintain.asp

Side Panel Installation

- Rear Side Panel with Bumper Plate to be installed first.
- Remove [2] top Cover Plates of Rear Side Panel by pulling plunger slightly to release Cover Plate. (Bumper Plate will be to center of cabinet.)
- Tilt the Rear Side Panel and insert [2] bottom Hinge Pins into bushing and slot of Support Bracket. Pull top Spring Loaded Hinge Pins and engage with cabinet frame and Top Cap.
- Ensure Catch Plate on Front Side Panel is facing center of cabinet. Pull and lock [3] Spring Loaded Hinge Pins of Front Side Panel leaving the bottom rear hinge pin in the released position. Insert bottom rear hinge pin into bushing of Side Panel Support Bracket. Release rear top Spring Loaded Hinge Pin and ensure that panel is engaged with cabinet frame. Close Panel and release front Hinge Pins.
- *REVERSE STEPS* to remove In-Row Side Panels

IMPORTANT: Remove Rear Split doors prior to Removal and Installation. Install Rear Side Panel First

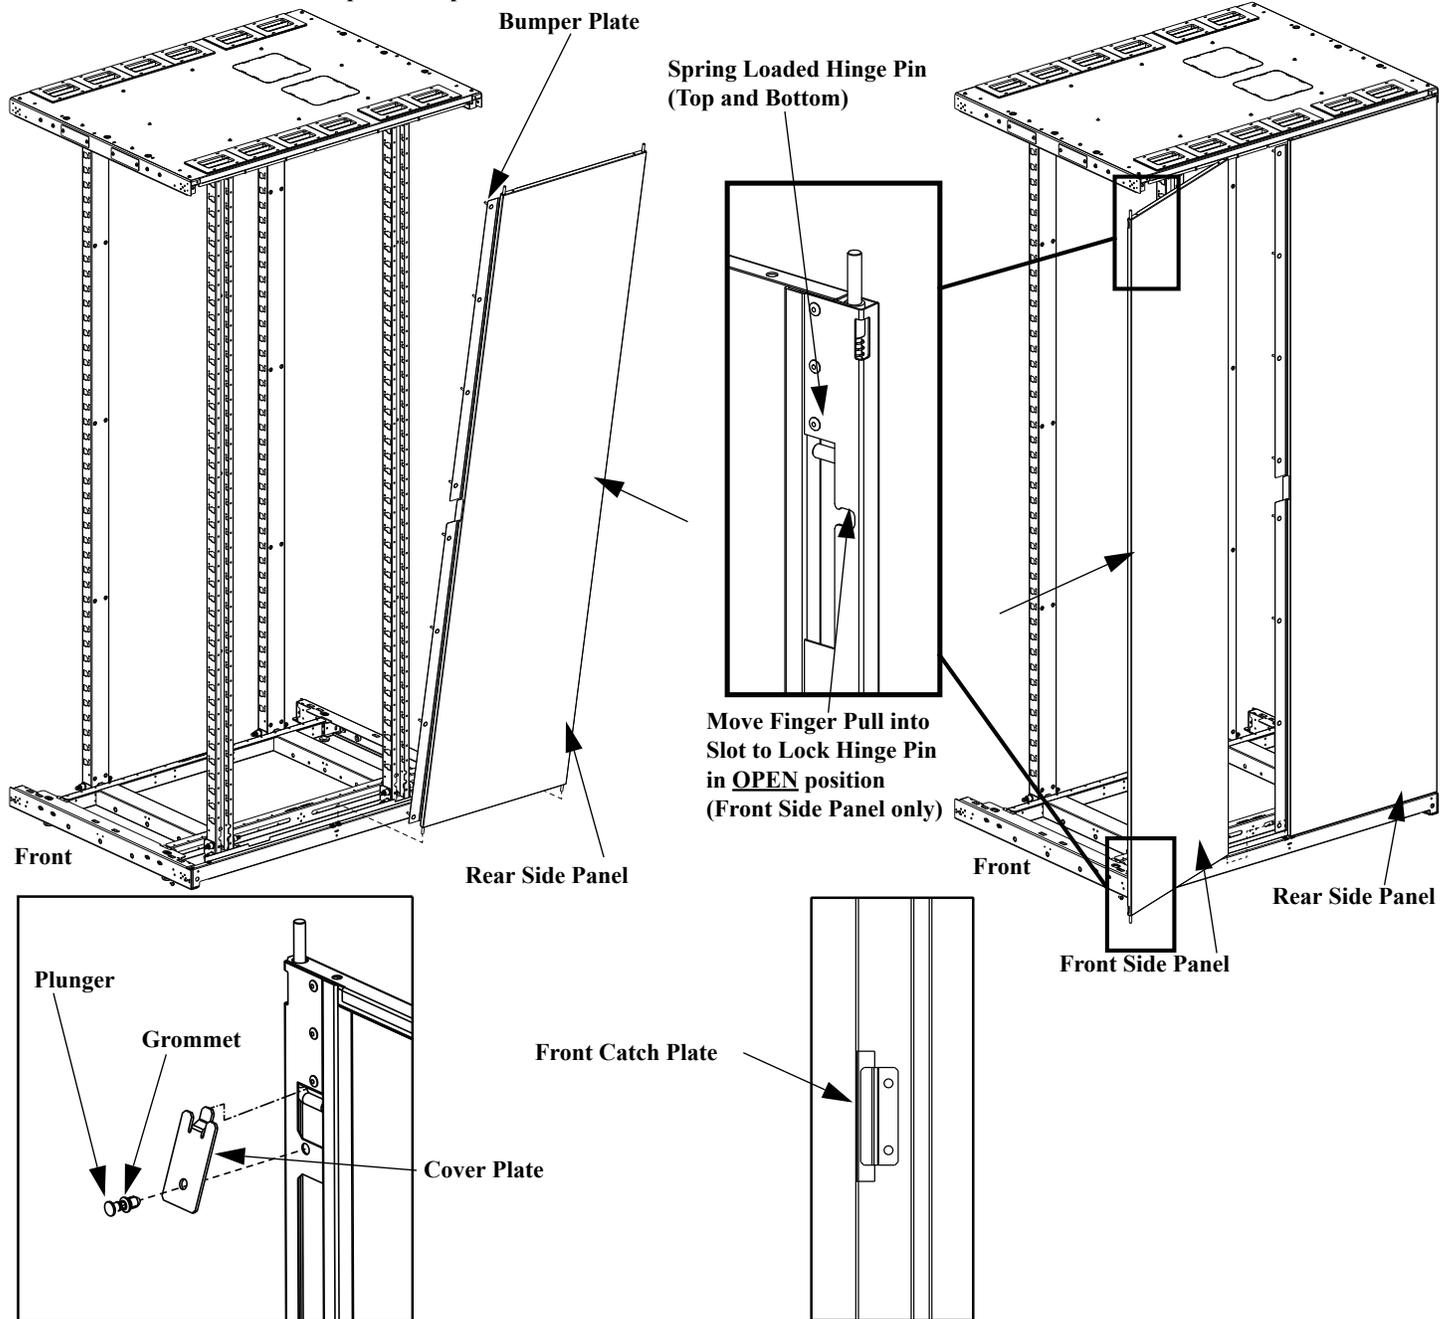

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com
Phone:
866-405-6654