


# PANDUIT® NET-ACCESS N-Type and S-Type Top of Cabinet Divider Wall (SN7TCDW, SN8TCDW)

INSTRUCTIONS V00029AK

© Panduit Corp. 2013

## Top of Cabinet Divider Wall - Screw Installation

- Pre-assemble screws and square nuts to divider wall
- **DO NOT** completely tighten screws

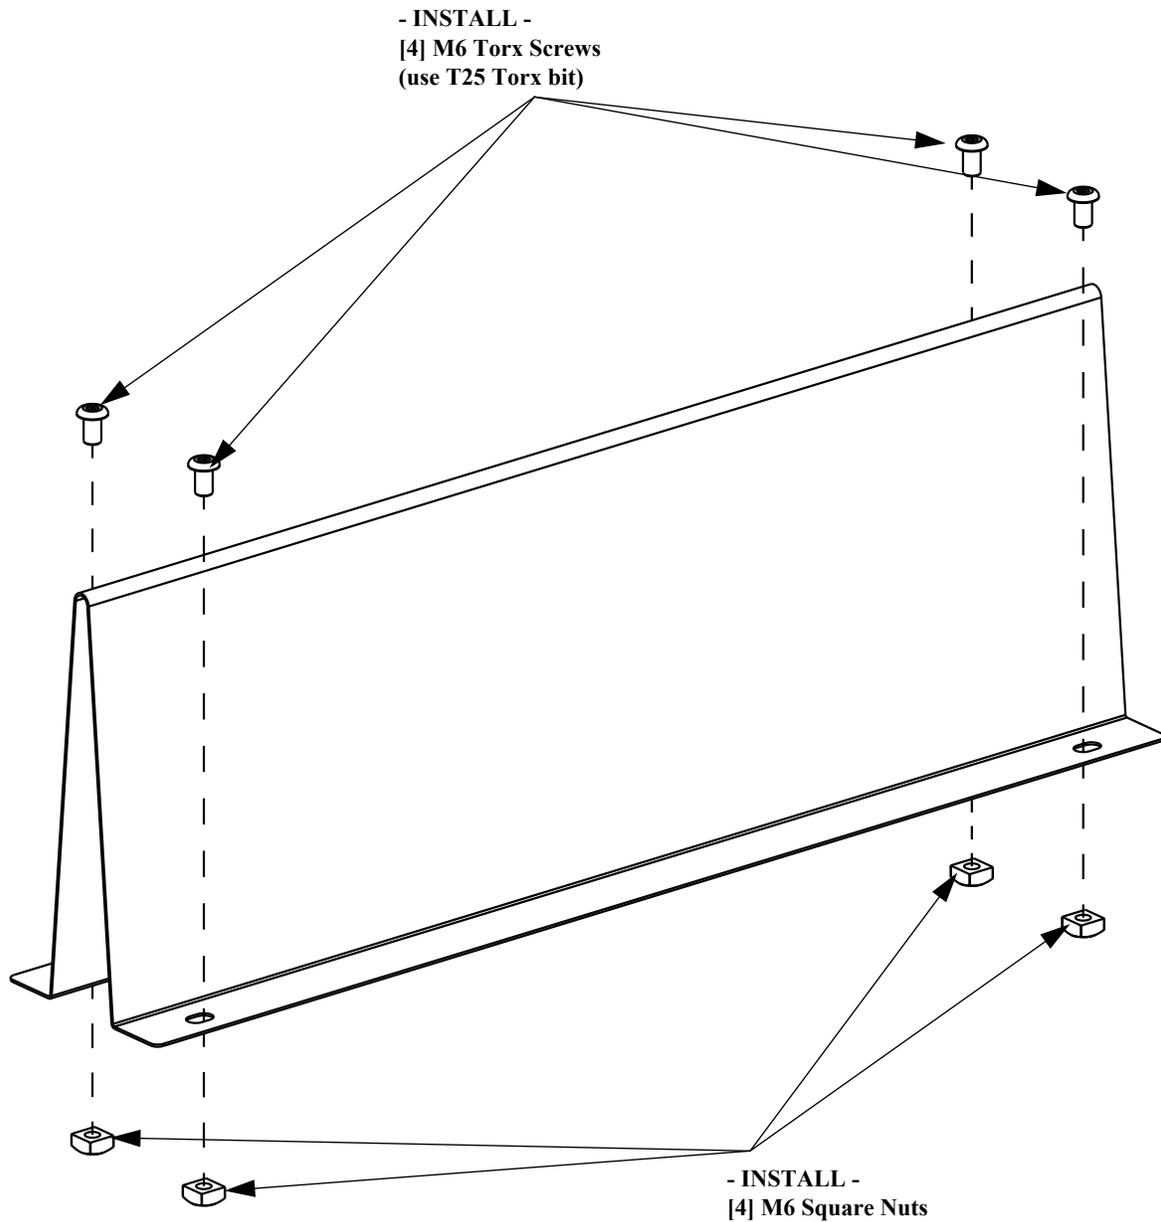

FOR TECHNICAL SUPPORT [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

## Top of Cabinet Divider Wall - Installation

- Position [2] square nuts of Top of Cabinet Divider Wall above [2] square cutouts of Top of Cabinet Cable Manager
- Insert [2] square nuts into square cutouts of Top of Cabinet Cable Manager
- Slide Top of Cabinet Divider Wall along slot until other set of [2] square nuts is above square cutouts
- Insert remaining set of [2] square nuts into square cutouts
- Slide Top of Cabinet Divider Wall to desired position and tighten screws

