

Cabinet Top Cable Routing System

Add-on Kit

PANDUIT

Part Number(s): STH61"C", STH62"C", STH71"C", STH72"C", SNTH81"C", SNTH82"C"

© Panduit Corp. 2014

INSTALLATION INSTRUCTIONS

V00029FJ

Cabinet Top Cable Routing System Add-on Kit Installation


-Install Cabinet Top Cable Routing System Base on existing Top Cap using [2] M5 Torx screws (use T25 Torx bit) per side.

Note: For 600mm & 700mm installation, remove existing Top Cap screws leaving only [4] corner screws.

-Install [2] Vertical Walls on front and back of Cabinet Top Cable Routing System Base using [9] M5 Torx screws (use T25 Torx bit) per Wall

-Attach Front Fascia to front Vertical Wall by sliding fascia over studs in vertical wall and secure with [4] M5 Torx screws (use T25 Torx bit)

-Attach Rear Fascia to rear Vertical Wall by sliding fascia over studs in vertical wall and secure with [4] M5 Torx screws (use T25 Torx bit)

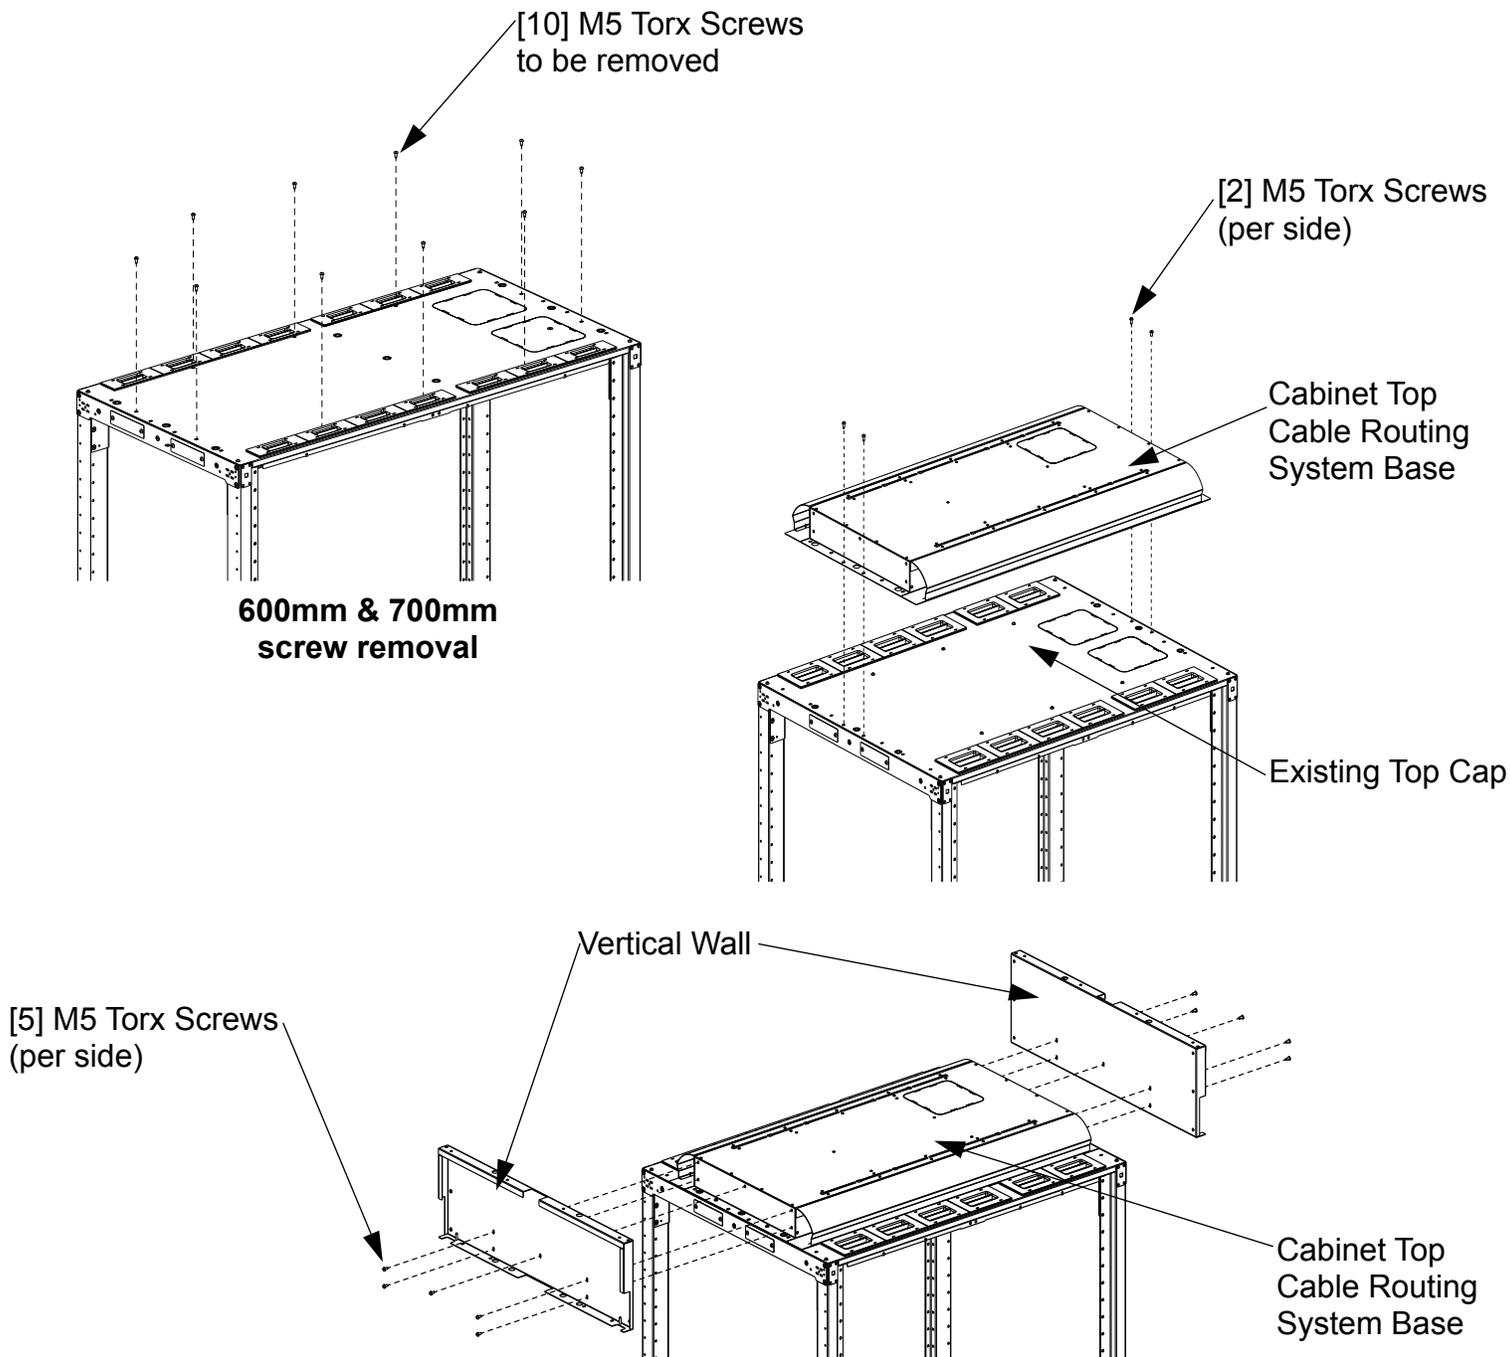

For Technical Support: www.panduit.com/resources/install_maintain.asp

