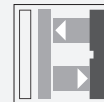# Triangulation sensor (BGE)
# OBT350-R101-2EP-IO-0,3M-V1-1T

- Miniature design with versatile mounting options
- Secure and gapless detection, even near the surface through background evaluation
- Precision object detection, almost irrespective of the color
- Extended temperature range -40 °C ... 60 °C
- High degree of protection IP69K
- IO-Link interface for service and process data

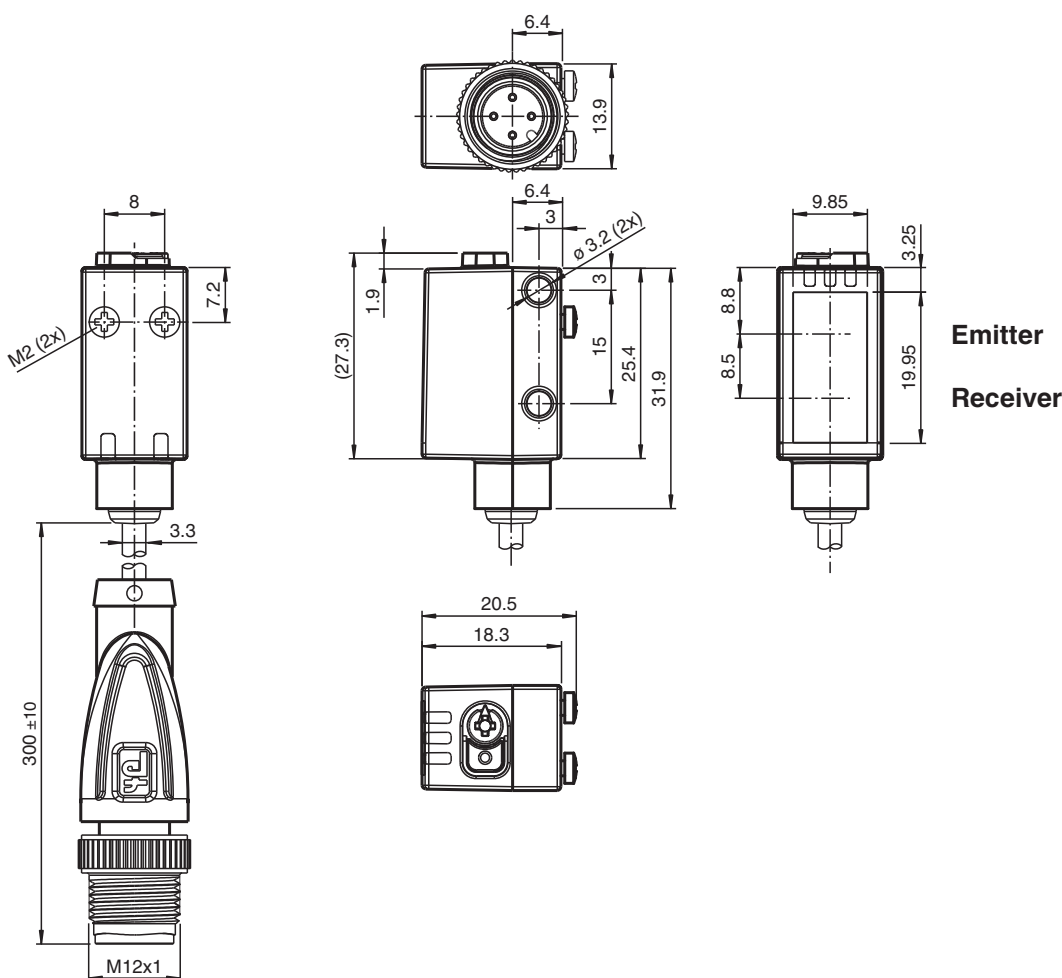Triangulation sensor with background evaluation

CE c(UL)us LISTED UKCA IO-Link

## Function

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.
The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.
The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

## Dimensions



**Emitter**

**Receiver**

Pepperl+Fuchs Group
www.pepperl-fuchs.com
USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com
Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com
Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com
PEPPERL+FUCHS
1

## Technical Data

**General specifications**

| | |
|---|---|
| Detection range | 5 ... 350 mm |
| Detection range min. | 5 ... 25 mm |
| Detection range max. | 5 ... 350 mm |
| Adjustment range | 25 ... 350 mm |
| Reference target | standard white, 100 mm x 100 mm |
| Light source | LED |
| Light type | modulated visible red light |
| LED risk group labelling | exempt group |
| Black-white difference (6 %/90 %) | < 15 % at 350 mm |
| Diameter of the light spot | approx. 20 mm at a distance of 350 mm |
| Opening angle | approx. 3 ° |
| Ambient light limit | EN 60947-5-2 : 40000 Lux |

**Functional safety related parameters**

| | | |
|---|---|---|
| $MTTF_d$ | | 600 a |
| Mission Time ($T_M$) | | 20 a |
| Diagnostic Coverage (DC) | | 0 % |

**Indicators/operating means**

| | |
|---|---|
| Operation indicator | LED green:<br>constantly on - power on<br>flashing (4Hz) - short circuit<br>flashing with short break (1 Hz) - IO-Link mode |
| Function indicator | LED yellow:<br>constantly on - background detected (object not detected)<br>constantly off - object detected |
| Control elements | Light-on/dark-on changeover switch |
| Control elements | Sensing range adjuster |

**Electrical specifications**

| | | |
|---|---|---|
| Operating voltage | $U_B$ | 10 ... 30 V DC |
| Ripple | | max. 10 % |
| No-load supply current | $I_0$ | < 25 mA at 24 V supply voltage |
| Protection class | | III |

**Interface**

| | |
|---|---|
| Interface type | IO-Link ( via C/Q = pin 4 ) |
| IO-Link revision | 1.1 |
| Device profile | Smart Sensor |
| Device ID | 0x110701 (1115905) |
| Transfer rate | COM2 (38.4 kBit/s) |
| Min. cycle time | 2.3 ms |
| Process data width | Process data input 1 Bit<br>Process data output 2 Bit |
| SIO mode support | yes |
| Compatible master port type | A |

**Output**

| | | |
|---|---|---|
| Switching type | | The switching type of the sensor is adjustable. The default setting is:<br>C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link<br>/Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on |
| Signal output | | 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected |
| Switching voltage | | max. 30 V DC |
| Switching current | | max. 100 mA , resistive load |
| Usage category | | DC-12 and DC-13 |
| Voltage drop | $U_d$ | ≤ 1.5 V DC |
| Switching frequency | f | 500 Hz |
| Response time | | 1 ms |

**Conformity**

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

| Pepperl+Fuchs Group | USA: +1 330 486 0001 | Germany: +49 621 776 1111 | Singapore: +65 6779 9091 |
|---|---|---|---|
| www.pepperl-fuchs.com | fa-info@us.pepperl-fuchs.com | fa-info@de.pepperl-fuchs.com | fa-info@sg.pepperl-fuchs.com |

PEPPERL+FUCHS

## Technical Data

| | |
|---|---|
| Communication interface | IEC 61131-9 |
| Product standard | EN 60947-5-2 |
| **Approvals and certificates** | |
| UL approval | E87056 , cULus Listed , class 2 power supply , type rating 1 |
| **Ambient conditions** | |
| Ambient temperature | -40 ... 60 °C (-40 ... 140 °F) , fixed cable<br>-25 ... 60 °C (-13 ... 140 °F) , movable cable not appropriate for conveyor chains |
| Storage temperature | -40 ... 70 °C (-40 ... 158 °F) |
| **Mechanical specifications** | |
| Housing width | 13.9 mm |
| Housing height | 33.8 mm |
| Housing depth | 18.3 mm |
| Degree of protection | IP67 / IP69 / IP69K |
| Connection | 300 mm fixed cable with M12 x 1, 4-pin connector |
| Material | |
|    Housing | PC (Polycarbonate) |
|    Optical face | PMMA |
| Mass | approx. 17 g |
| Cable length | 0.3 m |

## Connection
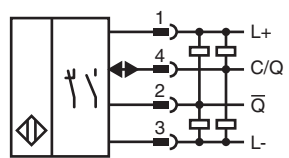


## Connection Assignment
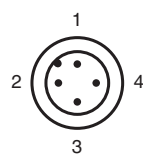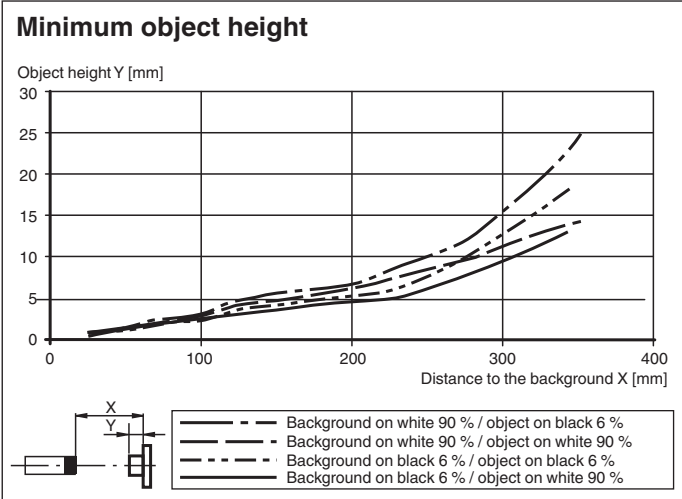


Wire colors in accordance with EN 60947-5-2

| | | |
|---|---|---|
| 1 | BN | (brown) |
| 2 | WH | (white) |
| 3 | BU | (blue) |
| 4 | BK | (black) |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

PEPPERL+FUCHS

3

## Assembly
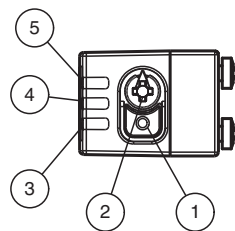
| 1 | Light-on/dark-on changeover switch |
|---|---|
| 2 | Sensing range adjuster |
| 3 | Operating indicator / dark on |
| 4 | Signal indicator |
| 5 | Operating indicator / light on |

**Minimum object height**

Object height Y [mm]

Distance to the background X [mm]

Background on white 90 % / object on black 6 %
Background on white 90 % / object on white 90 %
Background on black 6 % / object on black 6 %
Background on black 6 % / object on white 90 %

## Accessories

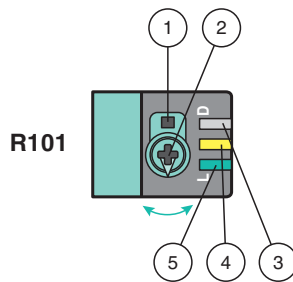| | V1-G-2M-PUR | Female cordset single-ended M12 straight A-coded, 4-pin, PUR cable grey |
|---|---|---|
| | V1-W-2M-PUR | Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey |
| | V31-GM-2M-PUR | Female cordset single-ended M8 straight A-coded, 4-pin, PUR cable grey |
| | V31-WM-2M-PUR | Female cordset single-ended M8 angled A-coded, 4-pin, PUR cable grey |
| | ICE2-8IOL-G65L-V1D | EtherNet/IP IO-Link master with 8 inputs/outputs |
| | ICE3-8IOL-G65L-V1D | PROFINET IO IO-Link master with 8 inputs/outputs |
| | ICE1-8IOL-G30L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
| | ICE1-8IOL-G60L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
| | ICE2-8IOL-K45P-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, push-in connectors |
| | ICE2-8IOL-K45S-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

| Pepperl+Fuchs Group | USA: +1 330 486 0001 | Germany: +49 621 776 1111 | Singapore: +65 6779 9091 |
|---|---|---|---|
| www.pepperl-fuchs.com | fa-info@us.pepperl-fuchs.com | fa-info@de.pepperl-fuchs.com | fa-info@sg.pepperl-fuchs.com |

PEPPERL+FUCHS                    4

## Accessories

| | | |
|---|---|---|
| | **ICE3-8IOL-K45P-RJ45** | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, push-in terminals |
| | **ICE3-8IOL-K45S-RJ45** | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |
| | **IO-Link-Master02-USB** | IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group          USA: +1 330 486 0001          Germany: +49 621 776 1111          Singapore: +65 6779 9091
www.pepperl-fuchs.com          fa-info@us.pepperl-fuchs.com          fa-info@de.pepperl-fuchs.com          fa-info@sg.pepperl-fuchs.com          PEPPERL+FUCHS          5

## Configuration

R101

1 - Light on / dark on changeover switch

2 - Sensing range / sensitivity adjuster

3 - Operating indicator / dark on

4 - Signal indicator

5 - Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

### Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensitivity adjuster counterclockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

### Light on / Dark on Configuration

Press the light on / dark on changeover switch for more than 1 second (less than 4 seconds). The light on / dark on mode changes and the operating indicators are activated accordingly.

If you press the light on / dark on changeover switch for more than 4 seconds, the light on / dark on mode changes back to the original setting. On release of the light on / dark on changeover switch the current state is activated.

### Restore Factory Settings

Press the light on / dark on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light on / dark on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.

Release date: 2023-04-05 Date of issue: 2023-04-05 Filename: 267075-0103_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

6