

CONTENT	PAGE
■ 1. Use	2
■ 2. Technical features	2
2.1 Electrical features	2
2.2 Operating/display	2
2.3 Climatic features	2
■ 3. Dimensions	2
■ 4. Connection	2
■ 5. Standards and approvals	2
■ 6. Parameters and communication objects	3
6.1 Overview of the functions	3
6.2 Parameters and communication objects	3
6.2.1 Communication object "Manual/Automatic"	3
6.2.2 Communication object "Jointly adjustable [Dimming]"	3
6.2.3 Communication object "Jointly adjustable [Shutter]"	4
6.2.4 Communication object "Switch"	4
6.2.5 Communication object "Switch/Dimming"	4
6.2.6 Communication object "Value/force output"	5
6.2.7 Communication object "Scene control"	5
6.2.8 Communication object "Switch sequence"	6
6.2.9 Communication object "Counter"	6
6.2.10 Communication object "Multiple operation"	7
6.2.11 Communication object "Shutter control"	7
■ 7. Parameter setting description in the ETS	8
7.1 Parameter window "General Setting"	8
7.2 Parameter window "Manual/Automatic Setting"	8
7.3 Parameter window "Enable/Disable manual operation"	8
7.4 Parameter window "Channel LED"	9
7.5 Parameter window "Preset Channel A~D"	9
7.5.1 Jointly adjustable working mode for binary input	9
7.5.2 Separately adjustable working mode for binary input	10

1. USE

The KNX binary interface ref. 002693 is a DIN modular device with 4 binary input contacts. The binary inputs serve as interfaces for operation of EIB/KNX systems via conventional buttons/switches or for coupling of binary signals (signal contacts, such as input 24V~230V).

Through its application program the main possible functions are:

- switch and dimming functions
- control of blinds and shutters
- sending of values e.g. temperature values, time...
- saving and storing of scenes
- operation of various loads by multiple push button actions
- operation of several loads in a fixed switching sequence
- standard counting and differential counting

Each input contact is associated with a red LED which indicates the status of the contact (OFF = open contact, ON= closed contact)

The KNX binary interface ref.002693 is power supplied via the KNX BUS and does not need an external power supply.

2. TECHNICAL FEATURES

2.1 Electrical features

Power supply

- Bus voltage 21-30V DC, via the KNX bus
- Current consumption, via KNX bus < 12mA
- Power consumption, via KNX bus < 360mW

Input

- Number 4
- Permitted voltage range U_n : 0...265V AC/DC
- Input current I_n : Max.2mA
- Signal level for 0-signal: 0...3V AC/DC
- Signal level for 1-signal: 9...265V AC/DC
- KNX bus via bus connecting terminal

Connections

- EIB/KNX Via bus connection terminal
- Inputs Using screw terminals
- Cable cross-section Multi core 0.2.....2.5mm
- Single core 0.2.....4.0mm
- Tightening torque Max.0.6 Nm
- Permitted cable length $\leq 100M$ (cross section for 1.5mm²)

2.2 Operating/display

- Programming LED and button: For assignment of the physical address
- Channel LED: 1LED per channel for display of the input state
- Manual operation button: 1 button per channel for changing the input
- Manual/Automatic LED: State 1LED for display of the manual/automatic mode states
- Manual/Automatic button: 1 button for switchover of manual and automatic mode

2.3 Climatic features

Temperature rang

- Operation: -5 °C ... 45 °C
- Storage: - 25 °C ... 55 °C
- Transport: - 25 °C ... 70 °C

Design

Modular installation device Modular installation device, ProM


Installation

On 35mm mounting rails


Weight

0.1kg

3. DIMENSIONS

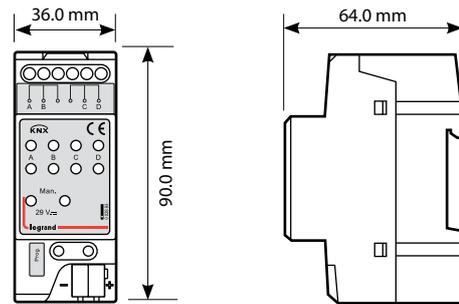

4. CONNECTION

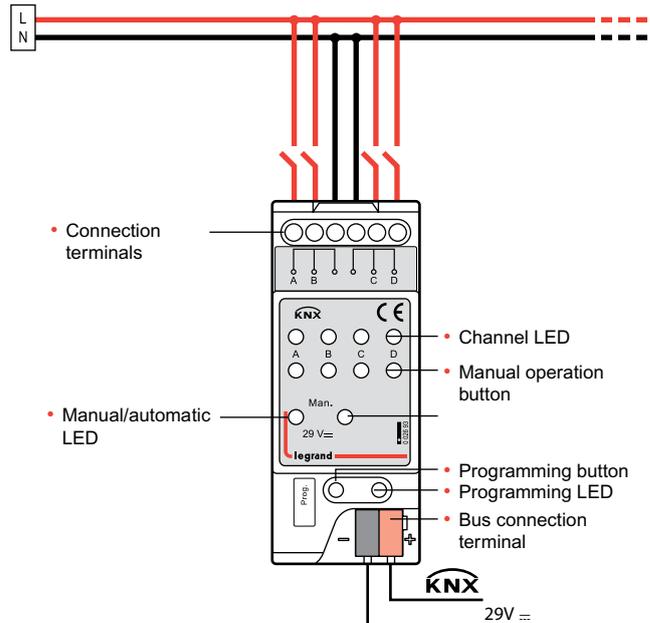

5. STANDARDS AND APPROVALS

Marking

KNX, CE

Certification

KNX approved

CE certified

Note:

All technical information is available at

 www.legrandoc.com

6. PARAMETERS AND COMMUNICATION OBJECTS

6.1 Overview of the functions

Application program	Number of communication objects	Max. number of group adresse	Max. number of associations
Binary Inputs, 4 fold	34	105	105

The following operating modes are available for each channel.

• Switch function / fault signal input

The function is used for switching the lighting or scanning conventional contacts, such as dimmer and switch actuator. Distinction between long and short operation and cyclical sending of the contact state are possible.

• Switch/dimming function

For switching/dimming the lighting via a one push button or two push buttons function. Start-stop dimming and stepwise dimming as well as dimming via a single push button is possible.

• Value/force output

It is possible to send different values or data types (e.g. temperature values, time or scene.) after a short/long operation. The activation/deactivation of the priority control of actuators is also possible. No distinction between long and short operation, sending different values or data types on rising/falling edge.

• Scene control

The function is used for recalling and storing the states of several actuator groups. The actuator groups can be controlled via max. 6 individual objects.

• Switching sequence

The function is used for the operation of several actuator groups in preset sequences, e.g. the latching relay. It is also used for operation of several loads in a fixed switching sequence.

• Counter

This is used for counting input pulses. Different data types can be set for the counter. It is also able to set the counting rate, and whether to sending the current counting values cyclically to the bus. When enable the differential counter, the differential counter can reset the count value and report in count overflow. Count can be stopped in overflow. Thereby, it is convenient to count the daily consumption.

• Push button with multiple operation

For triggering various functions depending on the frequency of the operation. A long operation can also be detected and trigger a function.

• Shutter control

For movement/lamella adjustment of a blind or a shutter via a one push button or two push buttons function. Eight preset operating responses are possible in total.

• Channel disable/enable function

Each channel of a device can be disabled separately via a communication object.

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2 Parameters and communication objects

The communication object is the medium to communicate other device on the bus, namely only the communication object can communicate with the bus. The communication object and the object in each channel are the same, using channel A as the example to introduce the function of each communication object in the following.

6.2.1 Communication object "Manual/Automatic"

Note:

"C" in "Flag" column in the below table means that the object has a normal link to the bus; "W" means the object value can be modified via the bus; "R" means the value of the object can be read via the bus; "T" means that a telegram is transmitted when the object value has been modified; "U" means that value response telegrams are interpreted as a write command, the value of the object is updated.

Number	Name	Object Function	Descrpt.	Group Address	Length	C	R	W	T	U	Data Type	Priority
#2	En/Dis Man./Auto	En/Dis Man./Auto			1 bit	C	-	W	-	-	Low	
#3	Report Man./Auto Status	Report Man./Auto Status			1 bit	C	-	-	T	-	Low	

Fig.6.1 Communication object "Manual/Automatic"

No.	Function	Object name	Data type	Flags	DPT
32	En/Dis Man./Auto	En/Dis Man./Auto	1bit	C,W	1.003 DPT_ Enable
The object is used to disable and enable the manual/automatic button. Telegram value 0 disable the manual/automatic button 1 enable the manual/automatic button					
33	Report Man./Auto Status	Report Man./Auto Status	1bit	C,W	1.011 DPT_ State
The object is used to send the status report after man/auto operation status changed. Telegram value 0 the current status for automatic operation 1 the current status for manual operation					

Table 6.2.1 Communication object table "Manual/Automatic"

6.2.2 Communication object "Jointly adjustable [Dimming]"

The communication object "Jointly adjustable [dimming]" can be shown in Fig. 6.2.

Number	Name	Object Function	Descrpt.	Group Address	Length	C	R	W	T	U	Data Type	Priority
#0	Disable A/B	Ch A/B Disable			1 bit	C	-	W	-	-	Low	
#1	Dimming A/B	Dimming A/B			4 bit	C	-	-	T	-	Low	
#2	Switch A/B	Switch A/B			1 bit	C	-	-	T	-	Low	

Fig.6.2 Communication object "Jointly adjustable [Dimming]"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.2 Communication object "Jointly adjustable [Dimming]" (continued)

No.	Function	Object name	Data type	Flags	DPT
0	CHX/Y disable	CHX/Y disable	1bit	C,W	1.003 DPT_Enable
<p>When enable the jointly adjustable function, this communication object will be active to disable/enable the channel jointly function.</p> <p>Telegram value 0 disable the function 1 enable the function</p> <p>All objects of the function are ineffectiveness when the function is disabled. The function default to enable after bus voltage recovery. (The object "disable" is the same for all jointly operation modes of the channel.)</p>					
1	Dimming,X/Y	Dimming,X/Y	4bit	C,T	3.007 DPT_Control Dimming
<p>This communication object is used to send dimming command to dim up or dim down. It can make the dimming device on the bus to carry out relative dimming. It will send a stop command to stop dimming when the operation is end.</p>					
2	Switch,X/Y	Switch,X/Y	1bit	C,T	1.001 DPT_Switch
<p>This communication object is used to send switch command.</p> <p>Telegram value 0 OFF 1 ON</p>					

Table 6.2 Communication object table "Jointly adjustable [Dimming]"

6.2.3 Communication object "Jointly adjustable [Shutter]"

The communication object "Jointly adjustable [Shutter]" can be shown in Fig. 6.3.

Number	Name	Object Function	Descrpt...	Group Address...	Length	C	R	W	T	U	Data Ty...	Priority
#2 0	Disable A/B	CH A/B Disable			1 bit	C	-	W	-	-		Low
#2 1	Shutter move up/down, A/B	Shutter move up/down, A/B			1 bit	C	-	-	T	-		Low
#2 2	Shutter stop, A/B	Shutter stop, A/B			1 bit	C	-	-	T	-		Low

Fig.6.3 Communication object "Jointly adjustable [Shutter]"

No.	Function	Object name	Data type	Flags	DPT
1	Shutter move up/down,X/Y	Shutter move up/down,X/Y	1bit	C,W	1.008 DPT_UpDown
<p>This communication object is used to send a shutter moving command (up or down) to the bus.</p> <p>Telegram value 0 move up 1 move down</p>					
2	Shutter stop,X/Y	Shutter stop, X/Y	1bit	C,T	1.007 DPT_Step
<p>This communication object is used to send a stop shutter moving command.</p> <p>Telegram value 0 stop moving 1 stop moving</p>					

Table 6.3 Communication object table "Jointly adjustable [Shutter]"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.4 Communication object "Switch"

Number	Name	Object Function	Descrpt...	Group Address...	Length	C	R	W	T	U	Data Ty...	Priority
#2 0	Disable, A	CH A Disable			1 bit	C	-	W	-	-		Low
#2 1	Switch, A	CH A Switch			1 bit	C	-	W	T	-		Low
#2 2	Switch-long, A	CH A switch-long			1 bit	C	-	-	T	-		Low

Fig.6.4 Communication object "Switch"

No.	Function	Object name	Data type	Flags	DPT
0	CHX/Y disable	Disable,X	1bit	C,W	1.003 DPT_Enable
<p>When enable the channel function, this communication object will be active to disable/enable the channel function.</p> <p>Telegram value 0 disable the channel function 1 enable the channel function</p> <p>All objects of the function are ineffectiveness when the channel function is disabled. The channel function default to enable after bus voltage recovery. (The object "disable" is the same for all operation modes of the channel.)</p>					
1	CH X Switch	Switch,X	1bit	C,W,T	1.001 DPT_Switch
<p>In accordance with the parameter setting, this communication object can be switched by actuation of the ON, OFF or TOGGLE input. With TOGGLE the previous value e.g. "1" is switched directly to the value "0".</p> <p>Telegram value 0 OFF 1 ON</p>					
2	CH X Switch-long	Switch,X/Y	1bit	C,T	1.001 DPT_Switch
<p>This communication object is only visible if the parameter Distinction between long and short operation = yes, and the parameter Number of objects for short/long object operation = 2 objects. This additional communication object is assigned to the long operation.</p> <p>Telegram value 0 OFF 1 ON</p>					

Table 6.4 Communication object table "Switch"

6.2.5 Communication object "Switch/Dimming"

Number	Name	Object Function	Descrpt...	Group Address...	Length	C	R	W	T	U	Data Ty...	Priority
#2 0	Disable, A	CH A Disable			1 bit	C	-	W	-	-		Low
#2 1	Switch, A	CH A Switch			1 bit	C	-	W	T	-		Low
#2 2	Dimming, A	CH A Dimming			4 bit	C	-	-	T	-		Low

Fig.6.5 Communication object "Switch/Dimming"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.5 Communication object "Switch/Dimming" (continued)

No.	Function	Object name	Data type	Flags	DPT
1	CHX/Y Switch	Switch,X	1bit	C,W,T	1.001 DPT_Switch
<p>It is visible if parameter "Dimming functionality" selected "Dimming and switching". Operate with a short operation to input the object value to carry out the relevant action, such as ON, OFF, TOGGLE.</p> <p>Telegram value 0 OFF 1 ON</p>					
2	CH X Dimming	Dimming,X	4bit	C,T	3.007 DPT_Control Dimming
<p>This communication object inputs by a long operation, and sends the command to dim up or dim down. It can make the dimming device on the bus to carry out relative dimming. It will send a stop command to stop dimming when the long operation is end. (The object inputs with a long operation if the option "dimming and switching" is selected with the parameter "dimming functionality". There is no distinction between short/ long operations if the option is "only dimming".)</p>					

Table 6.5 Communication object table "Switch/Dimming"

6.2.6 Communication object "Value/force output"

There are many data types and communication objects, it will not list in Fig.6.6. The communication objects of different data types have the same operation that are transmit the object value, which the range of transmit object value are different. It is possible to distinguish a long/ short operation or not, the two objects enable when distinguished.

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
#0	Disable_A	CH A Disable			1 bit	C	-	W	-	-		Low
#1	Output 1bit,short/rising_A	CH A Value 1bit - sr			1 bit	C	-	-	T	-		Low
#2	Output 1bit, long/falling_A	CH A Value 1bit - lf			1 bit	C	-	-	-	T		Low

Fig.6.6 Communication object "Value/Forced output"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.6 Communication object "Value/force output" (continued)

No.	Function	Object name	Data type	Flags	DPT
1	CH X Value ...-sr	Output..., short/ rising, X	1bit [0/1] 1byte[-128..127] 1byte[0..255] 1byte[recall scene] 1byte[store scene] 2byte[-32768..32767] 2byte[0..65535] 2byte[Float] 3byte[time of day] 4byte[-2147483648... 2147483647] 4byte[0...4294967 295]		1.001 DPT_Switch 6.010 DPT_Value_1_Count 5.010 DPT_Value_1_Ucount 17.001 DPT_SceneControl 18.001 DPT_SceneControl 8.001 DPT_Value_2_Count 7.001 DPT_Value_2_Ucount 9.001 DPT_Value_Temp 10.001 DPT_TimeOfDay 13.001 DPT_Value_4_Count 12.001 DPT_Value_4_Ucount
<p>This communication object is used to transmit the input value. It is only transmit the object value in short operation if distinguish a long and short operation. It will transmit the object value in rising edge if no distinction between long and short operation. The object value range depend on the data type, The data type is set in the parameter "Reaction on operation /rising edge".</p>					
2	CH X Value ...-lf	Output..., long/ falling, X	1bit [0/1] 1byte[-128..127] 1byte[0..255] 1byte[recall scene] 1byte[store scene] 2byte[-32768..32767] 2byte[0..65535] 2byte[Float] 3byte[time of day] 4byte[-2147483648... 2147483647] 4byte[0...4294967 295]	C,T	1.001 DPT_Switch 6.010 DPT_Value_1_Count 5.010 DPT_Value_1_Ucount 17.001 DPT_SceneControl 18.001 DPT_SceneControl 8.001 DPT_Value_2_Count 7.001 DPT_Value_2_Ucount 9.001 DPT_Value_Temp 10.001 DPT_TimeOfDay 13.001 DPT_Value_4_Count 12.001 DPT_Value_4_Ucount
<p>This communication object is used to transmit the input value. It is only transmit the object value in long operation if distinguish a long and short operation. It will transmit the object value in falling edge if no distinction between long and short operation. The object value range depend on the data type, The data type is set in the parameter "Reaction on (long) operation/falling edge".</p>					

Table 6.6 Communication object table "Value/Forced output"

6.2.7 Communication object "Scene control"

The communication object "Scene control" will be shown in Fig.6.4. The actuator groups can be controlled via max. 6 individual objects, which provided 3 data types.

Number	Name	Object Function	Description	Group Address	Length	C	R	W	T	U	Data Type	Priority
#0	Disable_A	CH A Disable			1 bit	C	-	W	-	-		Low
#1	Store scene_A	CH A Store scene			1 bit	C	-	W	T	-		Low
#2	Output 1bit,Group-A_A	CH A 1bit,Group-A			1 bit	C	-	W	T	U		Low
#3	Output 1bit,Group-B_A	CH A 1bit,Group-B			1 bit	C	-	W	T	U		Low
#4	Output 1bit,Group-C_A	CH A 1bit,Group-C			1 bit	C	-	W	T	U		Low
#5	Output 1bit,Group-D_A	CH A 1bit,Group-D			1 bit	C	-	W	T	U		Low
#6	Output 1bit,Group-E_A	CH A 1bit,Group-E			1 bit	C	-	W	T	U		Low
#7	Output 1bit,Group-F_A	CH A 1bit,Group-F			1 bit	C	-	W	T	U		Low

Fig.6.7 Communication object "Scene control"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.7 Communication object "Scene control" (continued)

No.	Function	Object name	Data type	Flags	DPT
1	CHX/Y Store scene	Store scene,X	1Bit	C,W,T	1.002 DPT_Bool
<p>It is visible if parameter "Dimming functionality" selected "Dimming and switching". Operate with a short operation to input the object value to carry out the relevant action, such as ON, OFF, TOGGLE.</p> <p>Telegram value 0 OFF 1 ON</p>					
2	CH X 1bit/1byte/2byte, Group-A...F	Output 1bit/1byte/2byte, Group-A...F, X	1bit[ON/OFF] 1byte[0..100%] 1byte[0..255] 2byte[Float]	C,W,T, U	1.001 DPT_Switch 5.001 DPT_Scaling 5.010 DPT_Value_1_Ucount 9.001 DPT_Value_Temp
<p>The communication object is used to control the actuator group, it can control by a 1 bit, 8 bit data or 16 bit data (set by parameter). When saving the scene, the object "output 1bit/8bit, group A...E" will be read, and which can be modified and storage on the bus. After the bus voltage recovery, the value of the object resume to the default value and the new storage value will be lost.</p>					

6.2.8 Communication object "Switch sequence"

The communication object "Switching sequence" will be shown in Fig.6.8. It can modify the object value with an operation step by step. An object corresponds to one switch level.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
#0	Disable_A	CH A Disable			1 bit	C	-	W	-	-	Low	
#1	Output level-1_A	CH A level-1			1 bit	C	-	-	T	-	Low	
#2	Output level-2_A	CH A level-2			1 bit	C	-	-	T	-	Low	
#3	Output level-3_A	CH A level-3			1 bit	C	-	-	T	-	Low	
#4	Output level-4_A	CH A level-4			1 bit	C	-	-	T	-	Low	
#5	Output level-5_A	CH A level-5			1 bit	C	-	-	T	-	Low	
#6	Level increment/decrement_A	CH A Level increment/decrement			1 bit	C	-	W	-	-	Low	

Fig.6.8 Communication object "Switching sequence"

No.	Function	Object name	Data type	Flags	DPT
1~5	CH X level-1(1~5)	Output level-1 (1~5), X	1bit	C,T	1.001 DPT_Switch
<p>The number of the communication object (maximum 5) which the levels of switch are set by parameter "No. of object". The communication object sent on the bus is the object which one of binary code is modified, which the bit of the binary code had been changed. The objects are detailed description in the switching sequence parameter chapter.</p>					
6	CH X Level increment/decrement	Level increment / decrement, X	1bit	C,W	1.001 DPT_Switch
<p>The communication object "level increment/decrement, X" is used to increase/decrease the level of the switch. It will increase one level when receiving "1" and decrease a level when receiving "0". The object is detailed description in the switching sequence parameter chapter.</p>					

Table8 Communication object table "Switching sequence"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.9 Communication object "Counter"

The communication object "Counter" will be shown in Fig.6.9. Including main counter and differential counter communication object, both these communication objects will start count when the input pulse is generated with an operation. The data width which has been selected for both counters can be set to same or different. But the counting is independent of each other.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
#0	Disable_A	CH A Disable			1 bit	C	-	W	-	-	Low	
#1	MCounterCounter value_A	CH A Counter value			2 byte	C	-	-	T	-	Low	
#2	DCounterCounter value_A	CH A DCounter value			2 byte	C	-	-	T	-	Low	
#3	DCounterLimit exceeded_A	CH A DCounterLimit exceeded			1 bit	C	-	-	T	-	Low	
#4	DCounterReset value_A	CH A DCounterReset value			1 bit	C	-	W	-	-	Low	
#5	DCounterStop_A	CH A DCounterStop			1 bit	C	-	W	T	-	Low	
#6	MCounterLimit exceeded_A	CH A MCounterLimit exceeded			1 bit	C	-	-	T	-	Low	
#7	Request counter value_A	CH A Request counter value			1 bit	C	-	W	-	-	Low	

Fig.6.9 Communication object "Counter"

No.	Function	Object name	Data type	Flags	DPT
1	CHX/Y Counter value	Mcounter: Counter value,X	1byte[0..255] 2byte[-32768..32767] 2byte[0..65535] 4byte[-2147470000...2147470000]	C,T	5.010 DPT_Value_1_Ucount 8.001 DPT_Value_2_Count 7.001 DPT_Value_2_Ucount 13.001 DPT_Value_4_Count
<p>This communication object is used to transmit the current counting value of the main counter. The counting range depends on data type, which is defined with the parameter "Data width of counter".</p>					
2	CH X DCounter value	Dcounter: Counter value, X	1byte[0..255] 2byte[-32768..32767] 2byte[0..65535] 4byte[-2147470000...2147470000]	C,T	5.010 DPT_Value_1_Ucount 8.001 DPT_Value_2_Count 7.001 DPT_Value_2_Ucount 13.001 DPT_Value_4_Count
<p>It is visible if enable the parameter "Enable differential counter". This communication object is used to transmit the current counting value of the differential counter. The counting range depends on data type, which is defined with the parameter "Data width of counter".</p>					
3	CH X DCounter: Limit exceeded	DCounter: Limit exceeded, X	1bit	C,T	1.002 DPT_Bool
<p>When the differential count value exceeded the limit value, the object will send telegram value "1", which report counting overflow.</p>					
4	CH X DCounter: Reset value	CH X DCounter: Reset value, X	1bit	C,W	1.015 DPT_Reset
<p>The communication object is used to reset the count value of differential counter. When the object receives telegram value "1", the current count value will become count initial value (limit value).</p>					
5	CH X DCounter: Stop	DCounter: Stop, X	1bit	C,W,T	1.002 DPT_Bool
<p>When the differential counter overflow, the object sends telegram value "0", which report count stopping (set in the parameter). Meanwhile, if the object receives telegram value "0", the differential counter can also stop counting. If the object receives telegram value "1", it will continue counting.</p>					
6	CH X MCounter: Limit exceeded	Mcounter: Limit exceeded, X	1bit	C,T	1.002 DPT_Bool
<p>When the main count value exceeded the limit value, the object will send telegram value "1", which report counting overflow.</p>					
7	CH X Request Counter value	Request Counter value, A	1bit	C,W	1.002 DPT_Bool
<p>When the object receives telegram value "1", the objects "MCounter: Counter value, X" and "DCounter: Counter value,X" will send their current value on the bus.</p>					

Table 9 Communication object table "Counter"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.10 Communication object "Multiple operation"

The communication object "Multiple Operation" will be shown in Fig.6.10. If the input is operated several times within a defined period, a defined object value can be modified by the number of operations.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
#2 0	Disable_A	CH A Disable			1 bit	C	-	W	-	-		Low
#2 1	Output 1-fold_A	CH A 1-fold			1 bit	C	-	-	T	-		Low
#2 2	Output 2-fold_A	CH A 2-fold			1 bit	C	-	-	T	-		Low
#2 3	Output 3-fold_A	CH A 3-fold			1 bit	C	-	-	T	-		Low
#2 4	Output 4-fold_A	CH A 4-fold			1 bit	C	-	-	T	-		Low

Fig.6.10 Communication object "Multiple operation"

No.	Function	Object name	Data type	Flags	DPT
1~4	CH X 1-fold (1~4)	Output 1-fold X(1~4)	1Bit	C,T	1.001 DPT_Switch
The number of the communication object (maximum 4) is set with the parameter "Max. number of operations(=Num. of objects)". If the input is operated several times within a defined period, the objects will send the relevant telegram value on the bus, which the telegram value is set with the parameter "value send (object "Tele. Operation...-fold)". The objects will be described in the multiple operation parameter chapter.					
5	CH X Long-fold	Output Long-fold, X	1Bit	C,T	1.001 DPT_Switch
It is visible if parameter "Additional object for long operation" selected "yes". Once detected a long operation the object will send telegram value on the bus, the telegram is set with the parameter "value send (object "Tele. Long operation)".					

Table 10 Communication object table "Multiple operation"

6.2.11 Communication object "Shutter control"

The communication object "Shutter Control" will be shown in Fig.6.11.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
#2 0	Disable_A	CH A Disable			1 bit	C	-	W	-	-		Low
#2 1	Output shutter UP/DOWN_A	CH A shutter UP/DOWN			1 bit	C	-	-	T	-		Low
#2 2	Output Stop/lamella adj_A	CH A Stop/lamella adj			1 bit	C	-	-	T	-		Low
#2 3	Upper limit position_A	CH A Upper limit position			1 bit	C	-	W	-	-		Low
#2 4	Lower limit position_A	CH A Lower limit position			1 bit	C	-	W	-	-		Low

Fig.6.11 Communication object "Shutter Control"

6. PARAMETERS AND COMMUNICATION OBJECTS (continued)

6.2.11 Communication object "Shutter control" (continued)

No.	Function	Object name	Data type	Flags	DPT
1	CH X shutter UP/DOWN	Output shutter UP/DOWN, X	1Bit	C,T	1.008 DPT_UpDown
This communication object sends a shutter motion command (up or down) to the bus. Telegram value 0 move up 1 move down					
2	CH X Stop/lamella adj	Output Stop/lamella adj, X	1Bit	C,T	1.007 DPT_Step
This communication object sends a stop command or lamella adjustment. Telegram value 0 stop/adjust up 1 stop/adjust down					
3	CH X Upper limit position	Upper limit position, X	1Bit	C,W	1.002 DPT_Bool
The object is used to upper limit shutter moving. Telegram value 0 no limit moving up 1 limit moving up					
4	CH X Lower limit position	Lower limit position, X	1Bit	C,W	1.002 DPT_Bool
The object is used to lower limit shutter moving. Telegram value 0 no limit moving down 1 limit moving down					

Table 11 Communication object table "Shutter Control"

7. PARAMETER SETTING DESCRIPTION IN THE ETS

7.1 Parameter window "General Setting"

Parameter window "General Setting" can be shown in fig. 5.1. The function is used for limiting the number of sending telegrams to the bus, which can affect the complete device. The device initialization takes about 5s.

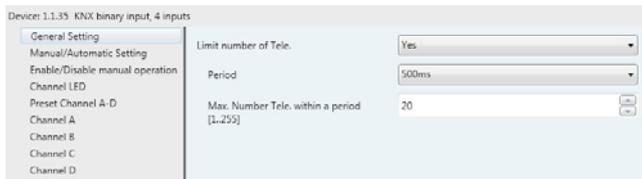


Fig.7.1 Parameter window "General Setting"

Parameter "Limit number of Tele."

It is used to limit the number of sending telegrams to decrease the burthen on the bus. It is possible to set how many telegrams can be sent within an adjustment period.

Options: Yes
No

When yes is selected in this parameter the Period and Max. Number Tele. Within a period parameters appear.

Parameter "Period"

The limit time of sending telegrams is set with the parameter.

Options: 300ms
500ms
...
10min

When device completes initialization in bus voltage recovery, start the observation period, and start count the sent telegrams. As soon as the Max. Number of transmitted telegrams has been reached, no further telegrams are sent on the bus until the end of the observation period. With the start of a new observation period, the telegram counter is reset to zero and the sending of telegrams is permitted again.

Parameter "Max. Number Tele. Within a period"

This parameter sets the number of telegrams which can be sent within an observation period.

Options: 1...255

7.2 Parameter window "Manual/Automatic Setting"

Parameter window "Manual/Automatic Setting" can be shown in fig. 5.2. It is possible to switch between manual operation and automatic operation by pressing the manual/automatic button about 2s. When the manual/automatic operations are switched successfully, the manual/automatic LED will flash for three times. In the manual mode the manual/automatic LED is on. In the automatic mode the manual/automatic LED is off. The devices are in automatic mode after connection to the bus, and the respective manual operation buttons do not have a function.

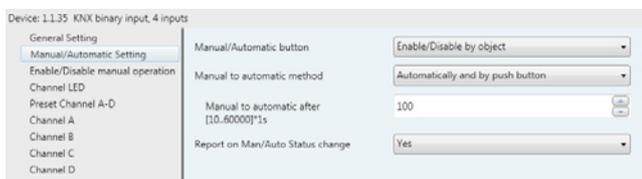


Fig.7.2 Parameter window "Manual/Automatic Setting"

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.2 Parameter window "Manual/Automatic Setting" (continued)

Parameter "Manual/Automatic button"

The parameter defines if the switchover between the "manual operation" and "automatic operation" operating states is disabled or enabled using the manual/automatic button on the binary input.

Options: Enable/Disable by object
Enable

If the enable/disable by object is selected, the "En/Dis Man. /Auto" communication object appears. The object receiving telegram value "0" disable the manual/automatic button, and then the manual / automatic mode cannot be switched. If the object receiving telegram value "1" enable the manual/automatic button, and then the manual/automatic mode can be switched.

If the enable is selected, the manual/automatic button has been enabled.

Parameter "Manual to automatic method"

This parameter defines how long the binary input remains in the "manual operation" state after the "manual/automatic button" has been pressed.

Options: By push button
Automatically and by push button

If the by push button option is selected, the binary input will remain in "manual operation" until the manual/automatic button is pressed again.

If the automatically and by push button option is selected, the binary input will remain in "manual operation" until the manual/automatic button is pressed again or the parameterized Manual to automatic after [10...60000]*1s has timed out.

Parameter "Manual to automatic after [10...60000]*1s"

The parameter appears when automatically and by push button is selected in the parameter manual to automatic method. It is used for setting the time for automatic reset from the "manual operation" to "automatic operation" state after the last push of a button.

Option: 10.....60000s

Parameter "Report on Man/Auto status change"

The parameter defines whether report on man/auto status change, and the current status can be sent to the bus.

Options: Yes
No

If the "yes" option is selected, the "Report Man/Auto Status" communication object appears. The object sends telegram value "1", the current status for manual operation; the object sends telegram value "0", the current status for automatic operation. When operation status changed, the object sends the current status telegram on the bus immediately.

7.3 Parameter window "Enable/Disable manual operation"

Parameter window "Enable/Disable manual operation" can be shown in fig. 5.3. It is used to set whether the respective manual operation buttons do have a function in the manual mode.

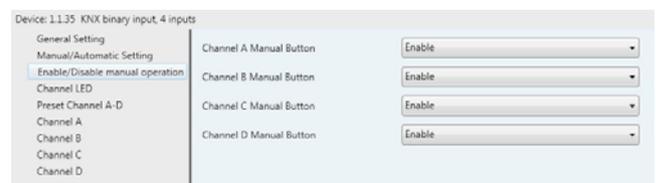


Fig.7.3 Parameter window "Enable/Disable manual operation"

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.3 Parameter window "Manual/Automatic Setting" (continued)

Parameter "Channel A...D Manual button"

This parameter enables or disables the operation of the manual operation button. It is set separately for each channel.

Option: Enable
Disable

If the "enable" option is selected, the manual operation button is enabled. The first time the manual operation button is actuated, closing of the "external contact" is simulated, nothing happens when the button is released. The second time the manual operation button is actuated, opening of the "external contact" is simulated, nothing happens when the button is released.

If the "disable" option is selected, the manual operation button is disabled, and the manual operation buttons do not have a function. On disabled channels the respective channel LED will not react if the respective manual operation button is pressed.

For safety-relevant systems such as for fault signals the button functions are inhibited using the disable option.

7.4 Parameter window "Channel LED"

Parameter window "Channel LED" can be shown in fig.5.4. It used to set channel LED indicate as a normal or inverted function for binary input in manual or automatic mode.

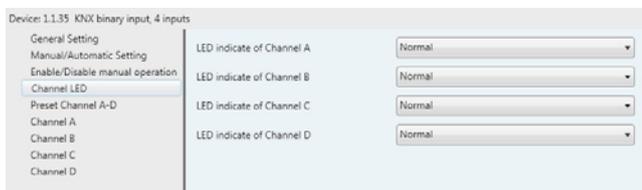


Fig.7.4 Parameter window "Channel LED"

Parameter "Channel A...X LED"

This parameter is used to represent the LED display as a normal or inverted function. It is set separately for each channel.

Option: Normal
Inverted

If the Normal option is selected represent the LED display as a normal function, then contact is closed(signal is present), LED is on; Contact is open (no signal), LED is off.

If the inverted option is selected represent the LED display as a inverted function, then contact is closed(signal is present), LED is off; Contact is open (no signal), LED is on.

7.5 Parameter window "Preset Channel A~D"

Parameter window "Preset Channel A~D" can be shown in fig. 5.5. Channel function of Binary input can select two ways of working. If the separately adjustable working way is selected, each channel can be set separately. If the jointly adjustable working way is selected, two channels can be set to work jointly, such as channel A and channel B jointly, channel C and channel D jointly. Each jointly adjustable can be set separately, which is used to set dimming and shutter functions. It is able to switch and dimming together with one button operation input, and it is also able to move and stop shutter with one button operation.



Fig.7.5(1)Parameter window "Preset Channel A~D"(separately adjustable working mode)

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

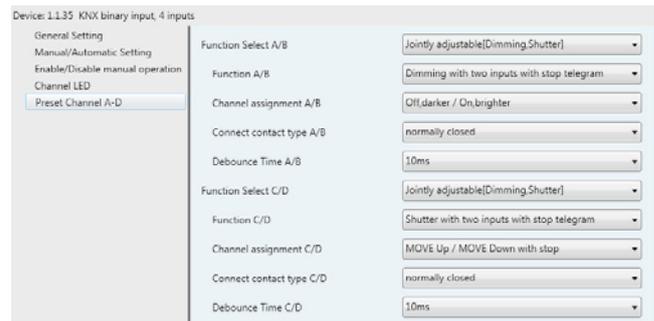


Fig.7.5(2)Parameter window "Preset Channel A~D" (Jointly adjustable working mode)

7.5.1 Jointly adjustable working mode for binary input

In the jointly adjustable working mode for binary input, each jointly adjustable can be set separately, and parameters and objects which are assigned to each jointly adjustable are the same. Using channel A/B jointly adjustable as an example described, the parameters can be shown in fig.5.5(2).

Parameter "Function Select X/Y"

This parameter set work ways of channel X/Y.

Options: Separately adjustable
Jointly adjustable (dimming, shutter)

If the "Jointly adjustable (dimming, shutter)" option is selected, channel X/Y for jointly adjustable work mode, in the follow parameters appear.

Parameter "Function X/Y"

The parameter set the functions of channel X/Y in the jointly adjustable, which is used to set dimming or shutter.

Option: Dimming with two inputs with stop telegram
Shutter with two inputs with stop telegram

The jointly adjustable function of channel X/Y can realize the dimming or the shutter via two objects. In automatic operation mode, channels input for 9~265V. In manual operation mode, channels input by manual operation buttons.

Parameter "Channel assignment X/Y"

The parameter set the function assignment of channel X/Y in the jointly function for dimming.

Option: Off, darker / on, brighter
On, brighter / off, darker
Toggle, darker / Toggle, brighter
Toggle, darker / Toggle, brighter

If the "Off, darker / On, brighter" option is selected, represent input signal for "off, darker" when contact of channel X is closed, input signal for "stop darker" when contact of channel X is open. However, channel Y is opposite, Input signal for "on, brighter" when contact of channel Y is closed, input signal for "stop bright" when contact of channel Y is open. In the function assignment of channel X/Y other options are similar with the above option. The on/off formation is sent to the bus via the object "switch, X/Y", the darker/brighter formation is sent to the bus via the object "dimming, X/Y".

Here setting the function assignment of channel X/Y in the jointly function for shutter.

Option: MOVE Down/MOVE Up with stop
MOVE Up/MOVE Down with stop

If the "MOVE Down/MOVE Up with stop" option is selected, the shutter move down when contact of channel X is closed, the shutter move up when contact of channel Y is closed. When the contact of channel X/Y is open, the shutter stops moving down/up.

Another option is similar with the above option. The shutter moves up/down via the object "Shutter move up/down, X/Y". To stop shutter moving via the object "shutter stop, X/Y".

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.1 Jointly adjustable working mode for binary input (continued)

Parameter "Connect contact type X/Y"

The parameter defines whether the input contact is a normally closed or normally open contact when actuated for channels x/y.

- Options: Normally closed
- Normally open

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

Parameter "Debounce Time X/Y"

This parameter is used to set the debounce time for channel X/Y. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

- Options: 10ms/20ms/...../150ms

7.5.2 Separately adjustable working mode for binary input

In the separately adjustable working mode for binary input, each channel can be set separately, and parameters and objects which are assigned to each channel are the same. Using channel A as an example described.

Parameter window "Channel X"

The parameter window "channel X" can be shown in fig.5.6. The channel operating mode is set with this parameter.

- Option: No function
- Switch
- Switch/Dimming
- Value / Forced output
- Scene Control
- Switching sequence
- Counter
- Multiple operation
- Shutter control

Each operating mode is assigned to the corresponding parameters and objects, the follow chapters in detail.



Fig.7.6 Parameter window "Channel X"

7.5.2.1 Switch operating mode

Parameter window "Switch operating mode" can be shown in fig. 5.4 and fig. 5.9. No distinguish between long and short operation in Fig.5.7. It is opposite in Fig. 5.9.

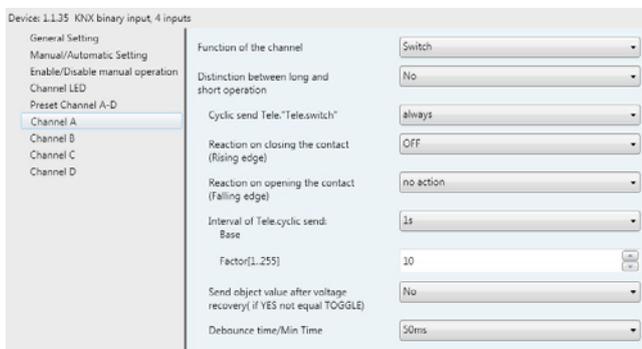


Fig.7.7 Parameter window "Switch"(No distinction long/short operation)

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)


7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.1 Switch operating mode (continued)

This parameter defines whether the input distinguishes between a short and long operation. If "yes" is selected, there is a delay after opening/closing the contact to determine whether there is a short or long operation. Only then is a possible reaction triggered.

The following diagram illustrates the function.

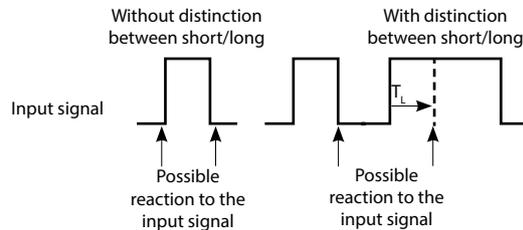

- Option: Yes
- No

The long operation in the below chapters are the same with here. TL

Note:

The long operation in the below chapters are the same with here. TL is the period after which a push button action is recognised as a long operation.

Parameter "Cyclical send Tele. "Tele. Switch"

This parameter is visible if there is no distinction between a short and long operation. It is able to set whether to send the current value of object "Switch, X" cyclically on the bus.

- Options: No
- Always
- If switch off
- If switch on

If the parameter value "always" is selected, the object sends cyclically on the bus, regardless of its value is 0 or 1. If the parameter value "if switch off" or "if switch on" is set, only the corresponding object value is sent cyclically.

Parameter "Reaction on closing the contact(rising edge)" / "Reaction on opening the contact(falling edge)"

This parameter is visible if there is no distinction between a short and long operation. There is set the reaction on closing (rising edge) or opening (falling edge) the contact.

- Options: No action
- Off
- On
- Toggle
- Stop cyclic send

If "Toggle" is selected, the current operation is inverted in next operation. For example, if the current operation is "On", the next operation will become "off".

If "Stop cyclic transmission" is selected, it will stop the cyclical sending telegram till there is a new object value to be sent. If "No action" is selected, it will not implement any operation.

Parameter "Interval of Tele. cyclic send: Base x Factor"

This parameter is used to set the interval time between two telegrams that are sent cyclically, it is visible if cyclical sending has been set. Transmission cycle time =Basex Factor.

- Base options: 0.5s/1s/ .../1h
- Factor options: 1...255

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.1 Switch operating mode (continued)

It can be set whether to send the value of the object "Tele. Switch, X" on the bus after bus voltage recovery, this parameter is visible if there is no distinction between a short and long operation.

- Options: Yes
- No

If "Yes" is selected, a value is however only sent on the bus if the value "toggle" has not been set in either of the two parameters "Reaction on closing the contact (rising edge)/ opening the contact (falling edge)". If one of the two parameters has the value "toggle", no values are sent in general on the bus after bus voltage recovery. If "No reaction" or "Stop cyclic transmission" is selected, there is no values are sent on the bus either.

Parameter "Debounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

- Options: 10ms/20ms/...../150ms/Min. operation

The "minimum operation" time can only be set when there is no distinction between a short and a long operation. This option is different from others, the Minimum time of the contact operation is not only means the effective time when contact close, but also the contact open. The parameter window can be shown in Fig. 5.8:



Fig 7.8 Parameter window "X-Mini Time"

Parameter "Minimum operation time : Base x Factor"


The minimum time of the contact operation is: Base x Factor

- Base options: 100ms/...../1
- Factor options: 1~255

Note:

The parameter window "Debounce time" and the explanation of option "Min. operation" are the same with here in the below chapters.

To prevent the debounce process: If a pulse edge is detected at the input, the input reacts to it immediately (e.g. by sending a telegram). The debounce time TD starts simultaneously. The signal at the input is not evaluated within the debounce period. As shown below:

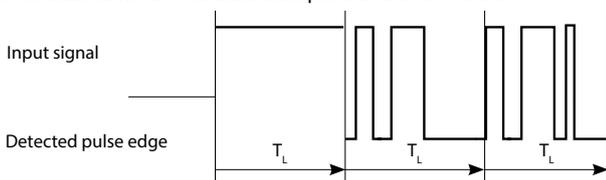

Once a pulse edge has been detected at the input, further edges are ignored for the duration of the debounce time TD. The process of preventing debounce in the below chapters are the same with here. TD is the effective time of a pulse edge input, namely the period after a input signal is recognised as a operation.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.1 Switch operating mode (continued)

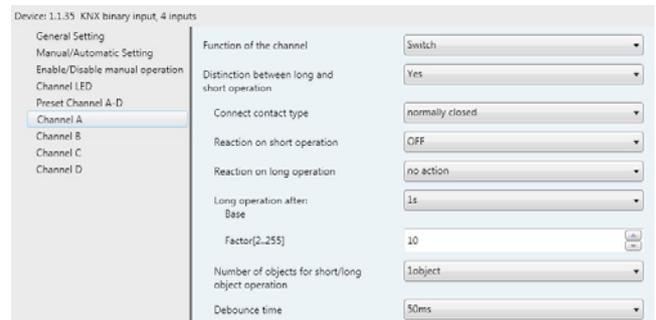


Fig.7.9 Parameter window "Switch"(Distinction long/short operation)

Parameter "Connected contact type"

This parameter is visible if there is distinction between a short and long operation. It is used to set whether the input contact is a normally closed or normally open contact.

- Options: Normally open
- Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

Parameter "Reaction on short operation" or "Reaction on long operation"

The parameter is visible if the option yes has been selected with the parameter distinction between long and short operation. It is used to set if the object value is ON, OFF, TOGGLE, or if no action should be occur. The object value is updated as soon as it has been determined if a short or long operation has occurred.

- Options: No action
- Off
- On
- Toggle

Parameter "Long operation after: base x Factor"

The parameter is visible if the option yes has been selected with the parameter distinction between long and short operation. Here defines the period TL after which an operation is interpreted as "long".

TL = Base x Factor

- Base options: 100ms/1s/...../1h
- Factor options: 2~255

Parameter "Number of objects for short/long object operation"

The parameter is visible if the option yes has been selected with the parameter distinction between long and short operation. It is able to set one or two communication objects for short/long operation. When one communication object is set, long and short operations share a communication object. When two communication objects are set, long and short operations use a communication object separately.

- Options: 1object
- 2objects

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)**7.5 Parameter window "Preset Channel A~D" (continued)****7.5.2 Separately adjustable working mode for binary input (continued)****7.5.2.2 Switch/Dimming operation mode**

Parameter window "Switch/Dimming" can be shown in Fig.5.10. It is visible when Function of the channel "Switch/Dimming" is selected. It is possible that switch and dimming the lighting via a button operation.

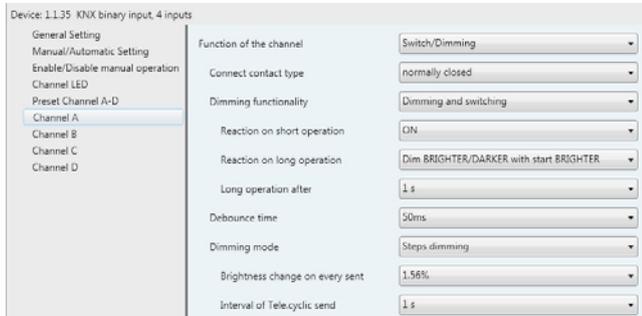


Fig.7.10 Parameter window "Switch / Dimming. X"

Parameter "Connect contact type"

This parameter defines whether the input contact is a normally closed or normally open contact.

Options: Normally open
Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

Parameter "Dimming functionality"

This parameter is used to define whether the lighting can only be dimmed or whether it also should be permitted switching. In this case a long operation actuated dimming and a short operation actuates switching.

Options: Dimming and switching
Only dimming

If "Only dimming" is selected, there is no distinction between a short and long operation. Therefore the dimming is carried out immediately after an operation action; there is not required to determine whether the operation is long or short. If "Dimming and switching" is selected, it will distinguish the operation is a short or long operation. In this case, the lighting is dimmed via a long operation and switched via a short operation.

Parameter "Reaction on short operation"

The parameter is visible if the option dimming and switching has been selected with the parameter dimming functionality. It is used to set if the value of object "Switch, X" is ON, OFF, TOGGLE, or if no action should be occur with short operation.

Options: No action
Off
On
Toggle

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)**7.5 Parameter window "Preset Channel A~D" (continued)****7.5.2 Separately adjustable working mode for binary input (continued)****7.5.2.2 Switch/Dimming operation mode (continued)****Parameter "Reaction on long operation"**

The parameter is visible if the option dimming and switching has been selected with the parameter dimming functionality. It is used to set if the object "dimming, X" sends a brighter or darker telegram with long operation. When the operation is over, the object will send a stop dimming telegram.

Options: Dimming BRIGHTER
Dimming DARKER
Dim BRIGHTER / DARKER with start BRIGHTER
Dim BRIGHTER / DARKER with start DARKER

If the option "Dim BRIGHTER / DARKER with start DARKER" is selected, the dim command which is the opposite to the last dim command is set, and the first action is dimming darker with long operation. Other options are similar with the option.

Parameter "Long operation after"

The parameter is visible if the option dimming and switching has been selected with the parameter dimming functionality. Here defines the period TL after which an operation is interpreted as "long".

Options: 0.3s/0.5s/...../10s

Parameter "Reaction on operation"

The parameter is visible if the option only dimming has been selected with the parameter dimming functionality. There is no distinction between short and long operation. Therefore the object "dimming, X" will send a brighter or darker telegram after an operation trigger. When the operation is over, the object will send a stop dimming telegram.

Options: Dimming BRIGHTER
Dimming DARKER
Dim BRIGHTER / DARKER with start BRIGHTER
Dim BRIGHTER / DARKER with start DARKER

Parameter "Debounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

Options: 10ms/20ms/...../150ms/Min. operation

The "Min. operation" can be set in fig.5.8 if the option only dimming has been selected with the parameter dimming functionality.

Parameter "Dimming mode"

The parameter sets whether the dimming mode is start-stop dimming or steps dimming.

Options: Start-stop dimming
Steps dimming

If the option start-stop dimming is selected, it will start the dimming mode with a bright or darker telegram and end the dimming mode with a stop dimming telegram at the end of operation. The dimming telegram need not be cyclically sent in start-stop dimming mode.

If the option step dimming is selected, the dimming telegram is sent cyclically during a long operation. The stop telegram ends the dimming process at the end of operation.

Parameter "Brightness change on every sent"

The parameter is visible if the option step dimming has been selected with the parameter dimming mode. It is used to set the change brightness (in percent) which is cyclically sent with every dim telegram.

Options: 100%
50%
...
1.56%

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

■ 7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.2 Switch/Dimming operation mode (continued)

Parameter "Interval of Tele. Cyclic send"

The parameter is visible if the option step dimming has been selected with the parameter dimming mode. It is used to set the interval time between two telegrams that are sent cyclically during a long operation.

Options: 0.3s
0.5s
...
10s

7.5.2.3 Value/Forced output

Parameter window "Value/Forced output" can be shown in Fig. 5.11. It is visible when Function of the channel "Value/Forced output" is selected.



Fig.7.11(1) Parameter window "Value / Force output, X" (Distinction long/short operation)

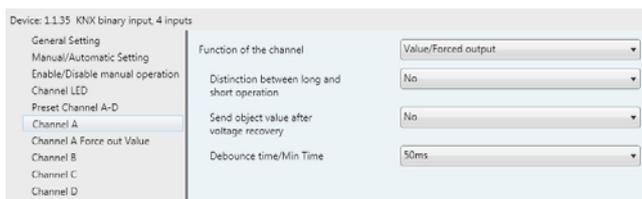


Fig.7.11(2) Parameter window "Value / Force output, X" (No distinction long/short operation)



Fig.7.11(3) Parameter window "Force out Value, X"

Parameter "Distinction between long and short operation"

This parameter defines whether the input distinguishes between a short and long operation. If "yes" is selected, there is a delay after opening/closing the contact to determine whether there is a short or long operation. Only then is a possible reaction triggered.

Options: Yes
No

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

■ 7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.3 Value/Forced output (continued)

Parameter "Connect contact type"

This parameter is visible if there is distinction between a short and long operation. It is used to set whether the input contact is a normally closed or normally open contact.

Options: Normally open
Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

Parameter "Long operation after: Base × Factor [2...255]"

The parameter is visible if the option yes has been selected with the parameter distinction between long and short operation. Here defines the period TL after which an operation is interpreted as "long".

TL = Base × Factor

Base options: 100ms/1s/...../1h
Factor options: 2~255

Parameter "Send object value after voltage recovery"

This parameter is visible if there is no distinction between a short and long operation as shown in fig. 5.11(2). It can be set whether to send the value of the object "Output..., long/falling (short/rising), X" on the bus after bus voltage recovery,

Options: Yes
No

If "Yes" is selected, the object value will be sent on the bus after bus voltage recovery.

Parameter "Reaction on operation/rising edge" and "Reaction on long operation/falling edge"

If there is distinction between short and long operation, the parameter is used to define the data type that is sent when the contact is actuated with short or long operation. If no distinction, it defines the data type that is sent when the contact is actuated with rising edge or falling edge. Parameter set as shown in Fig. 5.11(3).

Options: No reaction
1 bit value [0/1]
...
4 byte value [0...4294967295]

Parameter "Output value[...]"

Parameter set as shown in fig. 5.11(3). Here defines the value which is sent with the operation. The value range depends on the data type set for the parameter "Reaction on operation/rising edge" or "Reaction on long operation/falling edge"

Parameter "Debounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

options: 10ms/20ms/...../150ms/Min. operation

The "Min. operation" can be set in fig.5.8. It can only be set when there is no distinction between a short and a long operation.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)
 7.5.2 Separately adjustable working mode for binary input (continued)
 7.5.2.4 Scene control

Parameter window "Scene control, X" will be shown in Fig. 5.12, it will be visible when the function of the channel "Scene control" is selected. This function enables the states of several actuator groups to be recalled and stored.

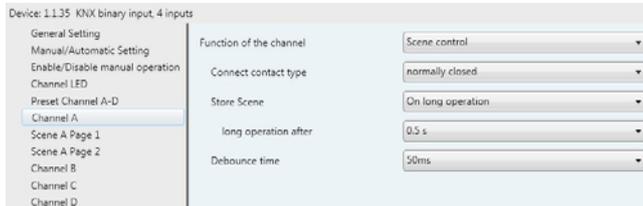


Fig.7.12 (1)Parameter window "Scene control, X"

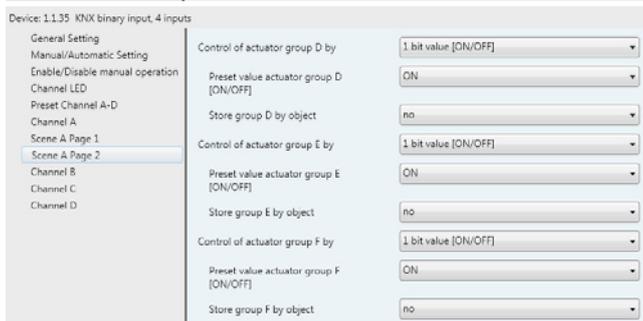
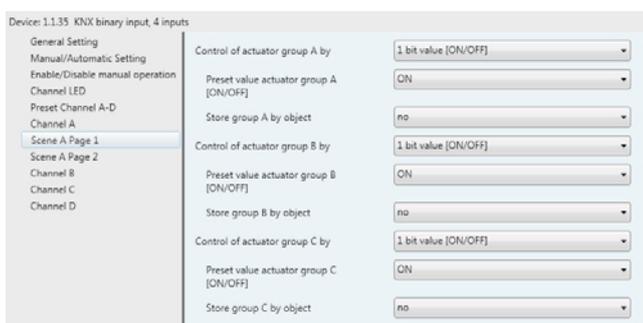


Fig.7.12(2)Parameter window "Scene X Page 1/2, X"

Parameter "Connect contact type"

This parameter is used to set whether the input contact is a normally closed or normally open contact.

- Options: Normally open
- Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally close connect type is just opposite.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)
 7.5.2 Separately adjustable working mode for binary input (continued)
 7.5.2.4 Scene control (continued)

Parameter "Store scene"

This parameter defines the manner in storing of the current scene.

- Options: No
- On long operation
- With object value= "1"
- On long operation and object value= "1"

The manner of storing scene in the following table provides an overview:

Parameter value	Behaviour
On long operation	<p>As soon as a long operation is detected, the object "store scene, X" sends the value "1" on the bus and the objects "Output...group A...F" send read out telegram. If the object "store scene, X" have received a telegram "1", then the object value "1" will not send out again when long operation. The objects "Output..., group A...F" can be modified via the bus for the duration of the long operation.</p> <p>Once the long operation has finished, the object "Store scene, X" sends the value "0" on the bus and the current object value can not be modified.</p> <p>On the long operation, If the object "Store scene, X" receives the value "0" on the bus, even the long operation has not finished, the current object value also can't be modified.</p>
If object value= "1"	<p>If the object "Store scene, X" receives the value "1", the object values "Output..., group A...F" are read out via the bus. Then the objects "Output..., group A...F" can be modified via the bus.</p> <p>On receipt of the object value "0", the current object values can't be modified.</p>
On long operation and object value= "1"	<p>If the object "Store scene, X" receives the value "1" on the bus, on the next long operation, the objects "Output..., group A...E" send read out the telegram. The object values "Output..., group A...E" can be modified via the bus for the duration of the long operation.</p> <p>If the object "Store scene, X" receives the value "0" on the bus, the current object value can't be modified; or the long operation has finished, the object "Store scene, X" sends the value "0" on the bus and the current object values also can't be modified.</p> <p>Provided that a "1" has not been received at the object "Store scene, X", a long operation is interpreted in the same way as a short operation, i.e. recall scenes.</p>

Parameter "Long operation after"

This parameter is visible when the parameter "Store scene" is "On long operation" or "On long operation and object value= "1"", it defines the period TL here, after which an operation is interpreted as "long".

- Options: 0.3s/0.5s/...../10s

Parameter "Debounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

- Options: 10ms/20ms/...../150ms

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)
7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.4 Scene control (continued)

Parameter "Control of actuator group A...F by"

This parameter is able to set various data types for each of 6 actuator groups A...F. The actuator groups can be controlled via max. 6 individual objects. Data types of the object "Output 1bit/1byte/2byte, group A...F" depend on the data types which has been selected for the actuator groups.

- Options: 1bit value [ON/OFF]
- 1byte value[scale 0...100%]
- 1byte value[0...255]
- 2byte value [float]

Parameter "Preset value actuator group A...F"

The parameter is used to set the preset value for each actuator group A...F. The value range depends on the data type set for the parameter "control of actuator group A...F by".

Parameter "Store group A...F by object"

It is used to set whether the preset value is allowed to be modified via the bus.

- options: Yes
- No

If the option yes is selected, the preset value can be modified via the object "Output 1bit/1byte/2byte, group A...F". If the bus voltage recovery this value will be modified as preset value. That is, the stored value is not saved.

7.5.2.5 Switching sequence

Parameter window "Switching sequence" can be shown in Fig. 5.13. It is visible if the function of the channel "Switching sequence" is selected. The switching sequence function enables up to five switch objects to be modified in a defined sequence by actuation of just a single input. Thus, up to reach five actuators or actuator groups can be switched in a defined sequence.

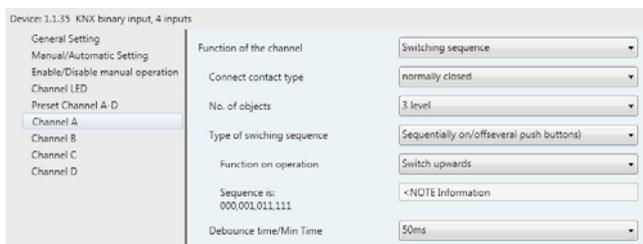


Fig.7.13 Parameter window "Switching sequence, X"

Parameter "Connect contact type"

This parameter is used to set whether the input contact is a normally closed or normally open contact.

- Options: Normally open
- Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally closed connect type is just opposite.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)
7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.5 Switching sequence (continued)

Parameter "No .of objects"

The parameter set the number of communication objects has the same meaning the number of levels (max.5) The communication objects "level- 1" to "level-5" are enabled accordingly.

- Options: 2level
- 3level
- 4level
- 5level

For example, parameter "3level" means there are 3 communication objects: "level-1", "level-2", and "level-3". The first operation modified the value of "level-1", the second operation modified the value of "level-2", the third operation modified the value of "level-3", the fourth from modified the value of "level-3"....., the switch sequence is: 000,001,011,111,011.....The data send on the bus is the value of the communication object that after modified, which is the alternative data.

The communication object "level increment/decrement, X" is used to increase or decrease the switch level,,1 means increase 1 level and „0" means decrease.

The follow table describes in detail (A 3 Level sequence as an example, the type is sequentially on/off (one push button)):

Switching sequence	Value of the communication objects			
	Binary code	Level-3	Level-2	Level-1
Input operation number				
0	000	Off	Off	Off
1	001	Off	Off	On
2 current operation	011	Off	On	On
3	111	On	On	On
4	011	Off	On	On
...

In the above table, the current operation is 2; the next time will be to operation 3. But if the object "level increment/decrement, X" receive '1' (Increase a Level) the next time will jump one time forward ,and the next time will be to operation 4; also if the object "level increment / decrement, X" receive '0' (decrement a level) the next time will jump one time backward ,and the next time will be to position 2(no change).

In this function ,it only send the changed bit(This code value compare to the operation -1 value), for example from operation 2 to operation 3, The Most Significant Bit is changed, the object according to Level 3 will send value '1'. Although the number of levels is different, their processes are similar in the case of the same switch sequence type.

Parameter "Type of switching sequence"

The switching sequence can be selected here. Each sequence has other object values for each switching level.

- Options: Sequentially on/off (one push button)
- Sequentially on/off (several push buttons)
- All combinations

Take "3level" as the example to explain the difference between them (send the changed data on the bus, data "0"= OFF, "1"=ON):

Type of switching sequence	Example
Sequentially on/off (one push button)	...- 000-001-011-111-011-001-...
Sequentially on/off (several push buttons)	000-001-011-111or 111-011-001-000
All combinations	...- 000-001-011-010-110-111-101-100-... (Gray code)

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)**7.5 Parameter window "Preset Channel A~D" (continued)****7.5.2 Separately adjustable working mode for binary input (continued)****7.5.2.5 Switching sequence (continued)****Parameter "Function on operation"**

The parameter is only visible in the switching sequence "Sequentially on/off (several push buttons)". It can be set whether an operation of the push button switches up or down a level.

Options: Switch upwards
Switch downwards

The implement direction of the parameter "Switch upwards" is "000-001-011-111", the implement direction of the parameter "Switch downwards" is "111-011-001-000". After the bus voltage recovery, the current value is 000, if the parameter "Switch downwards" is selected, the effect will be invisible when operation, then it is possible to operation after switch up a few levels by the object "level increment/decrement, X".

Parameter "Sequence is..."

This parameter indicate the manage process of switching sequence.

Parameter "Debounce time/Min Time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

Options: 10ms/20ms/...../150ms/Min. operation

The "Min. operation" can be set in fig.5.8.

7.5.2.6 Counter

Parameter window "Counter, X" can be shown in Fig. 5.14. It is visible when the input is operated with the function "counter".

Using the "Counter" function, the device is able to count the number of pulse edges at the input. A "differential counter" is therefore available if required in addition to the standard counter. Both counters are triggered by counting pulses but otherwise operate independently of each other.

The data width which has been selected for both counters can be set to same or different.

The function of differential counter is similar with the main counter. The different is that the differential counter can reset the counter value (count from the initial value) and stop counting after overflow via the bus. The parameters of main counter can be set in fig. 5.14(1) and fig. 5.14(2). The parameters of differential counter can be set in fig. 5.14(1) and fig. 5.14(3). The parameters set as follows:

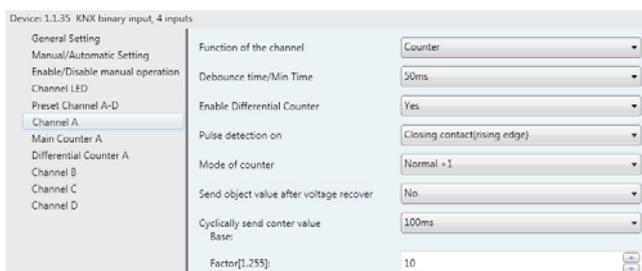


Fig.7.14(1) Parameter window "Counter, X"

Parameter "Debounce time/Min Time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

Options: 10ms/20ms/...../150ms/Min. operation

The "Min. operation" can be set in fig.5.8.

Parameter "Enable differential counter"

The parameter set whether enable the differential counter.

Options: Yes
No

If this parameter is set to "yes", the parameter window fig. 5.14(3) is displayed.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)**7.5 Parameter window "Preset Channel A~D" (continued)****7.5.2 Separately adjustable working mode for binary input (continued)****7.5.2.6 Counter (continued)****Parameter "Pulse detection on"**

The parameter set how the input pulse is generated.

Options: Closing contact (rising edge)
Opening contact (falling edge)
Both (rising and falling)

If "Closing contact (rising edge)" is selected, the input pulse is only generated with a closing contact (rising edge).

If "Opening contact (falling edge)" is selected, the input pulse is only generated with a opening contact (falling edge).

If "Both (rising and falling)" is selected, the input pulse is generated with a opening contact (falling edge) and a closing contact (rising edge).

Parameter "Mode of counter"

The mode of counting of the counter is set with this parameter.

Options: Normal+1
Manual set

If "Normal+1" is selected, the counter value is incremented by one with generated a input pulse;

If "Manual set" is selected, the following two parameters appear.

Parameter "Divider: number of input pulse for one counter step [1...10000]"

The parameter is visible if the option manual set has been selected with the parameter mode of counter. It is used to set the number of input pulses required to generate a counter pulse for the main and differential counter. For example, the counter states are incremented by 1 after 5 input pulses.

Options: 1 ... 10000

Parameter "Factor: one counter step changes counter value by [-10000...10000]"

The parameter is visible if the option manual set has been selected with the parameter mode of counter. It is used to set the level of change on the counter state with each counter pulse for the main and differential counter.

Options: -10000...10000

Negative entry e.g. -5, defines a decrementing counter, e.g. -100,0. Positive entry e.g. 10, defines an incrementing counter, e.g. 0,100

Parameter "Send object values after voltage recover"

The parameter set whether the device sends the object value "Mcounter: counter value, X" on the bus after bus voltage recover. If the differential counter has been enabled, it also sends the object value "Dcounter: counter value, X" on the bus.

Options: Yes
No

The main and differential counters are reset to the starting value in the bus voltage failure.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

■ 7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.6 Counter (continued)

Parameter "Cyclically send counter value: Base × Factor"

The parameter is used to set the interval time between two telegrams that are sent cyclically. Transmission cycle time=Base × Factor.

Base options: 100ms/1s/1min/1h

Factor options: 1...255

Note:

Counting rules (the mode of counter):

If a decrementing counter is defined with the parameter "factor: one counter step changes counter value by [-10000...10000]", namely negative counting, the initial value is for the high limit value. The device counts from the high limit to low limit. When the count value is less than low limit value, it will overflow. Then the new count value=the count value – the low limit value + the high limit value + 1, and the device will start continually counting from the new count value.

If an incrementing counter is defined with the parameter "factor: one counter step changes counter value by [-10000...10000]", namely positive counting, the initial value is for the low limit value. The device counts from the low limit to high limit. When the count value is greater than the high limit, it will overflow. Then the new count value=the count value - the high limit value + the low limit value - 1, and the device will start continually counting from the new count value.

The application program automatically compares the counter limit value1 and limit value 2, looks for the high limit value from both set limits, and commences to count up or down to suit the counting direction. (About the high / low limit value parameters are described below). The mode of counter is the same for the main and differential counter.

It is important to ensure that both limit values are set to different values. If identical end limit values are entered the behaviour of the counter cannot be defined.

When disable the counter function, both input scanning and object in/out are disabled. Any input status change will be ignored.



Fig.7.14 (2) Parameter window "Main Counter X"

Parameter "Data width of counter"

The data width of the main counter is selected with this parameter. The counting range and the data type of the object "Mcounter: Counter value, X" depend on this parameter setting.

Options: 8bit [0...255]

16bit [-32768...32767]

16bit [0...65535]

32bit [-2147470000...2147470000]

Parameter "Counter limit value 1/2"

The parameter is used to set the counter limit value. The limit value 1 is preset for every data type to 0. The limit value 2 is preset which depend on the data width of main counter selected, and the input field of limit value 2 can be freely edited.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

■ 7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.6 Counter (continued)

Parameter "Send counter value on change"

This parameter is used to select if a change of the counter state is to be sent for the main counter.

Options: Yes

No

Parameter "Send counter value cyclically"

This parameter is used to determine if the counter values are to be sent cyclically on the bus for the main counter. The interval time between two telegrams that are sent cyclically to be set with the parameter "Cyclically send counter value: Base × Factor".

Options: Yes

No

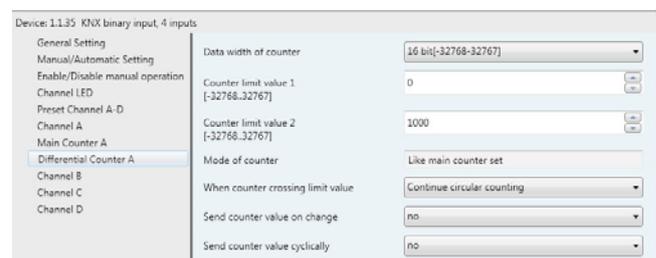


Fig.7.14(3) Parameter window "Differential Counter X"

Parameter "Data width of counter"

The data width of the differential counter is selected with this parameter. The counting range and the data type of the object "Dcounter: Counter value, X" depend on this parameter setting.

Options: 8bit [0...255]

16bit [-32768...32767]

16bit [0...65535]

32bit [-2147470000...2147470000]

Parameter "Counter limit value 1/2"

The parameter is used to set the counter limit value 1/2. The limit value 1/2 are preset which depend on the data width of differential counter selected, and the input field of limit value 1/2 can be freely edited.

Parameter "Mode of counter"

The parameter indicates the counting mode of differential counter is the same with the main counter.

Parameter "When counter crossing limit value"

This parameter sets the reaction when a limit value is reached. Options: Continue circular counting Stop until reset

If "Continue circular counting" is selected, the counter continues circular counting. If the actual value falls below the low limit value (only possible with a decrementing counter) or exceeds the high limit value (only possible with an incrementing counter), the new count value is set to the start count value and the pulse count is continued. The new count value is described in the above chapters.

If "Stop until reset" is selected, the counter stops counting and waits for a reset. If the actual value falls below the low limit value (only possible with a decrementing counter) or exceeds the high limit value (only possible with an incrementing counter), the object "Dcounter: stop, X" will send telegram "0" on the bus, and the counter stops counting, until the counter value is reset or the object "Dcounter: stop, X" receiving telegram "1". If the object "Dcounter: stop, X" receiving telegram "1", the counter continues circular counting from the new count value. If the counter value is reset, it will count from the initial value of the parameter. The new count value is described in the above chapters.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.6 Counter (continued)

Parameter "Send counter value on change"

This parameter is used to select if a change of the counter state is to be sent for the differential counter.

- Options: Yes
- No

Parameter "Send counter value cyclically"

This parameter is used to determine if the counter values are to be sent cyclically on the bus for the differential counter. The interval time between two telegrams that are sent cyclically to be set with the parameter "Cyclically send counter value: Base x Factor".

- Options: Yes
- No

7.5.2.7 Push button with multiple operation

Parameter window "Multiple operation, X" can be shown in Fig. 5.15. It is visible when the input is operated with the function "Multiple operation". Enable the function, if the input is operated several times within a defined period, a defined object value can be modified by the number of operations. In this manner for example, different light scenes are possible by multiple pushes of a button.

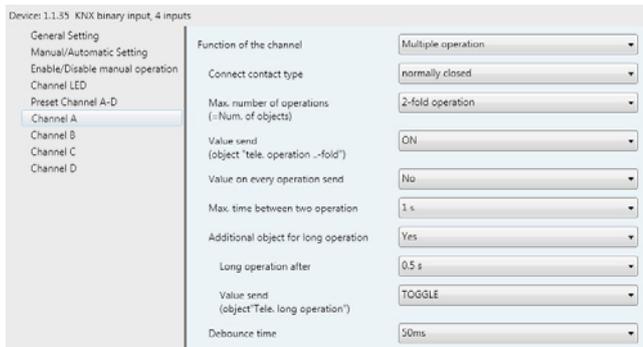


Fig.7.15 Parameter window "Multiple operation, X"

Parameter "Max. number of operations [=Num. of objects]"

This parameter is used to set the max. number of operations. The number is equal to the "Output X-fold" of communication objects.

- Options: Single operation
- 2-fold operation
- 3-fold operation
- 4-fold operation

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.2 Separately adjustable working mode for binary input (continued)

7.5.2.7 Push button with multiple operation (continued)

Parameter "Max. number of operations [=Num. of objects]" (continued)

The following describes in detail (3- fold operation as an example, the value send for toggle): If the option 3-fold operation is selected, there are three objects value appear, and they are not independent, meanwhile they send value according to a certain sequence (1-fold -> 2-fold -> 3-fold). In order to state clear, the following parameter "Value on every operation" set YES, if operation count reach Max. number of operations in a certain time (every operation time <1s), the first time of reach Max. number of operations, 3-fold send the same value with 1-fold and 2-fold, and the next time, 3 fold will carry out toggle action. In the certain time, if you don't reach Max. number of operations, the next operation will generate a new fold from 1-fold, and carry out toggle action. The following two forms state process of operation:

Operation	OP		OP		OP		OP		OP	
Time		<1s		<1s		<1s		<1s	
Object	1f		2f		3f		3f_T		3f_T
Object value	1		1		1		0		0

Note:

- OP: operation
- 1f: 1-fold object 2f: 2-fold object 3f: 3-fold object
- 3f_T: 3-fold object value toggle

Operation	OP		OP		OP		OP		OP	
Time		>1s		<1s		<1s		<1s	
Object	1f		1f_T		2f		3f		3f_T
Object value	1		1		1		0		1

Note:

- OP: operation
- 1f: 1-fold object 2f: 2-fold object 3f: 3-fold object
- 1f_T: 1-fold object value toggle 3f_T: 3-fold object value toggle

If the parameter "Value on every operation" set NO, It will send the last object value after Max. time (Be set in following parameter) elapsed.

Parameter "Value send (object "Tele. Operation ...-fold")"

This parameter sets which object value is to be sent. The settings ON, OFF and Toggle are possible. With Toggle the current object value is inverted.

- Options: On
- Off
- Toggle

Parameter "Value on every operation send"

The parameter sets whether the respective object value is updated and sent with each operation.

- Options: Yes
- No

If "Yes" is selected, the object value is updated and sent with each operation. With "3-fold operation" as an example, the object "output 1-fold" (after 1st operation), "output 2-fold" (after the 2nd operation) and "output 3-fold" (after the 3rd operation) are sent.

If "No" is selected, the last object value will be sent after Max. time between two operation elapsed.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.1 Jointly adjustable working mode for binary input (continued)

7.5.2.7 Push button with multiple operation (continued)

Parameter "Max. time between two operation"

This parameter sets the maximum allowed interval time between two operations. If no further operations occur within this time, a new fold will be generated from 1-fold with the next operation.

- Options: 0.3s
- 0.5s
- ...
- 10s

Parameter "Additional object for long operation"

The parameter sets whether additional communication object for long operation.

- Options: Yes
- No

If the option yes is selected in this parameter, the following two parameters appear.

Parameter "Long operation after"

This parameter is visible if the parameter "additional object for long operation" is "yes", it defines the period TL here, after which an operation is interpreted as "long".

- Options: 0.3s/0.5s/...../10s

Parameter "Value send (object "Tele. Long Operation")"

This parameter is visible if the parameter "additional object for long operation" is "yes". It is used to set the value of object "output long-fold" that is to be sent on the bus with longer operation of input. The settings ON, OFF and Toggle are possible. With Toggle the current object value is inverted.

- Options: On
- Off
- Toggle

Parameter "Denounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

- Options: 10ms/20ms/...../150ms

7.5.2.8 Shutter Control

Parameter window "Shutter control, X" can be shown in fig. 5.16. It is visible when the input is operated with the function "shutter control". The function enables the operation of blinds and shutters with buttons or switches.

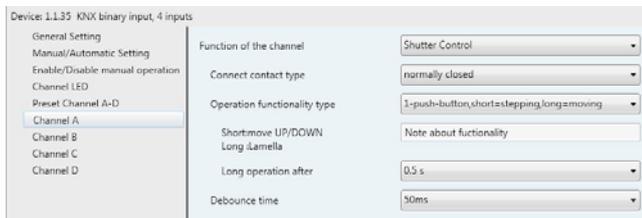


Fig.7.16 Parameter window "Shutter control, X"

Parameter "Connect contact type"

This parameter is used to set whether the input contact is a normally closed or normally open contact.

- Options: Normally open
- Normally closed

The parameters that are described in this chapter are based on normally open connect type as example, the normally closed connect type is just opposite.

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)

7.5 Parameter window "Preset Channel A~D" (continued)

7.5.1 Jointly adjustable working mode for binary input (continued)

7.5.2.8 Shutter Control (continued)

Parameter "Operation functionality type"

This parameter sets the shutter operating functionality type, which overview is provided in the following tables.

1-push-button, short=stepping, long=moving	
Short operation	Alternate implement "Stop/Adjust upward" or "Stop/Adjust downward" operation (alternate send the value of the object "0"and"1")
Long operation	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")
1-push-button, short=moving, long=stepping	
Short operation	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")
Long operation	Alternate implement "Stop/Adjust upward" or "Stop/Adjust downward" operation (alternate send the value of the object "0"and"1")
1-push-button-operation, moving	
Operation	When operation, send the command in sequence: ->Move up ->Stop/Adjust upward ->Move down -> Stop/Adjust downward ->.....
1-switch-operation, moving	
Operation start (press the button)	Alternate implement "Move up" or "Move down" operation (alternate send the value of the object "0"and"1")
Operation end (Release the button)	Stop/Adjust
2-push-button, standard	
Short operation	"Stop/Adjust upward" or "Stop/Adjust downward" (set by parameter)
Long operation	"Move up" or "Move down"(set by parameter)
2-push-button, moving[shutter]	
Operation	When operation, send the command in sequence: ->Move up ->Stop/Adjust upward ->..... or ->Move down ->Stop/Adjust downward ->..... (Move up/down set by parameter)
2-push-button, stepping	
Operation	"Stop/ Adjust upward" or "Stop/ Adjust downward" (set by parameter) (keep pressing the button can send cyclic)
2-switch-operation, moving[shutter]	
Operation start	"Move up" or "Move down"(set by parameter)
Operation end	"Stop / Adjust upward" or "Stop / Adjust downward" (the sending value is identical to the value that the operation starting)

Parameter "Tele. STOP/lamella adj/Cyclical send"

It is visible if the shutter control type is "1-push-button, short=moving, long=stepping"and "2-push-button, stepping". It is able to set the interval time of sending the object "stop/adjust adj." cyclical.

- Options: 0.3s/0.5s/.../10s

7. PARAMETER SETTING DESCRIPTION IN THE ETS (continued)**■ 7.5 Parameter window "Preset Channel A~D" (continued)****7.5.1 Jointly adjustable working mode for binary input (continued)****7.5.2.8 Shutter Control (continued)****Parameter "Reaction on short operation"**

It is visible if the shutter control type is "2-push-button, standard". This parameter defines the operation with short operation.

Options: Stop/lamella up
Stop/lamella down

Parameter "Reaction on long operation"

It is visible if the shutter control type is "2-push-button, standard". This parameter defines the operation with long operation.

Options: Move up
Move down

Parameter "Reaction on operation"

It is visible if the shutter operation functionally type is "2-push-button, moving [shutter]"; "2-switch-operation, moving [shutter]" and "2-pushbutton, stepping". It defines the action when operation. Different operation functionally type makes different operate action. The former two operations functionally type is move up and down; the last operation functionally type is stop/lamella reaction.

Options: Move up
Move down

Options: Stop/lamella up
Stop/lamella down

Parameter "Long operation after"

This parameter is visible if long operation activate, it defines the period TL here, after which an operation is interpreted as "long".

Options: 0.3s/0.5s/.../10s

Parameter "Denounce time"

This parameter is used to set the debounce time. Debouncing prevents unwanted multiple operation of the input, e.g. due to bouncing of the contact.

Options: 10ms/20ms/.../150ms