




Optical reading head PXV100IV-F200-R4-V19

- RS-485 interface
- Non-contact positioning on Data Matrix code tape
- Mechanically rugged: no wearing parts, long operating life, maintenance-free
- High resolution and precise positioning, especially for facilities with curves and switch points as well as inclines and declines.
- Travel ranges up to 10 km

Read head for incident light positioning system



Dimensions

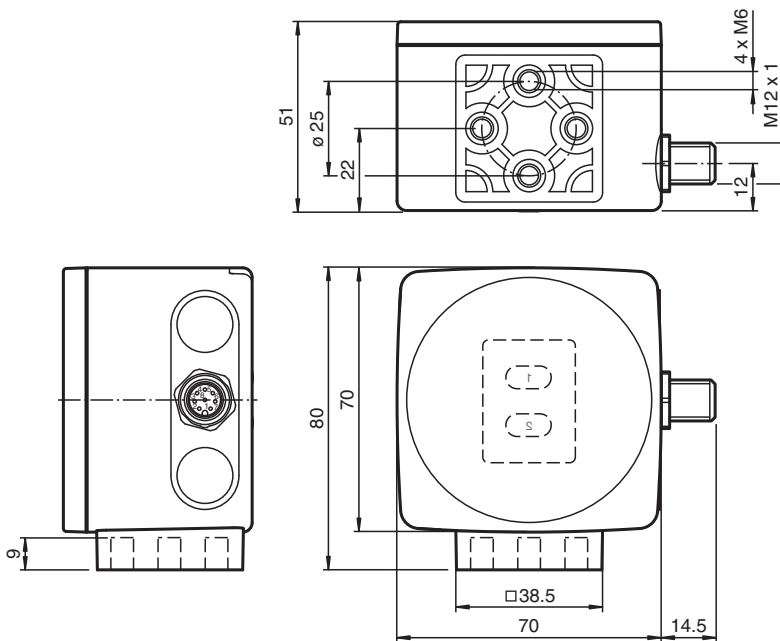

Technical Data

General specifications

| | | |
|---------------------|---|--------------------|
| Passage speed | v | ≤ 20 m/s |
| Measuring length | | max. 10000 m |
| Light type | | Infrared |
| Scan rate | | 40 s ⁻¹ |
| Read distance | | 100 mm |
| Depth of focus | | ± 50 mm |
| Reading field | | 115 mm x 73 mm |
| Ambient light limit | | 100000 Lux |
| Accuracy | | ± 0.2 mm |

Nominal ratings

Camera

Technical Data


| | | |
|---|----------------|---|
| Type | | CMOS , Global shutter |
| Processor | | |
| Clock pulse frequency | | 600 MHz |
| Speed of computation | | 4800 MIPS |
| Digital resolution | | 32 Bit |
| Functional safety related parameters | | |
| MTTF _d | | 84 a |
| Mission Time (T _M) | | 10 a |
| Diagnostic Coverage (DC) | | 0 % |
| Indicators/operating means | | |
| LED indication | | 7 LEDs (communication, alignment aid, status information) |
| Electrical specifications | | |
| Operating voltage | U _B | 15 ... 30 V DC , PELV |
| No-load supply current | I ₀ | max. 200 mA |
| Power consumption | P ₀ | 3 W |
| Interface | | |
| Interface type | | RS 485 interface |
| Data output code | | binary code |
| Transfer rate | | 38400 ... 230400 Bit/s |
| Termination | | Switchable terminal resistor |
| Query cycle time | | ≥ 10 ms |
| Interface 2 | | |
| Interface type | | USB Service |
| Input | | |
| Input type | | 1 to 3 functional inputs , programmable |
| Input impedance | | ≥ 27 kΩ |
| Output | | |
| Output type | | 1 to 3 switch outputs , PNP , programmable , short-circuit protected |
| Switching voltage | | Operating voltage |
| Switching current | | 150 mA each output |
| Conformity | | |
| Photobiological safety | | exempt group according to EN 62471:2008 |
| Standard conformity | | |
| Emitted interference | | EN 61000-6-4:2007+A1:2011 |
| Noise immunity | | EN 61000-6-2:2005 |
| Shock resistance | | EN 60068-2-27:2009 |
| Vibration resistance | | EN 60068-2-6:2008 |
| Approvals and certificates | | |
| CE conformity | | CE |
| UL approval | | cULus Listed, Class 2 Power Source, Type 1 enclosure |
| CCC approval | | CCC approval / marking not required for products rated ≤36 V |
| Ambient conditions | | |
| Operating temperature | | 0 ... 60 °C (32 ... 140 °F) , -20 ... 60 °C (-4 ... 140 °F) (noncondensing; prevent icing on the lens!) |
| Storage temperature | | -20 ... 85 °C (-4 ... 185 °F) |
| Relative humidity | | 90 % , noncondensing |
| Mechanical specifications | | |
| Connection type | | 8-pin, M12 x 1 connector |
| Degree of protection | | IP67 |
| Material | | |
| Housing | | PC/ABS |
| Mass | | approx. 160 g |
| Dimensions | | |

Release date: 2024-12-16 Date of issue: 2024-12-16 Filename: 293431-100013_eng.pdf


Technical Data

| | |
|--------|-------|
| Height | 70 mm |
| Width | 70 mm |
| Depth | 50 mm |

Connection

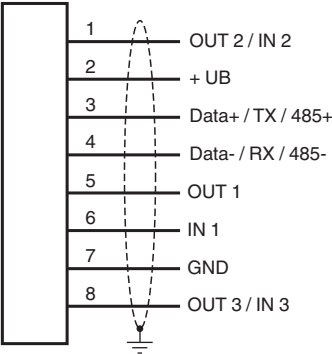


Connection Assignment

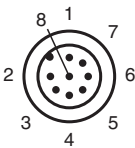


Function Principle

Position Data

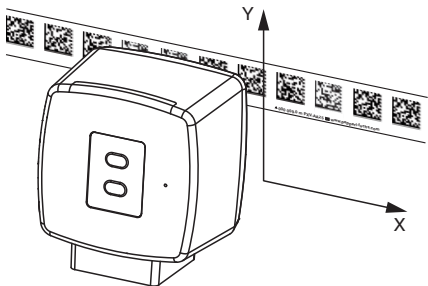

Release date: 2024-12-16 Date of issue: 2024-12-16 Filename: 293431-100013_eng.pdf

Function Principle

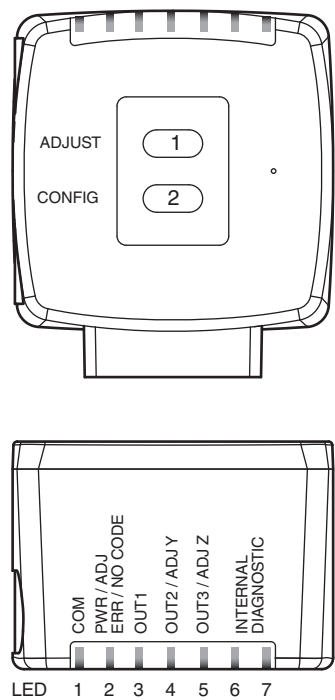

Release date: 2024-12-16 Date of issue: 2024-12-16 Filename: 293431-100013_eng.pdf

Additional Information

General

The reading head is part of the positioning system in the method for measurement by Pepperl+Fuchs. It consists of a camera module and an integrated illumination unit among other things. The reading head detects position marks, which are put on an adhesive code band in the form of Data Matrix code. The mounting of the code band is as a rule stationary on a firm part of the plant (elevator shaft, overhead conveyor mounting rails...); that of the reading head is parallel on the moving "vehicle" (elevator car, overhead conveyor chassis...).

Mounting and commissioning

Mount the reading head such that its optical surface captures the optimal read distance to the code band (see Technical Data). The stability of the mounting and the guidance of the vehicle must be provided such that the depth of field of the reading head is not closed during operation. All reading heads can be optimally customized by parameterization for specific requirements. The parameterization of reading heads with a bi-directional interface (all except SSI-interface) can take place via the interface itself (internal parameterization) or via an optical parameterization code (external parameterization). The reading heads with SSI interface only have the possibility of external parameterization via optical parameterization codes.

Displays and Controls

The reading head allows visual function check and fast diagnosis with 7 indicator LEDs. The reading head has 2 buttons on the reverse of the device to activate the alignment aid and parameterization mode.

LEDs

| LED | Color | Label | Meaning |
|-----|------------------|-------------------------|---------------------------------------|
| 1 | Yellow | COM | Communication active |
| 2 | Green/red | PWR/ADJ ERR/NO CODE | Code recognized/not recognized, Error |
| 3 | Yellow | OUT1 | Output 1 |
| 4 | Yellow | OUT2/ADJ Y | Output 2, Alignment aid Y |
| 5 | Yellow | OUT3/ADJ Z | Output 3, Alignment aid Z |
| 6,7 | red/green/yellow | INTERNAL DIAGNOSTICS | Internal diagnostics |

External parameterization

For external parameterization you require the parameterization code as Data Matrix with the desired reading head parameters. Data Matrix code cards for step-by-step external parameterization are printed in the reading heads operating instructions.

Parameterization is only possible within 10 minutes of switching on the reading head. If a button is pressed after 10 minutes subsequent to switching on, there is visual signaling via the LEDs (LED1, yellow/LED2, red/LED3, yellow/LED4, yellow/LED5, yellow flash for 2 seconds)

- The switchover from normal operation to parameterization mode is via button 2 on the reverse of the reading head. Button 2 must be pressed for more than 2 seconds. LED3 now flashes.

Note: Parameterization mode automatically ends after 1 minute of inactivity. The reading head returns to normal operation and works with unchanged settings.

- Place the parameterization code in the view of the camera module. After recognition of the parameterization code, the green LED2 lights up for 1 s. In the event of an invalid parameterization code, the red LED2 lights up for 2 s.
- A short press on button 2 ends the parameterization mode and the changed parameters are not stored volatile in the reading head.

Alignment aid for the Y and Z coordinates

The activation of the alignment aid is only possible within 10 minutes of switching on the reading head. The switchover from normal operation to "alignment aid operating mode" is via button 1 on the reverse of the reading head.

- Press the button 1 for longer than 2 s. LED2 flashes green for a recognized code band. LED2 flashes red for an unrecognized code band.
- Z coordinate:** If the distance of the camera to the code band too small, the yellow LED5 lights up. If the distance of the camera to the code band too large, the yellow LED5 lights up. Within the target range, the yellow LED5 flashes at the same time as the green LED2.
- Y coordinate:** If the optical axis of the camera is too deep in relation to the middle of the code band, the yellow LED4 lights up. If the optical axis is too high, the yellow LED4 extinguishes. Within the target range, the yellow LED4 flashes at the same time as the green LED2.
- A short press on button 1 ends the alignment aid and the reading head changes to normal operation.