

Harmony Hub ZBRN1/ZBRN2 User Manual

(Original Document)

01/2020



EIO0000001177.05

www.schneider-electric.com

Schneider
Electric

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2020 Schneider Electric. All rights reserved.

Table of Contents



	Safety Information	7
	About the Book	9
Chapter 1	Introduction	13
	Offer Description	14
	Call To Action	18
	Product References	20
Chapter 2	Physical Description	23
2.1	Product Overview	24
	Hardware Description	24
2.2	Installation	26
	Installation Requirements	27
	Mechanical Installation	33
	Environmental Features	35
	Housing	37
2.3	Specifications	38
	Electrical Specifications	38
2.4	Data Management	41
	Compatibility Rules	42
	Transmitter Types	43
	Monostable Input	45
	Set/Reset	46
	Receiver Types	47
Chapter 3	First Installation	49
	First Start Up	50
	Configuration	52
	Pairing Procedures	54
Chapter 4	ZBRN1 Ethernet Communication	61
	Communication on The Ethernet Network	62
	Addressing Modes	66
	Communication and Status Indicator	68
	Modbus TCP Settings and Supported Functions	70
	Ethernet Cable	71

Chapter 5	ZBRN2 Modbus Serial Line Communication	73
	Communication on The Modbus Network	74
	Communication and Status Indicator	77
	Modbus Serial Line Wiring	78
	Modbus Settings and Supported Functions	80
	Modbus Serial Line Cables	82
Chapter 6	ZBRRH Receiver for Harmony Hub	85
	Presentation of ZBRRH	86
	General Installation Instruction for ZBRRH	87
	Receiver Wiring Diagram	91
	LED Status	92
	How to Teach/Unteach ZBRRH	93
	Lock/Unlock for ZBRRH	96
	Total Reset Function Description	99
Chapter 7	Modbus Registers	101
7.1	Memory Table	102
	Memory Table	102
7.2	Input Channels Registers	103
	Input Channels Registers	104
	Type 1 Input Channels Registers	106
	Type 4 Input Channels Registers	107
	Type 5 Input Channels Registers	108
	Type 6 Input Channels Registers	109
7.3	Output Registers	112
	Output Registers	112
7.4	Action Registers	114
	Action Register	115
	Action Codes	116
7.5	Diagnostic Registers	126
	Device Diagnostics	127
	Communication Diagnostics	133
	Error Codes	136
7.6	Configuration Registers	140
	Device Configuration	141
	Communication Configuration	146
Chapter 8	Radio	149
	Radio Communication	149

Chapter 9	User Interface	157
9.1	Overview	158
	Principle.	159
	Modes	162
	Menu Structure	165
9.2	Configuration Menu	166
	Configuration Menu Overview	167
	Input Configuration Menu	169
	Output Configuration Menu	175
	Communication Menus	177
	Radio Frequency Menu	181
	Factory Mode	182
9.3	Diagnostic Menu	183
	Diagnostic Menu	183
9.4	SD Card Menu	187
	SD Card Menu	187
Chapter 10	SD Card	189
	Introduction	190
	Functions	192
	File Management and Diagnostics	194

Safety Information



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

This documentation is a reference for the wireless transmitters and receivers used with the ZBRN1/ZBRN2 Harmony Hub.

The purpose of this document is to:

- Show how to install and operate your Harmony Hub.
- Show how to connect Harmony Hub with wireless transmitters, programmable logic controllers (PLCs), and other devices.
- Help become familiar with Harmony Hub features.

NOTE: Read and understand this document and all related documents (*see page 10*) before installing, operating, or maintaining your Harmony Hub.

The users must read through the entire document to understand all its features.

Validity Note

This documentation is valid for the ZBRN1/ZBRN2 Harmony Hub, firmware version $\geq V3.31$.

The technical characteristics of the devices described in the present document also appear online. To access the information online:

Step	Action
1	Go to the Schneider Electric home page www.schneider-electric.com .
2	In the Search box type the reference of a product or the name of a product range. <ul style="list-style-type: none">• Do not include blank spaces in the reference or product range.• To get information on grouping similar modules, use asterisks (*).
3	If you entered a reference, go to the Product Datasheets search results and click on the reference that interests you. If you entered the name of a product range, go to the Product Ranges search results and click on the product range that interests you.
4	If more than one reference appears in the Products search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the datasheet.
6	To save or print a datasheet as a .pdf file, click Download XXX product datasheet .

The characteristics that are presented in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Related Documents

Title of Documentation	Reference Number
Harmony XB5R Wireless and Battery-Less Push-Button Catalog	DIA5ED2121214EN (Eng), DIA5ED2121214FR (Fre)
Harmony XB5R Expert Instruction Sheet	EIO0000000812 (Eng), EIO0000000813 (Fre), EIO0000000814 (Ger), EIO0000000815 (Spa), EIO0000000816 (Ita), EIO0000000817 (Chs), EIO0000000818 (Por)
Magelis Box iPC Modular and Display Optimized, Universal and Performance (HMIBMI, HMIBMO, HMIBMP, HMIBMU, HMIDM) - User Manual	EIO0000003374 (Eng), EIO0000003375 (Fre), EIO0000003376 (Ger), EIO0000003377 (Spa), EIO0000003378 (Ita), EIO0000003379 (Chs),
ZBRN1 Harmony Hub Instruction Sheet	S1B87888
ZBRN2 Harmony Hub Instruction Sheet	S1B87941
ZBRCETH Instruction Sheet	S1B88209
ZBRRH Receiver Instruction Sheet	GDE20645
ZBRRR/ZBRRRC/ZBRRD Receivers Instruction Sheet	S1A57202
Packages Instruction Sheet	S1A57199
Transmitter with Metal or Plastic Head and Cap Instruction Sheet	S1A57198
Relay Antenna Instruction Sheet	S1A57194
Handy Box Instruction Sheet	S1A57210
Modbus Serial Modbus Serial Link for Machines	DIA3ED2160106EN (Eng) DIA3ED2160106FR (Fre)

You can download these technical publications and other technical information from our website at <https://www.se.com/ww/en/download/> .

Product Related Information

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the equipment.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Only persons with expertise in the design and programming of control systems are allowed to program, install, alter, and apply this product.
- Follow all local and national safety codes and standards.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Chapter 1

Introduction

Purpose

This chapter provides an overview of the Harmony Hub and its wireless receiver.

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Offer Description	14
Call To Action	18
Product References	20

Offer Description

Overview

The Harmony XB5R offer using Harmony Hub allows more flexibility and simplicity in the installation. Wireless transmitters technology reduces the wiring and the cost of installation. Harmony Hub converts radio frequency inputs into various communication protocols and operates as intermediate equipment between a transmitter and a PLC or industrial PCs (IT/OT box) that support Modbus TCP protocols.


Harmony Hub can be used with transmitters such as XB4R and XB5R wireless and batteryless push-buttons, rope pull switch, mushroom head push-buttons, emergency stop monitoring, XCKW and XCMW wireless and batteryless limit switches, temperature sensors, and energy sensors.

It has a wide range of industrial and building applications. For example, in packing lines, automatic doors in logistic centers, manufacturing of vehicles in automotive industries, for bag filling in cement industries, and for efficient use of power in office lighting.

Harmony Hub can also control output especially receivers and communicate with a tower light for example to make call for action. This use case will help the operator visually for the status of his requested action.

Basic Architecture with PLC

The following figure shows the transmission between transmitters and a ZBRN1 Harmony Hub:

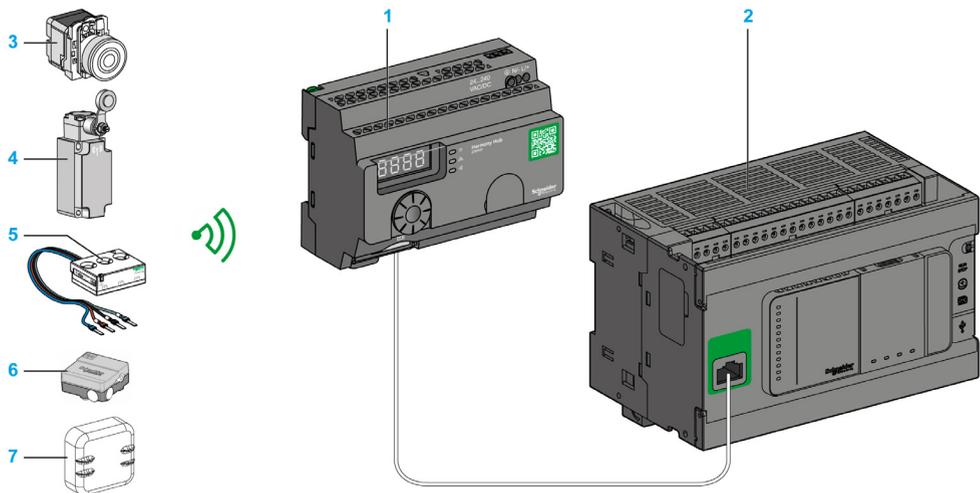

- 1 Harmony Hub
- 2 PLC
- 3 Pushbutton
- 4 Limit switch
- 5 Energy sensor
- 6 Humidity and thermal sensor
- 7 Thermal sensor

NOTE: You can associate 1 Harmony Hub with up to 60 transmitters. Each transmitter has a unique ID (for example, 030079B1).

PowerTag energy monitoring sensor must be placed in a metal cabinet at a maximum distance of 3 meters to Harmony Hub.


IT/OT Architecture

Harmony Hub provides network connectivity openness by operating as intermediate equipment between the wireless devices and PLCs (Programmable Logic Controller) or all industrial PCs (IT/OT box) that support Modbus TCP protocols.

Harmony Hub is providing an easy way to digitalize your production line to improve operation efficiency by using a non-intrusive wireless system easy to connect to your IT system.

Harmony Hub collect physical signals from an operator interface or secondary sensing to generate computed data information for computerized maintenance management system (CMMS) tools and operation management tools.

Data can be analyzed through our dedicated EcoStruxure platform through AVEVA™ Software, Maintenance Advisor software, and Augmented Operator Advisor application.

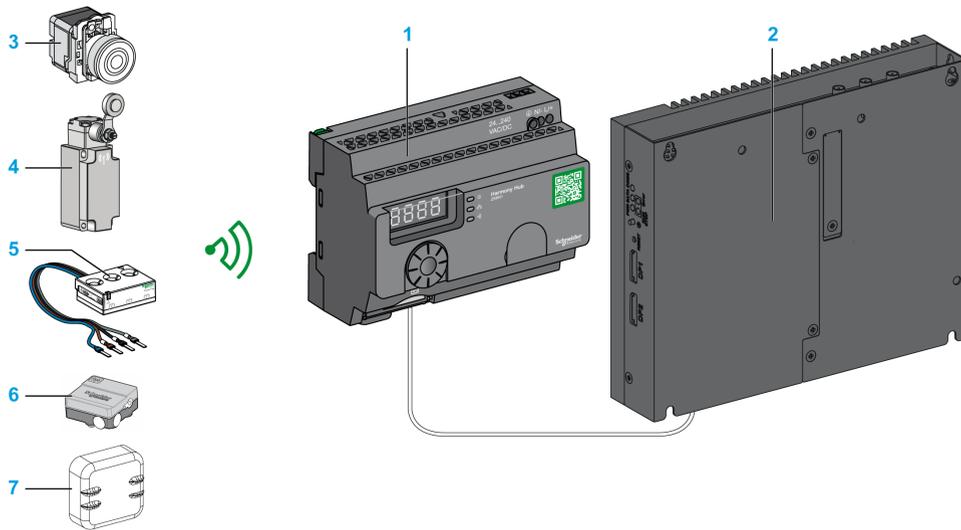

- 1 ZBRN1 Harmony Hub associated with ZBRCETH communication module
- 2 iPC
- 3 Pushbutton
- 4 Limit switch
- 5 Energy sensor
- 6 Humidity and thermal sensor
- 7 Thermal sensor

Compatible Transmitters

Harmony Hub is compatible with:

- The Harmony batteryless and wireless push-buttons offer based on radio technology (ZBRT1, ZBRT2)
- The Harmony wireless and batteryless rope pull switch (ZBRP1)
- The OsiSense wireless and batteryless radio limit switches (XCKW, XCMX)
- Temperature sensors with battery (A9XST114, ...)
- Energy sensors (A9MEM1560, LV434020, ...)

The following figures show some examples of transmitters:

Example 1: Push-button with a plastic head



ZB5RTA1

Example 2: Push-button with a metal head



ZB4RTA3

Example 3: Push-button with a plastic head enclosed in a handy box



ZB5RTA3 + ZBRM01

Call To Action

Overview

Harmony Hub can communicate with up to 60 ZBRRH receivers.


If you connect a tower light to the ZBRRH receiver, you can make a call to action function.

Call to action:

When a problem occurs on the machine, the operator just pushes its wireless pushbutton.

The Harmony Hub can then control a device to solve the problem or at least to display it with a tower light.

The following figure shows the transmission between a ZBRN• Harmony Hub and ZBRRH receiver to command, for example, a tower light:

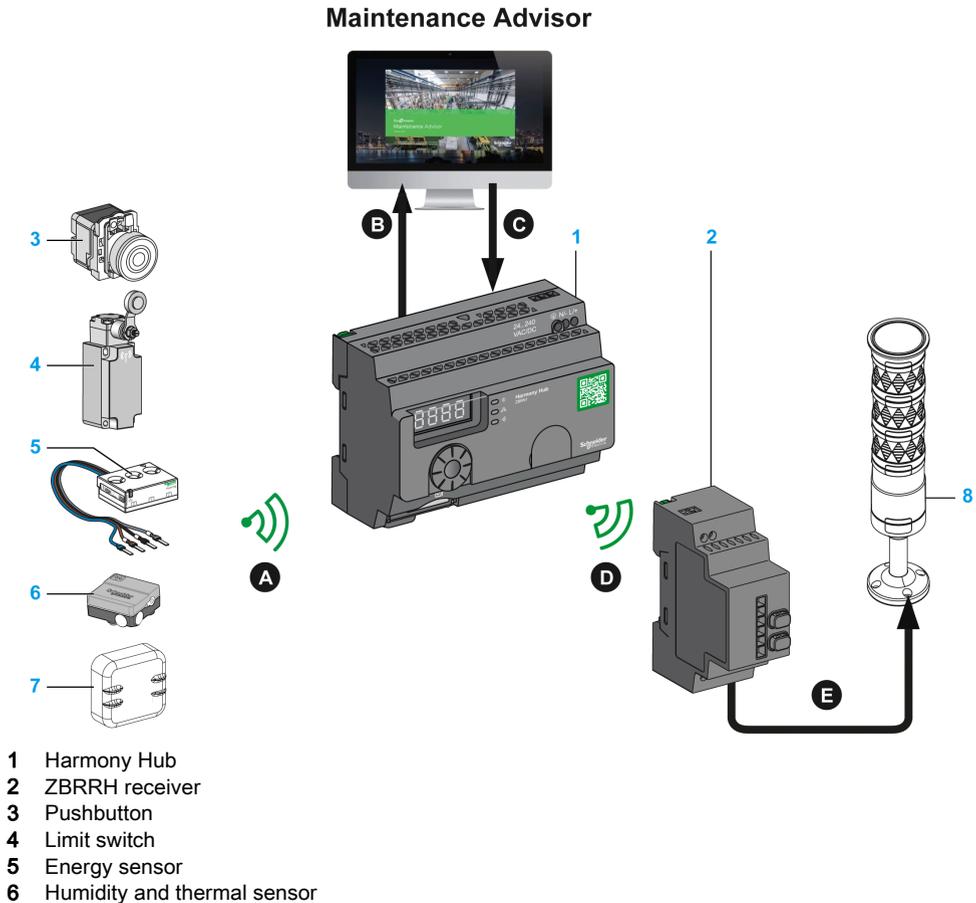


- 7 Thermal sensor
- 8 XVU tower light

Call to action process:

Step	Action
A	If a problem occurs on the machine, the operator pushes its wireless pushbutton. A message is sent to the Harmony Hub.
B	The Harmony Hub send a message to the Maintenance Advisor.
C	The Maintenance Advisor send a message to the Harmony Hub.
D	The Harmony Hub send a message to a ZBRRH receiver.
E	The ZBRRH receiver commands one lamp of the XVU tower light.


Compatible Receiver

Harmony Hub is compatible with the Harmony ZBRRH receiver:



Product References


ZBRN1: Standard Harmony Hub with Communication Module

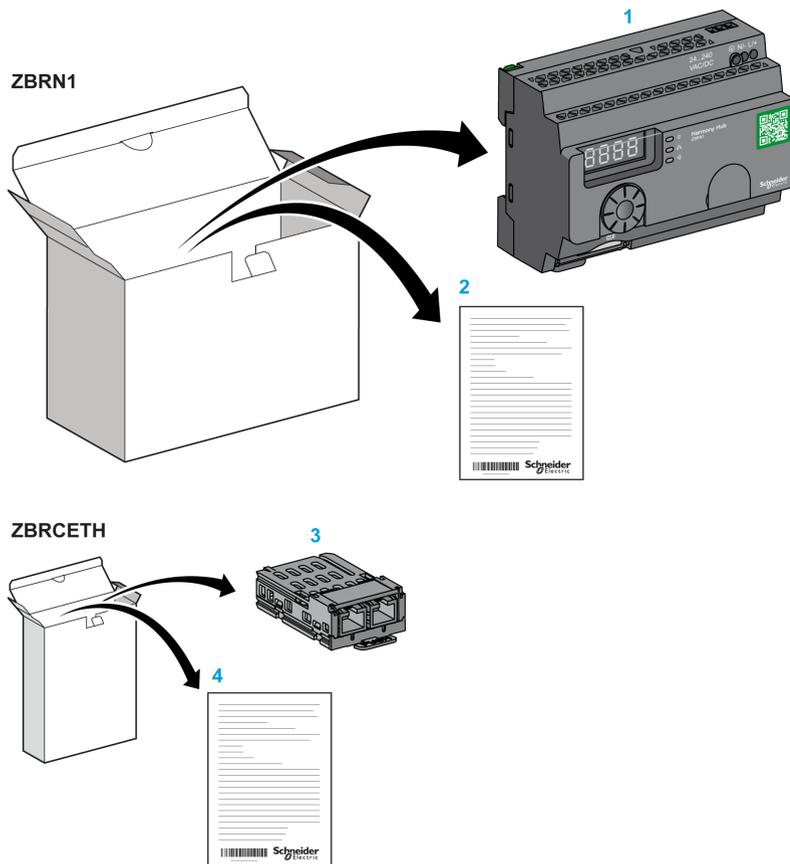

- 1 Harmony Hub
- 2 Instruction Sheet (ZBRN1)
- 3 Modbus TCP Communication module
- 4 Instruction Sheet (ZBRCETH)

NOTE: ZBRN1 must be associated with a communication module, reference ZBRCETH (Ethernet protocol).

ZBRN2: Harmony Hub for Modbus Serial Line Communication

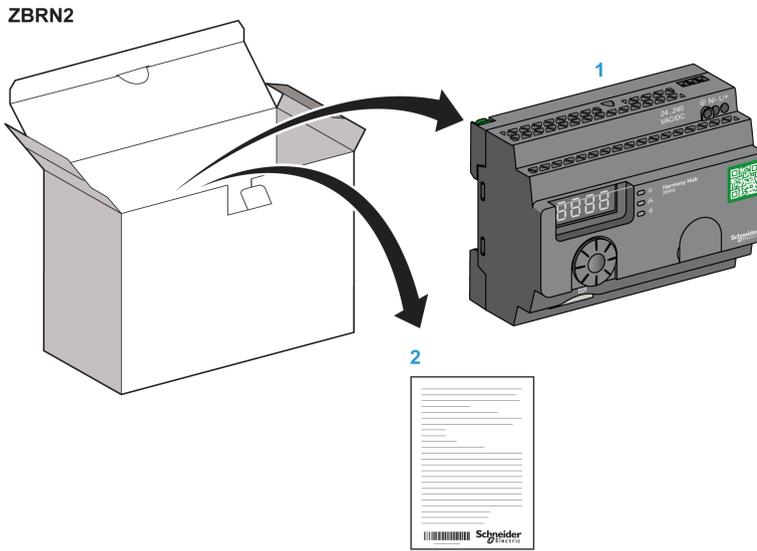

- 1 Harmony Hub
- 2 Instruction Sheet

Difference Between ZBRN1 and ZBRN2

ZBRN2 has an embedded communication port for a Modbus serial line, whereas ZBRN1 can support Modbus TCP communication using ZBRCETH module.

Chapter 2

Physical Description

Purpose

This chapter provides an overview of Harmony Hub ZBRN1 and ZBRN2 hardware: description, output connectors, installation, and power supply connections.

What Is in This Chapter?

This chapter contains the following sections:


Section	Topic	Page
2.1	Product Overview	24
2.2	Installation	26
2.3	Specifications	38
2.4	Data Management	41

Section 2.1

Product Overview


Hardware Description

ZBRN1

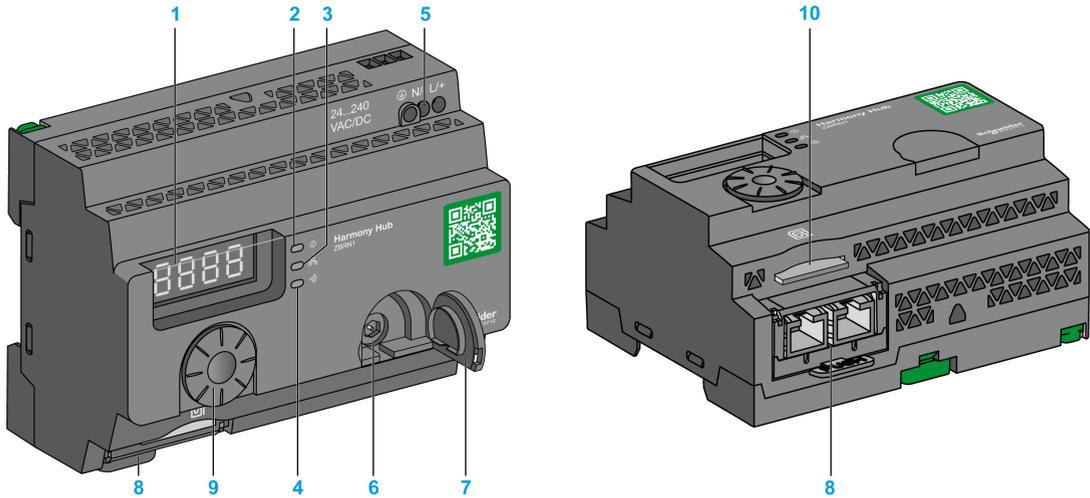

- 1 Four 7-segments displays with 5 LEDs
- 2 Power LED
- 3 Communication LED
- 4 Radio signal strength LED
- 5 Power input terminal block
- 6 Connector for the optional external antenna
- 7 Protective plug for the connector for the optional external antenna
- 8 ZBRCETH Communication module inserted with 2 RJ45 Ethernet connectors
- 9 Jog dial
- 10 SD memory card slot

ZBRN2

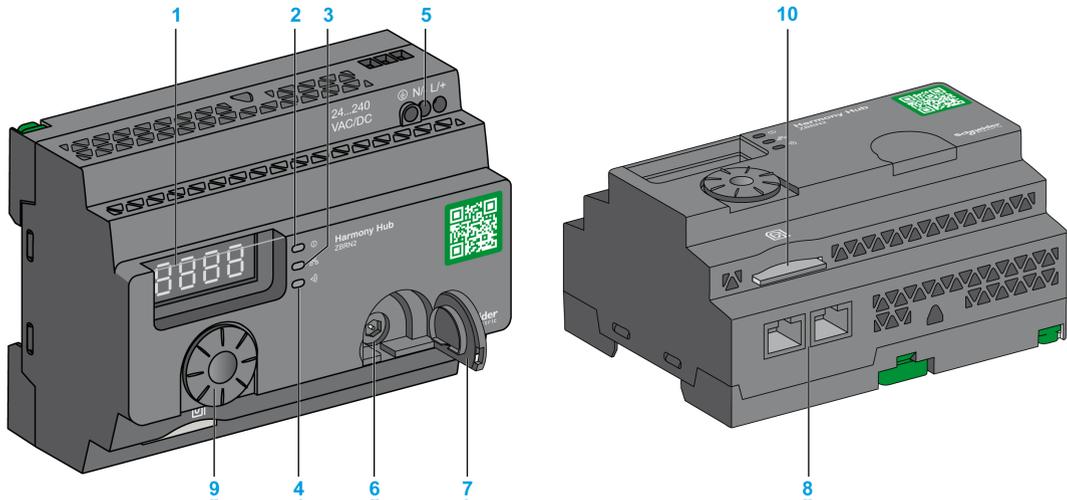

- 1 Four 7-segments displays with 5 LEDs
- 2 Power LED
- 3 Communication LED
- 4 Radio signal strength LED
- 5 Power input terminal block
- 6 Connector for the optional external antenna
- 7 Protective plug for the connector for the optional external antenna
- 8 2 RS-485 Modbus serial line connectors
- 9 Jog dial
- 10 SD memory card slot

Section 2.2 Installation

What Is in This Section?

This section contains the following topics:

Topic	Page
Installation Requirements	27
Mechanical Installation	33
Environmental Features	35
Housing	37

Installation Requirements

Before Starting

Read and understand this chapter before beginning the installation of your Harmony Hub.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the equipment.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

Operating Environment

WARNING

UNINTENDED EQUIPMENT OPERATION

Install and operate this equipment according to the environmental conditions described in the operating limits.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Installation Considerations

WARNING


UNINTENDED EQUIPMENT OPERATION

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.
- Install and operate this equipment in an enclosure appropriately rated for its intended environment.
- Do not use this equipment in safety critical and hoisting machine functions due to:
 - No permanent communication
 - No acknowledge of the message from the receiver to the transmitters.
- Do not disassemble, repair, or modify this equipment.
- Do not connect any wiring to reserved, unused connections, or to connections designated as not connected (N.C.).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Architecture

The following figures shows the general principle of Harmony Hub architecture:

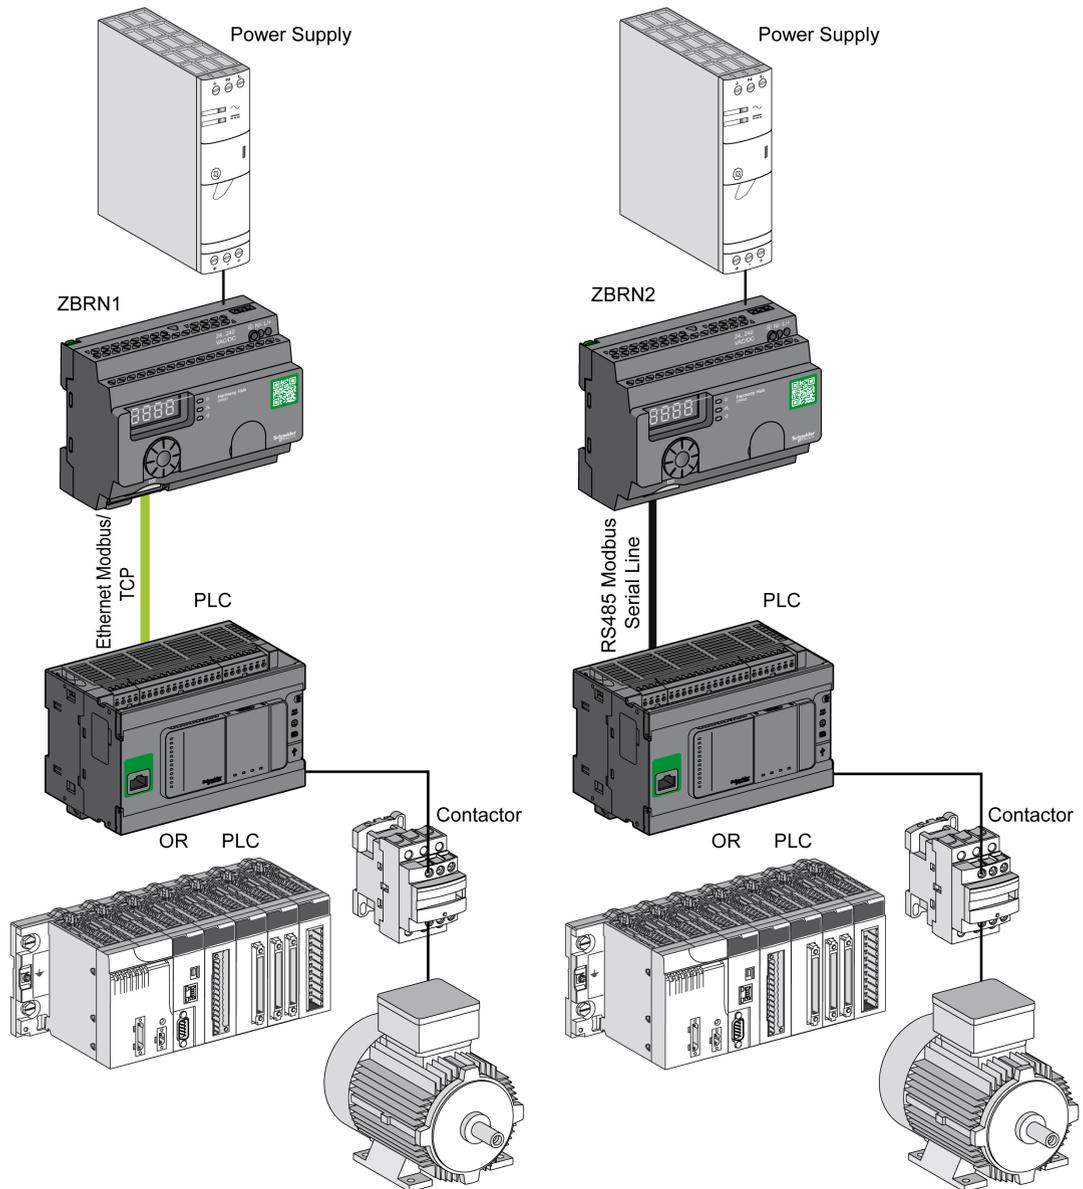

NOTE:

- The previous figure is not exhaustive. It shows only the general principle of the architecture.
- Refer to the specifications section (*see page 38*) for detailed wiring diagram and instructions for Harmony Hubs.
- Refer to the user manual of your associated products for detailed wiring diagrams and instructions.
- Harmony Hub can be connected to any PLC supporting the network buses listed in this document.

Connection Requirements

Power Supply Connection


24...240 Vac/Vdc

Network connection

- RS-485 Modbus serial line network
- Ethernet Modbus TCP network

Maximum Distances

The following figure shows the maximum distance between the transmitters and the ZBRN1/ZBRN2 Harmony Hubs:

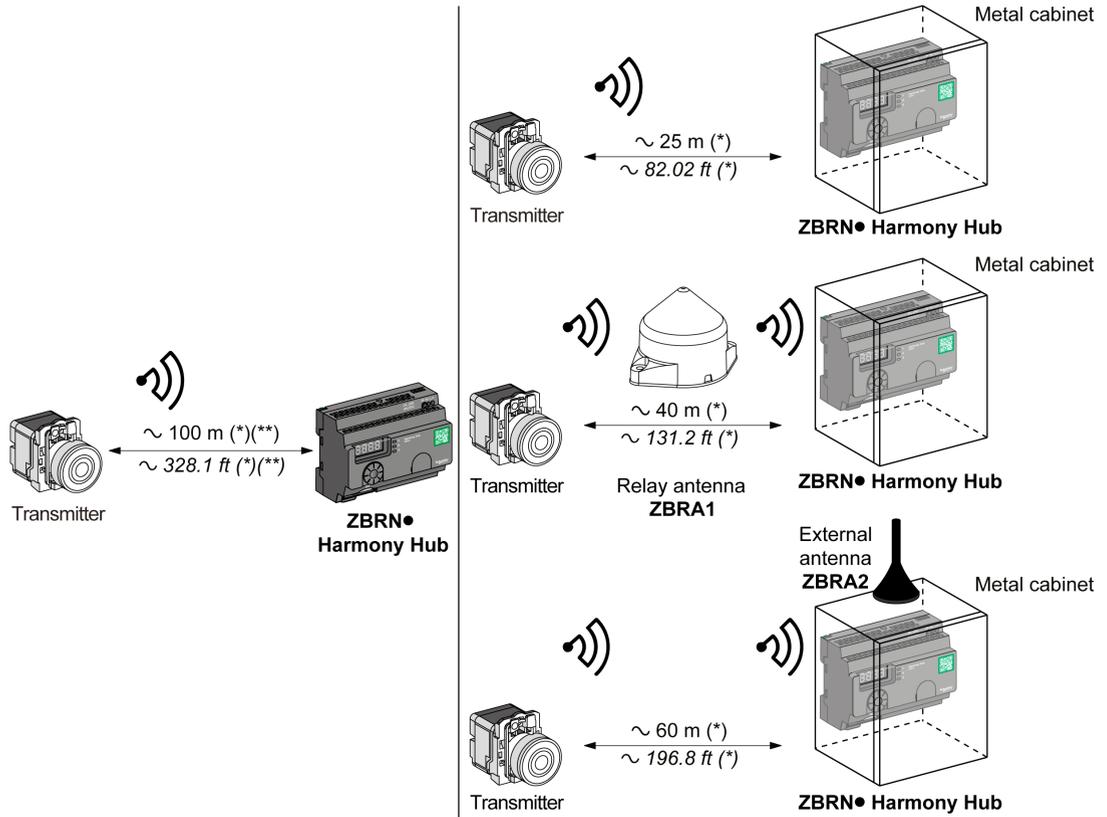

(*) The application environment can modify the typical values.

(**) Free field (unobstructed and without electromagnetic perturbations).

The level of signal attenuation depends on the material through which the signal passes:

Material	Attenuation
Glass window	10...20 %(*)
Plaster wall	30...45 %(*)
Brick wall	60 %(*)
Concrete wall	70...80 %(*)

(*) Values for indication purpose only. Actual values depend on the thickness and nature of the material.

Material	Attenuation
Metal structure	60...100 % ^(*)
(*) Values for indication purpose only. Actual values depend on the thickness and nature of the material.	

NOTE: You can add ZBRA1 or ZBRA2 antenna or both to increase the range.

The reception is reduced if Harmony Hub is placed in a metal cabinet.

For further information on the use of ZBRA1 and ZBRA2 antennas, refer to the Radio chapter ([see page 149](#)).

Impact of the radio performances in the environment:

- For any environment, the radio performances are subjected to be instable due to perturbations made by any kind of industrial machines, processes, or electronic devices.
- As a consequence at any time, it is possible that the radio frames sent by a transmitter will not be caught by the receiver during the perturbation.
- With Harmony XB5R offer, only one radio frame is sent to the receiver, there is no permanent radio communication. This reason prevents the use of Harmony XB5R offer for applications where permanent reliability and/or permanent precisions are needed.


Mechanical Installation

Mounted on DIN Rail

Harmony Hub must be installed on DIN rails complying with EN/IEC 60715.

To install Harmony Hub, use a tool to press down the D lock for inserting the DIN rail.

The following figure shows the position of Harmony Hub on the DIN rail:

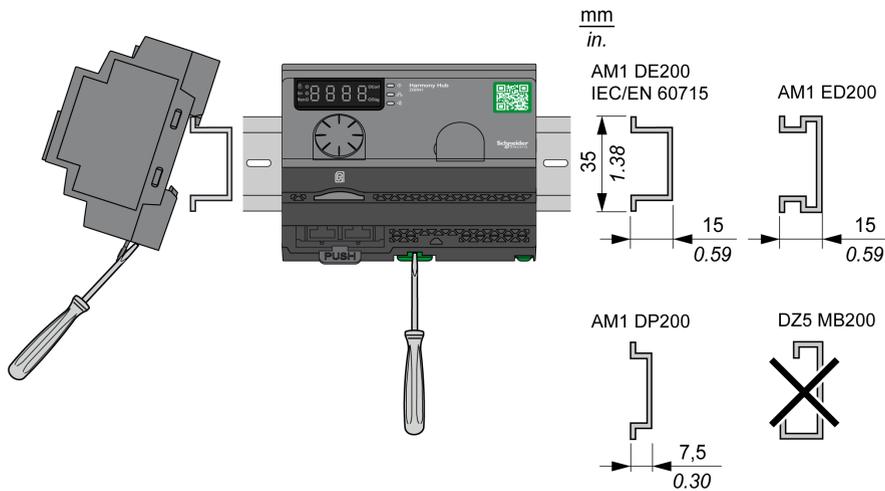


Mounted on a Grid or Plate

Harmony Hub can be installed on a grid or a plate.

The following steps explain how to install the module:

Step	Action
1	Pull out the panel mounting hooks.
2	Mount Harmony Hub on the grid or plate using the screws as shown in the following figure.

Physical Description

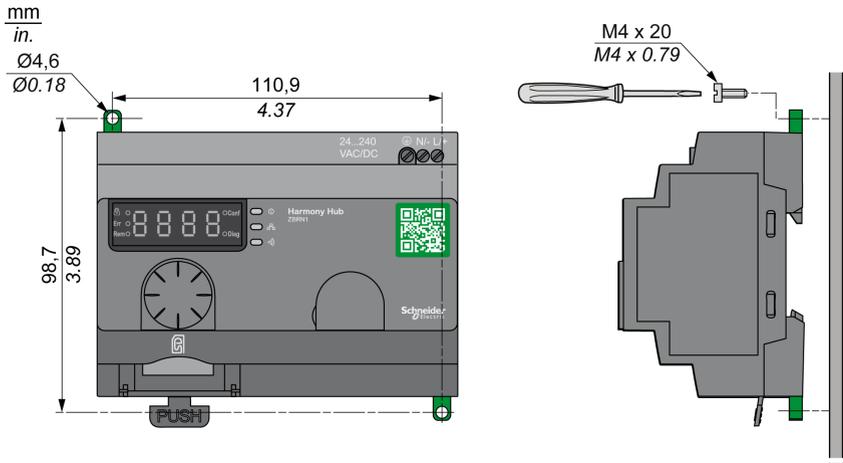

Environmental Features

Specifications


The following table shows the general environmental specifications:

Characteristics		Specifications
Standards	Conformity to standards	R&TTE 1999/5/EC, LVD 2006/95/EC, EMC2004/108/EC
	Conformity to standards	EN/IEC 60947-1, EN/IEC 60947-5-1, EN/IEC60950-1, IEC61131-2, EN 300440-2, EN300489-3, EN300328, EN62311
	Conformity to standards	UL 508 (USA), CSA C22-2 n° 14 (Canada), CCC (China), Gost (Russia)
	Radio certifications	FCC (USA), CSA, RSS (Canada), C-Tick (Australia), ANATEL (Brazil), SRRC (China), MIC (Japan)
Agencies		
UL	USA	UL508, 17th edition
CSA	Canada	CSA C22.2, No. 142-M2000
C-Tick	Australia	–
GOST	Russia	–
ANATEL	Brazil	–
FCC	USA	–
SRRC	China	–
CCC	China	–
MIC	Japan	–
RSS	Canada	–
Ambient operating temperature		–25...+55 °C (–13...+131 °F)
Storage temperature		–40...+70 °C (–40...+158 °F)
Relative humidity		95% RH at 55 °C (131 °F)
Degree of pollution		2 (IEC60664-1)
Degree of protection		IP20
Shock resistance		Half sine wave acceleration: 11 ms 30 gn (IEC 60068-2 27)
Resistance to vibration		±3.5 mm (±0.13 in.); 5...8.14 Hz 1 gn: 8.14...150 Hz when mounted on a panel 2 gn: 8.45...150 Hz when mounted on a DIN rail (IEC 60068-2-6)

Characteristics	Specifications
Altitude requirement	Operation: 0...2000 m (6561.66 ft) Storage: 0...3000 m (9842.49 ft)
	Only used at altitude not exceeding 2000 m (6561.66 ft). 
	Only used in non-tropical climate regions. 

Housing

Clearances and Mounting Position

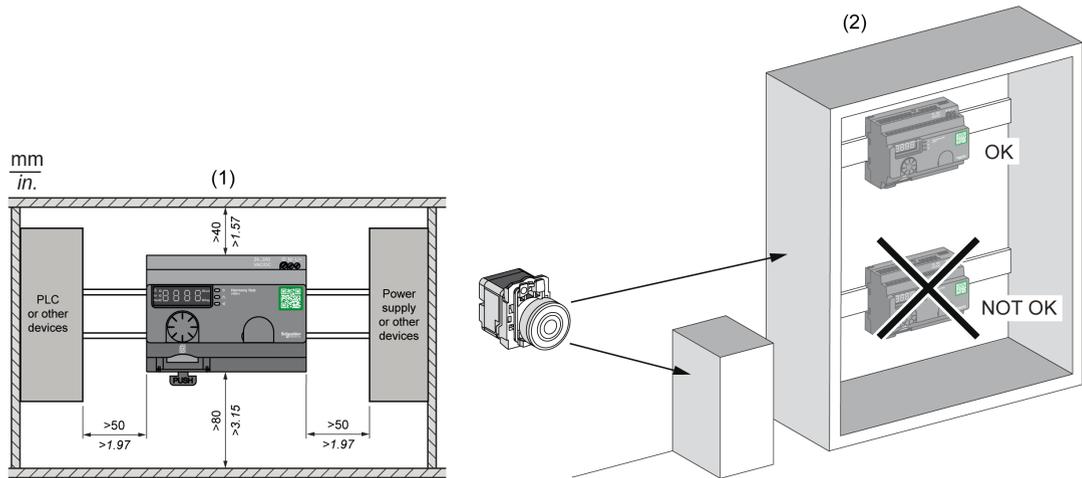

- (1) To enhance the signal reception, observe the above positioning.
- (2) In a metal cabinet, the optimum place for Harmony Hub is on the top. This position avoids obstacles and enhances the signal reception.

Section 2.3

Specifications

Electrical Specifications

Power Supply Specifications

Harmony Hub complies with the following power requirements:

Electrical Features	Description	
	AC Power Supply	DC Power Supply
Rated voltage	24...240 Vac	24...240 Vdc
Voltage range	21...264 Vac	21...264 Vdc
Rated frequency	50/60 Hz	–
Frequency range	47...63 Hz	–
Under voltage protection	No	
Terminal blocks	3-pin terminal with a pitch of 7.62 mm (0.3 in.) on the output terminal block	
Immunity to short interruptions (Conforming to IEC 61000-4-11)	10 ms	
Dielectric strength with others	3000 Vac / 4250 Vdc (input-output) 1500 Vac / 2150 Vdc (input-PE*)	
Short-circuit protection	Yes (internal fuse 2 A, 250 V)	
* PE = protective earth ground		

Power Supply Connections


You can connect the power supply to any common supply from 24...240 Vac/Vdc.

⚡ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Comply with the wiring diagram shown immediately after this message.

Failure to follow these instructions will result in death or serious injury.

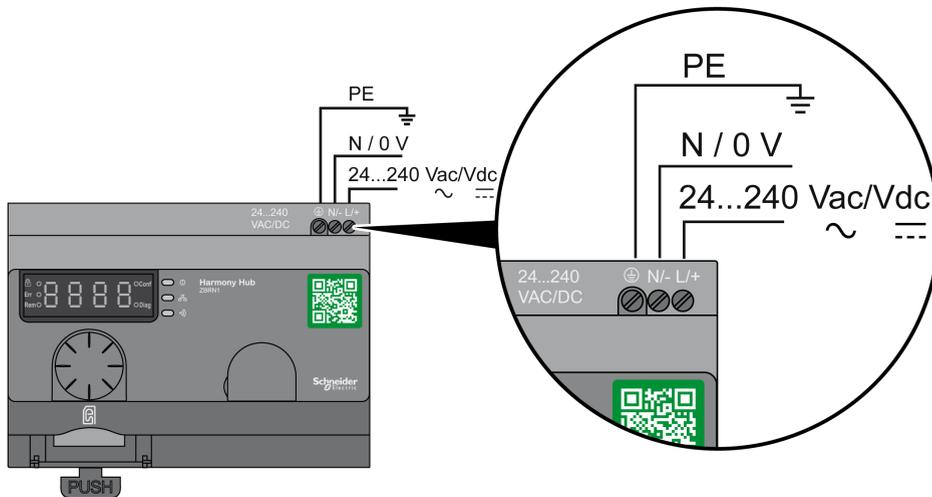

The following table shows the recommended wire sizes for the L/+ and N/- terminals:

$\frac{\text{mm}}{\text{in.}}$	$\frac{6}{0.24}$				
mm ²		0,75	0,75...2,5	1...4	1...1,5
AWG		18	18...14	17...12	17...16

The following table shows the recommended wire sizes for the PE terminal (protective earth ground):

$\frac{\text{mm}}{\text{in.}}$	$\frac{6}{0.24}$		
mm ²		0,75...4	0,75...4
AWG		18...12	18...12

The following table shows the recommend torque for the 3 terminals:

		N·m	0,35 ± 0,05
Ø 3,5 mm / 0.14 in.		lb·in	3.10 ± 0.44

 WARNING

UNINTENDED EQUIPMENT OPERATION

For the protective earth ground (PE) wiring, use a cable not longer than 300 mm (11.8 in.).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The following table shows the input power consumption:

Reference	Input Power
ZBRN1	9 W
ZBRN2	3.3 W

 WARNING

UNINTENDED EQUIPMENT OPERATION

- Supply this product with a power line protected by a circuit breaker rated 16 A maximum and a ground fault circuit breaker.
- A readily accessible disconnect device shall be incorporated external to the equipment.
- Install this product in an electrical cabinet and lock the cabinet using a key.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Section 2.4

Data Management

What Is in This Section?

This section contains the following topics:

Topic	Page
Compatibility Rules	42
Transmitter Types	43
Monostable Input	45
Set/Reset	46
Receiver Types	47

Compatibility Rules

Transmitter Compatibility

ZBRT2 transmitter is compatible with the following only:

- ZBRRRA, ZBRRRC, and ZBRRD receivers with firmware version 2.0 and higher
- ZBRA1 relay antenna with firmware version 2.0 and higher
- ZBRN1 /ZBRN2 Harmony Hubs with firmware version higher than 1.2


ZBRN• Harmony Hubs Compatibility

ZBRN• Harmony Hub transmitters are compatible with the following only:

- ZBRRH receiver with firmware version 1.03 and higher


Transmitter Types

ZBRT1 and ZBRTP Transmitters

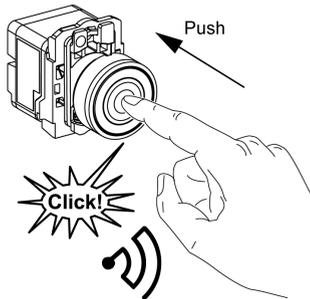


The radio message is sent when the button is pressed, signaled by a click. If the button is held down, the message is not transmitted continuously. The message is not sent when the button is released.

To avoid any conflict of multiple transmission from different transmitters, a minimum of 10 ms is required between each radio transmission.

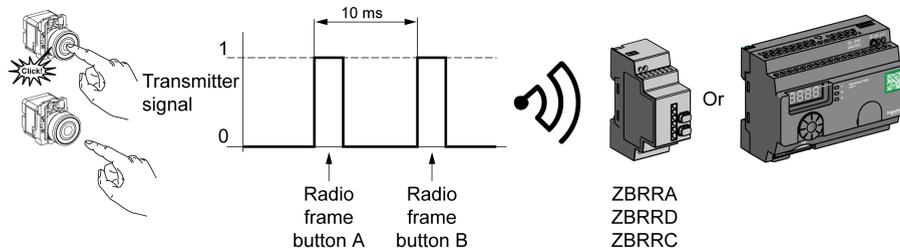

ZBRT1 is used for applications where single pulse is required (for example, remote start of machine and reset after machine fault detection).

ZBRT2 Transmitter

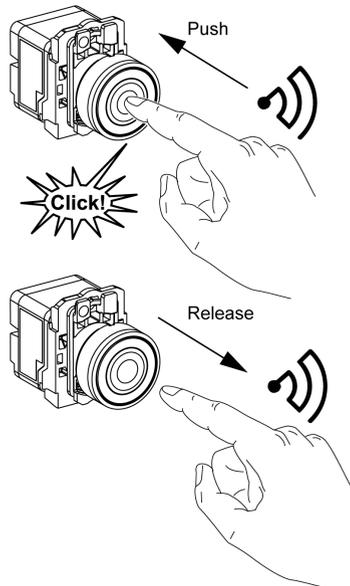

The radio message is sent when the button is pressed, signaled by a click.

If the button is held down, the message is not transmitted continuously.

A second radio message is sent when the button is released. This message is not transmitted continuously. It is transmitted once, at the release of the push-button.

This transmitter is used only for the set/reset output mode.

Monostable Input

Principle

The battery-less transmitter is equipped with a dynamo generator that converts mechanical energy (produced by pressing the push-button) into electrical energy. A radio-coded message with a unique ID code is sent in single pulse form.


The radio signal is transmitted when the push-button is pressed. This action is indicated by a click in the example shown below. If the button is held, the signal is not transmitted continuously. No signal is sent when the button is released.

The corresponding input channel of Harmony Hub stays active, depending on the input holding time range, from 100 ms...1 s.

The input holding time is set for all the input channels.


Example

The following figure shows an example of a monostable channel with the input holding time of 500 ms:

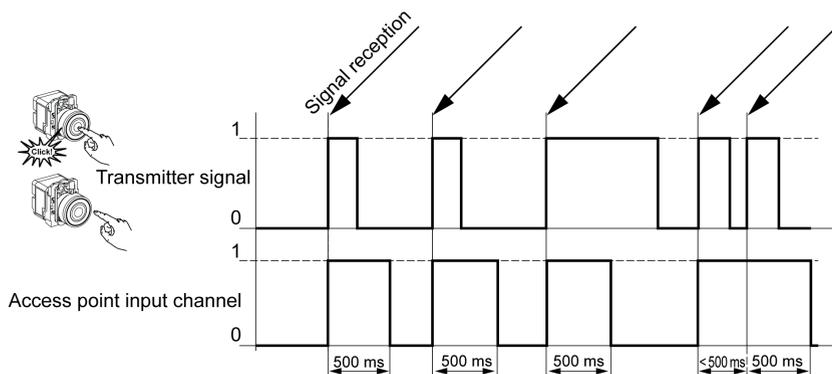

Set/Reset

Push-button Set/Reset

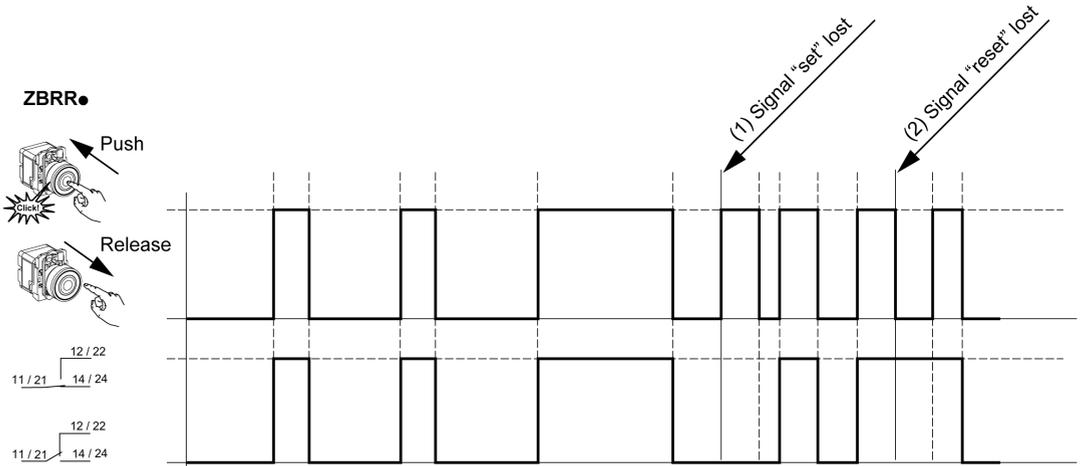


NOTE:

1. Release and push again to resynchronize
2. Push and release again to resynchronize

Receiver Types

ZBRN Transmitter / ZBRRH Receiver

Harmony Hub can communicate with up to 60 ZBRRH receivers

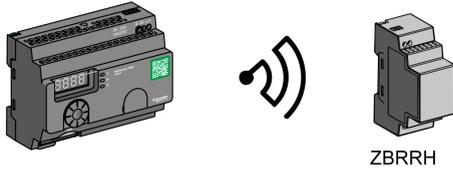

Chapter 3

First Installation

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
First Start Up	50
Configuration	52
Pairing Procedures	54

First Start Up

Overview

Follow this procedure when installing and starting up Harmony Hub.

ZBRN1 Startup Procedure

The following table shows the startup procedure for ZBRN1 Harmony Hub:

Step	Action	Comments
1	Unpack your Harmony Hub (ZBRN1), the Ethernet communication Module (ZBRCETH), and check the contents of the packages.	Refer to package content (<i>see page 20</i>).
2	Insert the communication module in Harmony Hub.	Refer to ZBRCETH Communication Module (<i>see page 62</i>).
3	Choose an appropriate cabinet.	Refer to Mechanical Installation (<i>see page 33</i>).
4	Install Harmony Hub on a DIN rail, a grid, or a plate.	
5	If needed, connect the external antenna to Harmony Hub.	Refer to Mounting Tips for ZBRA2 External Antenna (<i>see page 151</i>).
6	Ensure that upstream power is off. Connect the external 24...240 Vac/Vdc power supply.	Refer to Power Supply Connections (<i>see page 38</i>).
7	Turn on the power.	–
8	Configure Harmony Hub through the user interface.	Refer to User Interface (<i>see page 167</i>).
9	Connect Ethernet communication buses and network.	Refer to the Ethernet Cable (<i>see page 71</i>).
10	Verify all the connections.	–
11	Run the application.	–

NOTE: If you want to access to call to action features (*see page 18*), you have to proceed to the firmware update (3.29 and higher) (*see page 192*).

ZBRN2 Startup Procedure

The following table shows the startup procedure for the ZBRN2 Harmony Hub:

Step	Action	Comments
1	Unpack your Harmony Hub (ZBRN2) and check the contents of the package.	Refer to package content (<i>see page 21</i>).

Step	Action	Comments
2	Choose an appropriate cabinet.	Refer to Mechanical Installation (<i>see page 33</i>).
3	Install Harmony Hub on a DIN rail, a grid, or a plate.	
4	If needed, connect the external antenna to Harmony Hub.	Refer to Mounting Tips for the ZBRA2 External Antenna (<i>see page 151</i>).
5	Ensure that upstream power is off. Connect the external 24...240 Vac/Vdc power supply.	Refer to Power Supply Connections (<i>see page 38</i>).
6	Turn on the power.	–
7	Configure Harmony Hub through the user interface.	Refer to User Interface (<i>see page 167</i>).
8	Connect the serial line communication buses and network.	Refer to Modbus Serial Line Cables (<i>see page 82</i>).
9	Connect line termination devices to Harmony Hub (optional).	Refer to Modbus Serial Line Cabling (<i>see page 78</i>).
10	Verify all the connections.	–
11	Run the application.	–

NOTE: If you want to access to call to action features (*see page 18*), you have to proceed to the firmware update (3.29 and higher) (*see page 192*).

Configuration

Mandatory Settings

Configure the following 2 types of parameters:

- Communication protocol
- Wireless devices association

Configure Harmony Hubs through the user interface. Refer to Configuration Menu (*see page 167*).

Transmitters Association Definition

For each input channel of Harmony Hub, the following states are possible:

- Empty: No transmitter associated with the input.
- Associated **off-line**: The input parameters are configured but no radio exchanges have been performed.
- Associated **on-line**: The input parameters are configured and radio exchanges have been performed.

HMI display for the input states:

-  means that the input 2 is free
-  means that the input 2 is associated **off-line**
-  means that the input 2 is associated **on-line**


ZigBee Over the Air



The transmitter may be:

- Static: Data are only sent by the transmitter to Harmony Hub during pairing. There is no encryption key or the encryption key is hard-coded in the transmitter and sent to Harmony Hub.
- OTA (Over the Air): The transmitter and Harmony Hub exchange data while pairing. The encryption key is generated by Harmony Hub and sent to the transmitter.

Supported Transmitter Types

The following transmitter types are supported:

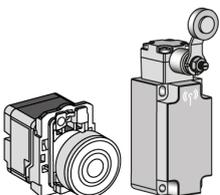Type number	HMI label	Related transmitters
1		 <p>Push buttons, limit switches, ...</p>

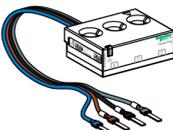Type number	HMI label	Related transmitters	
2	<i>E 3</i>	Reserved	
3	<i>h</i>	Reserved	
4	<i>CL</i>		Humidity and thermal monitoring sensors
5	<i>Et</i>		Thermal monitoring sensors
6	<i>S1</i>		Generic ZigBee, PowerTag sensors

Pairing Modes

Depending on the type of transmitter associated, three pairing modes are available:

Menu	Description	Compatible transmitters	Transmitter Types
<i>id</i>	Manual pairing. The ID of the transmitter is set manually.	Static transmitters <ul style="list-style-type: none"> • So • S1 	Transmitters type <ul style="list-style-type: none"> • 1 • 6
<i>h</i>	Teach pairing ⁽¹⁾ The first transmitter emitting a pairing request is paired to this input.	OTA transmitters <ul style="list-style-type: none"> • So • CL • Et • S1 	Transmitters type <ul style="list-style-type: none"> • 1 • 4 • 5 • 6
<i>h id</i>	Teach pairing with ID ⁽¹⁾ Only the transmitter emitting a pairing request with the correct ID is paired to this input.	OTA transmitters <ul style="list-style-type: none"> • So • CL • Et • S1 	Transmitters type <ul style="list-style-type: none"> • 1 • 4 • 5 • 6
(1) The pairing request must be received by Harmony Hub within 2 minutes after the pairing mode has been selected.			

Pairing Procedures

Overview

The steps to follow to add and pair a transmitter to an input of Harmony Hub depends on the type of transmitter to add.

In the following examples, consider that four inputs are already configured and that the new transmitter is paired to the free input 2.

Procedure examples:

- Adding a Type 1 Transmitter Through the User Interface ([see page 54](#))
- Adding a Type 4 Transmitter Through the User Interface ([see page 55](#))
- Adding a Type 5 Transmitter Through the User Interface ([see page 56](#))
- Adding a Type 6 Transmitter Through the User Interface ([see page 57](#))
- Teach an Associated Off-line Transmitter Through the User Interface ([see page 58](#))
- Adding a ZBRRH Receiver Through the User Interface ([see page 59](#))

Refer to Supported Transmitter Types ([see page 52](#)).

Adding a Type 1 Transmitter Through the User Interface

NOTE: Type 1 transmitters can be paired with several Harmony Hubs.

Steps to follow to add a type 1 transmitter using the *1 d* pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	<i>r d Y > C o n F > i n . 0 4 > , 0 2</i>
2	Select the type of transmitter.	<i>t Y . 5 a</i> : push-buttons or limit switches
3	Select the pairing mode.	<i>1 d</i> : Manual pairing
4	Enter the first two digits of the transmitter ID.	-
5	Enter the last two digits of the transmitter ID.	<i>, _ 0 2</i> is displayed (associated on-line)

Steps to follow to add a type 1 transmitter using the *t* pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	<i>r d Y > C o n F > i n . 0 4 > , 0 2</i>
2	Select the type of transmitter.	<i>t Y . 5 a</i> : push-buttons or limit switches
3	Select the pairing mode.	<i>t</i> : Teach pairing
4	Harmony Hub is waiting for a pairing request.	<i>t</i> is blinking If the commissioning request is not received within 2 minutes <i>, 0 2</i> is displayed, the input is free.

Step	Action	Comment
5	Press the transmitter button 3 times.	<p>L 1 is displayed at first press</p> <p>L 2 is displayed at second press</p> <p>L 3 is displayed quickly at third press</p> <p>, - 0 2 is displayed (associated on-line)</p>

Steps to follow to add a type 1 transmitter using the **L ID** pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	r d y > C o n F > , n . 0 4 > , 0 2
2	Select the type of transmitter.	L Y . 5 0 : push-buttons or limit switches
3	Select the pairing mode.	L ID : Teach pairing with ID
4	Enter the first two digits of the transmitter ID.	-
5	Enter the last two digits of the transmitter ID.	-
6	Harmony Hub is waiting for a pairing request.	<p>L is blinking</p> <p>If the commissioning request is not received within 2 minutes, , - 0 2 is displayed (associated off-line), refer to Teach an Associated Off-line Transmitter (see page 58).</p>
7	Press the transmitter button once.	, - 0 2 is displayed (associated on-line)

Adding a Type 4 Transmitter Through the User Interface

NOTE: Type 4 transmitters can be paired with only one Harmony Hub.

The transmitter must be unpaired before to pair it to Harmony Hub.

To unpair the humidity and thermal monitoring sensor, press and maintain the transmitter button until its embedded led flashes three times, and wait 15 s before to start the new pairing.

Steps to follow to add a type 4 transmitter using the **L ID** pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	r d y > C o n F > , n . 0 4 > , 0 2
2	Select the type of transmitter.	L Y . C L : Humidity and thermal monitoring sensors
3	Select the pairing mode.	L ID : Teach pairing with ID
4	Enter the first two digits of the transmitter ID.	-
5	Enter the last two digits of the transmitter ID.	-

Step	Action	Comment
6	Harmony Hub is waiting for a paring request.	<p>Ⓛ is blinking</p> <p>If the commissioning request is not received within 2 minutes, Ⓛ - 0 2 is displayed (associated off-line), refer to Teach an Associated Off-line Transmitter (<i>see page 58</i>).</p>
7	Press and maintain the transmitter button until its embedded led flashes two times to set it on commissioning mode	<p>Ⓛ 1 is displayed at first frame received</p> <p>Ⓛ 2 is displayed at second frame received</p> <p>Ⓛ 3 is displayed quickly at third frame received</p> <p>Ⓛ - 0 2 is displayed (associated on-line)</p>

Adding a Type 5 Transmitter Through the User Interface

NOTE: Type 5 transmitters can be paired with only one Harmony Hub. The transmitter must be unpaired before to pair it to Harmony Hub.

To unpair the thermal monitoring sensor, press and maintain the transmitter button until its embedded led flashes three times, and wait 15 s before to start the new pairing.

Steps to follow to add a type 5 transmitter using the Ⓛ ID pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	rdY > CONF > in.04 > Ⓛ 0 2
2	Select the type of transmitter.	Ⓛ Y.E Ⓛ : Thermal monitoring sensors
3	Select the pairing mode.	Ⓛ ID : Teach pairing with ID
4	Enter the first two digits of the transmitter ID.	-
5	Enter the last two digits of the transmitter ID.	-
6	Harmony Hub is waiting for a paring request.	<p>Ⓛ is blinking</p> <p>If the commissioning request is not received within 2 minutes, Ⓛ - 0 2 is displayed (associated off-line), refer to Teach an Associated Off-line Transmitter (<i>see page 58</i>).</p>
7	Press and maintain the transmitter button until its embedded led flashes two times to set it on commissioning mode	<p>Ⓛ 1 is displayed at first frame received</p> <p>Ⓛ 2 is displayed at second frame received</p> <p>Ⓛ 3 is displayed quickly at third frame received</p> <p>Ⓛ - 0 2 is displayed (associated on-line)</p>

Adding a Type 6 Transmitter Through the User Interface

NOTE: Type 6 transmitters can be paired with only one Harmony Hub. A type 6 transmitter must be unpaired before to pair it to Harmony Hub. For more details about type 6 transmitter unpairing procedure, refer to the transmitter documentation.

Steps to follow to add a type 6 transmitter using the Teach pairing mode:

Step	Action	Comment
1	Go on a free input of Harmony Hub (input 2 in this example).	<code>r d 4 > C o n F > i n . 0 4 > , 0 2</code>
2	Select the type of transmitter.	<code>t 4.5 1</code> : Generic transmitter, PowerTag
3	Select the pairing mode.	<code>t , d</code> : Teach pairing with ID
4	Enter the first two digits of the transmitter ID.	-
5	Enter the last two digits of the transmitter ID.	-
6	Harmony Hub is waiting for a pairing request.	<code>t</code> is blinking If the commissioning request is not received within 2 minutes, <code>, - 0 2</code> is displayed (associated off-line), refer to Teach an Associated Off-line Transmitter (see page 58).
7	The self-powered PowerTag transmitter sends frame periodically.	<code>t 1</code> is displayed at first frame received <code>t 2</code> is displayed at second frame received <code>t 3</code> is displayed quickly at third frame received <code>, - 0 2</code> is displayed (associated on-line)

Teach an Associated Off-line Transmitter Through the User Interface

A transmitter is associated off-line if the transmitter ID is already configured but no radio exchanges have been performed.

Steps to follow to teach a transmitter that is associated off-line:

Step	Action	Comment
1	Go on an associated off-line input of Harmony Hub (input 2 in this example).	<i>r d y > C o n F > i n . 0 4 > , - 0 2</i>
2	Select the pairing mode.	<i>L</i> : Teach pairing
3	Harmony Hub is waiting for a pairing request.	<i>L</i> is blinking If the commissioning request is not received within 2 minutes, <i>, - 0 2</i> is displayed (associated off-line).
4	According to the transmitter type: <ul style="list-style-type: none"> ● Type 1: Press the transmitter button 3 times. ● Type4: Press and maintain the transmitter button until its embedded led flashes two times to set it on commissioning mode. ● Type5: Press and maintain the transmitter button until its embedded led flashes two times to set it on commissioning mode. ● Type 6: The self-powered PowerTag transmitter sends frame periodically. 	<i>L 1</i> is displayed at first frame received <i>L 2</i> is displayed at second frame received <i>L 3</i> is displayed quickly at third frame received <i>, - 0 2</i> is displayed (associated on-line)

Adding a ZBRRH Receiver Through the User Interface

As a prerequisite, the Harmony Hub must have a MAC/ID. For more details, refer to Factory Mode ([see page 182](#)).

Steps to follow to teach an Output (ZBRRH receiver) through the user interface:

Step	Action	Comment
1	On the ZBRRH: Start Teach mode	Select button Choice during 3 s. Then led 1 to 4 blink. Press button Ok once
2	On the Harmony Hub: Go on Output configuration menu (input 2 in this example)	<code>r d Y > [o n F > o u . 0 4 > o u 0 2</code>
3	Select the pairing mode.	<code>E > Y E 5</code> E : Teach pairing
4	Harmony Hub sends Pairing request	-
5	On the ZBRRH: ZBRRH is commissioned	The Q1...Q4 outputs are active during 1 s after the teaching procedure.

ZBRRH Receiver turns-on one time (around 1 second) when commissioning and decommissioning with the Harmony Hub.

WARNING

UNINTENDED EQUIPMENT OPERATION

Before performing the ZBRRH commissioning or decommissioning with the Harmony Hub, consider the effect on all equipment connected to the ZBRRH.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

For a graphical explanation, refer to the teach ZBRRH procedure ([see page 93](#)).

Chapter 4

ZBRN1 Ethernet Communication

What Is in This Chapter?

This chapter contains the following topics:


Topic	Page
Communication on The Ethernet Network	62
Addressing Modes	66
Communication and Status Indicator	68
Modbus TCP Settings and Supported Functions	70
Ethernet Cable	71

Communication on The Ethernet Network

Introduction

Ethernet is a widely used, low-cost technology for local area networks. This technology is used to exchange data between several devices connected together on a network.

Network Connection

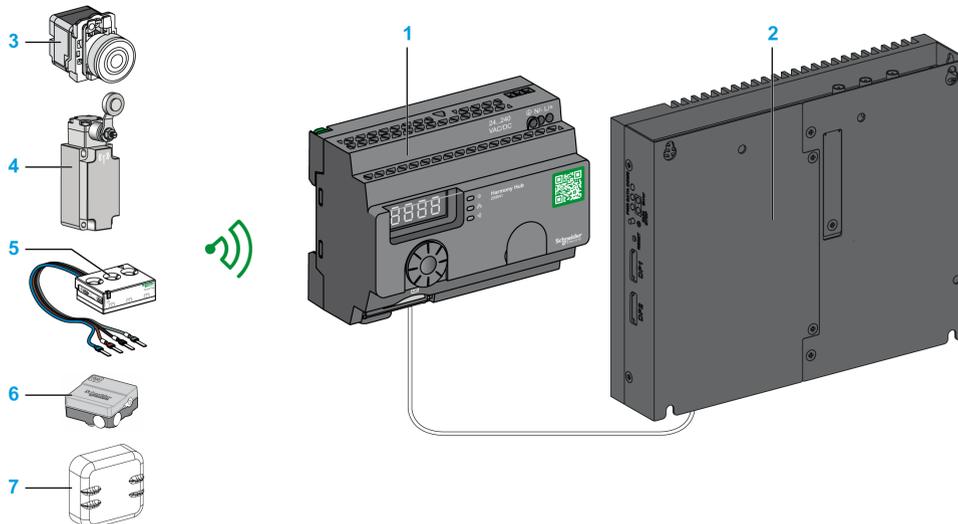



- 1 ZBRN1 Harmony Hub associated with ZBRCETH communication module
- 2 iPC
- 3 Pushbutton
- 4 Limit switch
- 5 Energy sensor
- 6 Humidity and thermal sensor
- 7 Thermal sensor

ZBRCETH Communication Module



ZBRCETH is a communication module that supports Ethernet Modbus TCP protocol.

The following procedure describes the insertion of the communication module:

Step	Action
1	Disconnect all power from the ZBRN1 Harmony Hub.

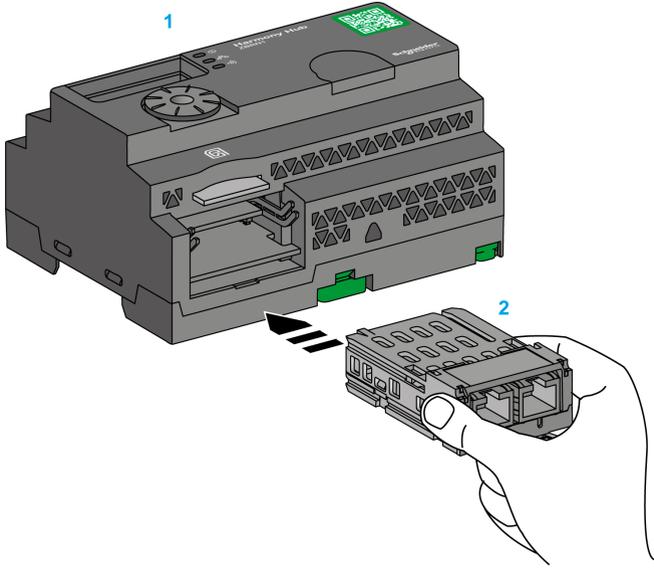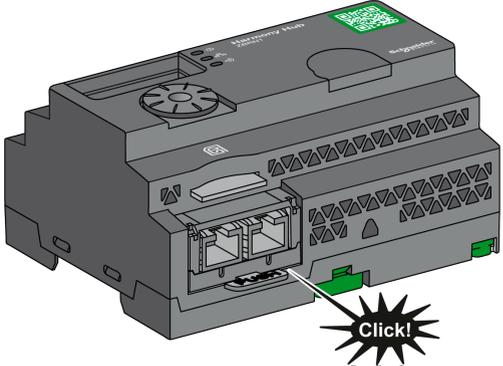Step	Action
2	<p data-bbox="353 204 762 228">Place the module in ZBRN1 Harmony Hub.</p>  <p data-bbox="353 862 724 911">1 ZBRN1 Harmony Hub 2 ZBRCETH communication module</p>
3	<p data-bbox="353 927 570 951">Press firmly into place.</p>  <p data-bbox="710 1284 769 1317">Click!</p>

The following procedure describes the removal of the communication module:

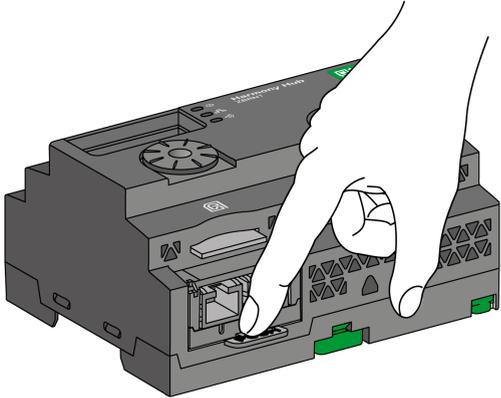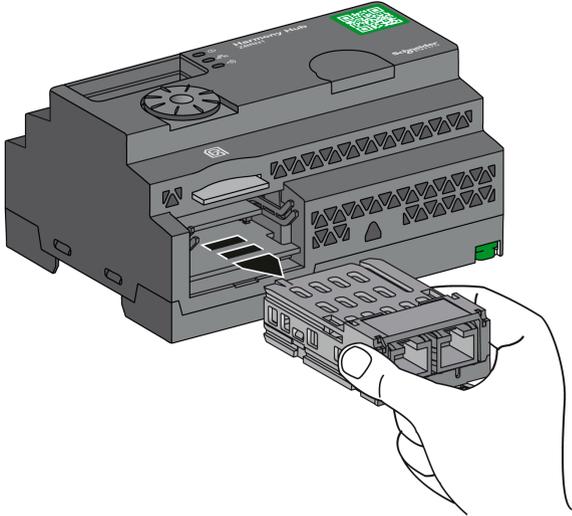Step	Action
1	Disconnect all power from the ZBRN1 Harmony Hub.
2	<p data-bbox="321 285 584 310">Push down the release tab.</p> 
3	<p data-bbox="321 776 513 800">Pull out the module.</p> 


ZBRCETH offers one Ethernet communication port equipped with two RJ45 plugs. It enables daisy chain wiring between devices without using a switch.

The following table shows the specifications of the communication module:

Feature	Specifications
Plug	Two RJ45 connectors
Driver	<ul style="list-style-type: none"> ● 10/100 MB/s ● Auto negotiation ● Half/Full duplex
Type of cable	Shielded
Topology	Daisy chain
Automatic polarity correction	Yes

RJ45 Layout Description

ZBRCETH communication module has two RJ45 connectors for Ethernet connectivity as shown in the following figure:

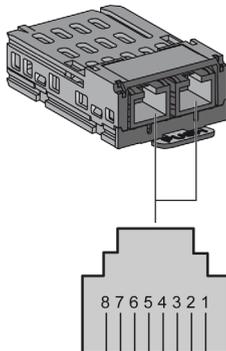

The following table shows the pin details of the RJ45 connector:

RJ45 pins	Signal	Description
1	TX+	Transmission signal
2	TX-	Transmission signal
3	RX+	Reception signal
4	Unused	–
5	Unused	–
6	RX-	Reception signal
7	Unused	–
8	Unused	–

Addressing Modes

Address Assignment

Assign the IP address to Harmony Hub using one of the following methods:

- By a DHCP (dynamic host control protocol) server.
- By a BOOTP (bootstrap protocol) server (BOOTP zone).
- Using the IP address stored in the flash memory.

NOTE: If Harmony Hub detects a duplicate address, it does not start until a unique address is assigned to the transmitter.

Address Assignment by a DHCP Server

The IP address assigned by a DHCP server is stored in a table of DHCP server.

Step	Action	Comments
1	Select DHCP mode from the Ethernet menu using the jog dial on Harmony Hub.	For further information, refer to the IP setting menu (<i>see page 179</i>).
2	Select the DHCP value between 0–159 using the jog dial.	This action defines the device name.
3	Wait 10 s.	When the display stops flashing after 10 s, Harmony Hub triggers a request for an IP address.

Address Assignment by BOOTP Server

The BOOTP server contains a MAC address table for the device connected to network with its IP address. The following steps explain how to assign the address to Harmony Hub from the BOOTP server:

Step	Action	Comments
1	Select the BOOTP mode from the Ethernet menu using the jog dial on Harmony Hub.	For further information, refer to the IP setting menu (<i>see page 179</i>).
2	Wait 10 s.	When the display stops flashing after 10 s, Harmony Hub triggers a request for an IP address.

Assignment of Stored IP Addresses

Harmony Hub uses the IP address stored in its flash memory. The following steps explain how to assign the address to Harmony Hub from the flash memory:

Step	Action	Comments
1	Select the Static IP mode from the Ethernet menu using the jog dial on Harmony Hub.	Harmony Hub uses the IP address stored in the flash memory. For further information, refer to the IP setting menu (<i>see page 179</i>).
2	Wait 10 s.	When the display stops flashing after 10 s, Harmony Hub triggers a request for an IP address.


Modbus Unit ID Parameter

Use the PLC with the following UIDs to access the device communication details:

- Use UID 247 to access the Ethernet diagnostics information (ZBRCETH communication module server).
- Use UID to access the Modbus TCP registers, such as input registers and holding time (ZBRN1 Harmony Hub server):
 - For firmware version \leq V1.5, use UID 248 or 255 to access the Modbus TCP registers
 - For firmware version = V3.26, use UID 248 to access the Modbus TCP registers
 - For firmware version \geq V3.31, use UID 248 or 255 to access the Modbus TCP registers

Communication and Status Indicator

Status LED on The ZBRN1 Harmony Hub

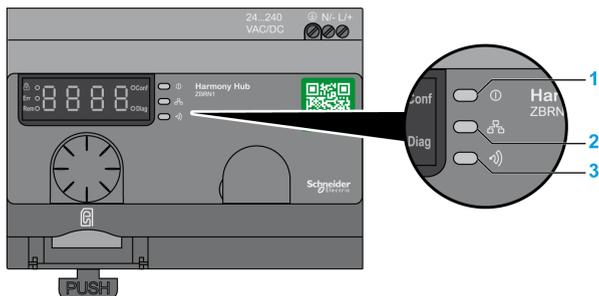


- 1 Power LED
- 2 Communication LED
- 3 Radio signal strength LED

The yellow Ethernet communication LED shows the following status:

- On/flashing: Data is being exchanged (depends on the quantity of information).
- Off: No data is being exchanged.

Status LED on The ZBRCETH Communication Module

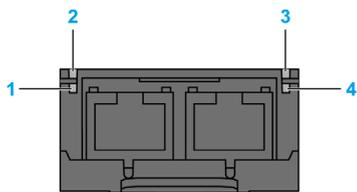

The following table shows the Ethernet Modbus TCP LED status:

Item	Name	LED State	Description	Module State
1	Link/Activity port 1	Solid green	Ethernet link is present at 100 Mbit/s.	The module is detecting an Ethernet link.
		Flashing green	Ethernet link is present with Ethernet traffic at 100 Mbit/s.	The module is detecting Ethernet traffic.
		Solid yellow	Ethernet link is present at 10 Mbit/s.	The module is detecting an Ethernet link.
		Flashing yellow	Ethernet link is present with Ethernet traffic at 10 Mbit/s.	The module is detecting Ethernet traffic.

Item	Name	LED State	Description	Module State
2	Module status	Green	On.	The module is turned on.
			Off.	The module is off.
3	Network status	Red	Harmony Hub is being turned on.	The module is being turned on.
		Solid green	The network is operating normally.	The module is operating normally.
		4 flashes	A duplicate IP condition exists.	The module is offline.
		5 flashes	The module is attempting to get an IP configuration from BootP server.	The module is sending BOOTP/DHCP requests to a BootP server and awaiting a reply.
		6 flashes	The operation is normal with default IP addressing settings.	The BootP request timed out. The module applies the default IP address (85.16.x.y).
4	Link/Activity port 2	Solid green	Ethernet link is present at 100 Mbit/s.	The module is detecting an Ethernet link.
		Flashing green	Ethernet link is present with Ethernet traffic at 100 Mbit/s.	The module is detecting Ethernet traffic.
		Solid yellow	Ethernet link is present at 10 Mbit/s.	The module is detecting an Ethernet link.
		Flashing yellow	Ethernet link is present with Ethernet traffic at 10 Mbit/s.	The module is detecting Ethernet traffic.

Modbus TCP Settings and Supported Functions

For further information on Modbus TCP settings, refer to the Modbus Settings and Supported Functions (*see page 80*).

Ethernet Cable

Ethernet Cable for ZBRN1 Harmony Hub

The following figure shows the Ethernet cable used to connect to the terminal equipment:



1

Item	Description	Reference	Length
1	Ethernet cable (2 x RJ45 connectors, one at each end)	490NTW00002U	2 m (6.6 ft)
		490NTW00005U	5 m (16.4 ft)
		490NTW00012U	12 m (39.4 ft)

Chapter 5

ZBRN2 Modbus Serial Line Communication

Purpose

This chapter provides an overview of the Modbus layout description, communication and status indicator, line termination mode, settings, and the supported functions.

For more details, refer to Modbus Serial Modbus Serial Link for Machines documentation (*see page 10*).

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Communication on The Modbus Network	74
Communication and Status Indicator	77
Modbus Serial Line Wiring	78
Modbus Settings and Supported Functions	80
Modbus Serial Line Cables	82

Communication on The Modbus Network

Introduction

The Modbus protocol is a master/slave protocol. It allows a single master to request responses from the slaves, or to act based on the request. The master can address individual slaves, or can send a broadcast message to all slaves. The slaves return a message (response) to requests addressed to them individually. The slaves do not return responses to broadcast requests from the master.


⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

Do not use more than one master on the Modbus network. Unintended I/O behavior can result if more than one master is able to communicate on the network at the same time.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Network Connection

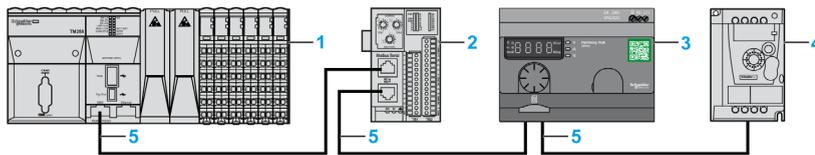

- 1 PLC as master
- 2 Modbus Advantys OTB network interface module
- 3 ZBRN2 Harmony Hub
- 4 ATV12 drive
- 5 Modbus serial line

Modbus Serial Ports

The following figure shows the serial line connectors in ZBRN2 :

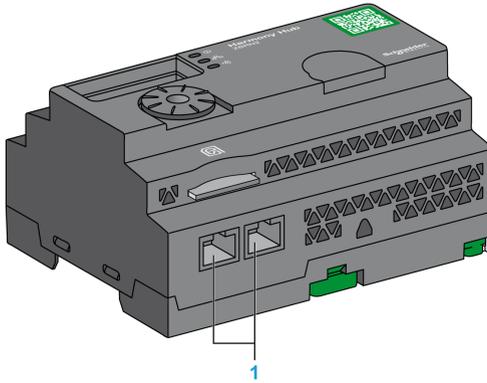

1 Serial line connectors


ZBRN2 offers 1 Modbus serial line communication port equipped with 2 RJ45 plugs. It enables wiring between the devices without using a hub.

The following table shows the specifications of ZBRN2 :

Features	Specification
Function	Modbus slave and Modbus RTU
Plug	2 RJ45 connectors
Isolated	Yes
Maximum cable length	1000 m (3280.83 ft)
Polarization	No
Supported baud rates	Auto/1200/2400/4800/19200/38400/115200
Parity	Even/Odd/No/Auto
Stop bit	1 bit (even and odd) 2 bits (no parity)

RJ45 Layout Description


Modbus serial port is an RS-485, 2-wire and common Modbus serial line using a RJ45 connector. The following figure shows the layout of RJ45 connector:

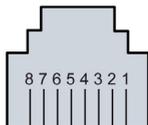

RJ45 pin	Signal	Description
1	Unused	–
2	Unused	–
3	Unused	–
4	D1	Transmission signal.
5	D0	Reception signal.
6	Unused	Reserved.
7	Unused	Reserved (5...24 Vdc).
8	Common	Common of signal and supply.

Communication and Status Indicator

Modbus Communication and Status LED

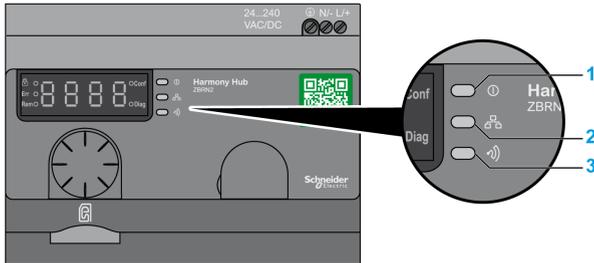

- 1 Power LED
- 2 Communication LED
- 3 Radio signal strength LED


The yellow Modbus communication LED shows the following status:

- On/flashing: Data is being exchanged (depends on the quantity of information).
- Off: No data is being exchanged.

Modbus Serial Line Wiring

Network Connection

You can directly connect Harmony Hub to a PLC for a distance up to 20 m (65.62 ft) as shown in the following figure:

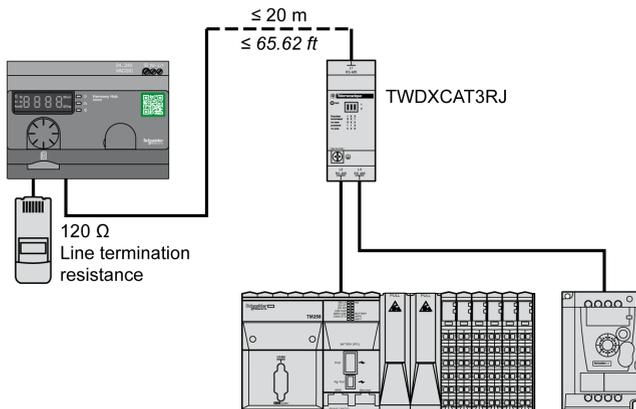

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION


- Use a Modbus serial line cable not longer than 20 m (65.62 ft).
- Add a 120 ohm termination line when Harmony Hub is located at the end of the Modbus serial line (reference VW3A8306RC).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Using TWDXCAT3RJ

TWDXCAT3RJ is used for three connections, polarization, and line termination.


The following figure shows the connection of the device on the bus using TWDXCAT3RJ:

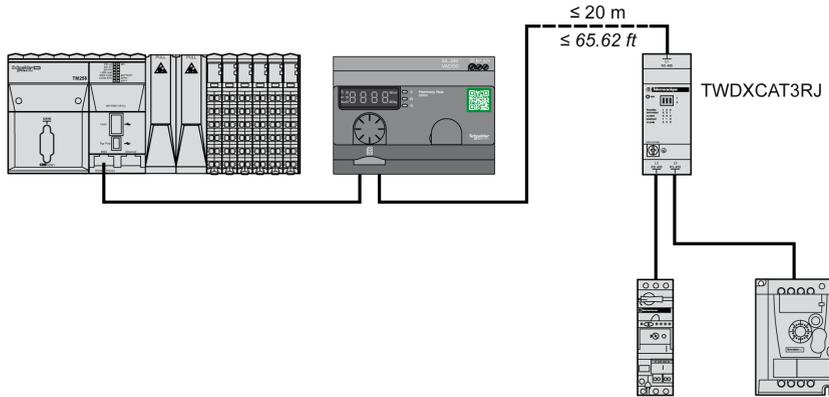

Using TWDXCAISO

TWDXCAISO is used for isolation and line termination.

The following figure shows the connection of the device on the bus using TWDXCAISO (even if Harmony Hub is already isolated):

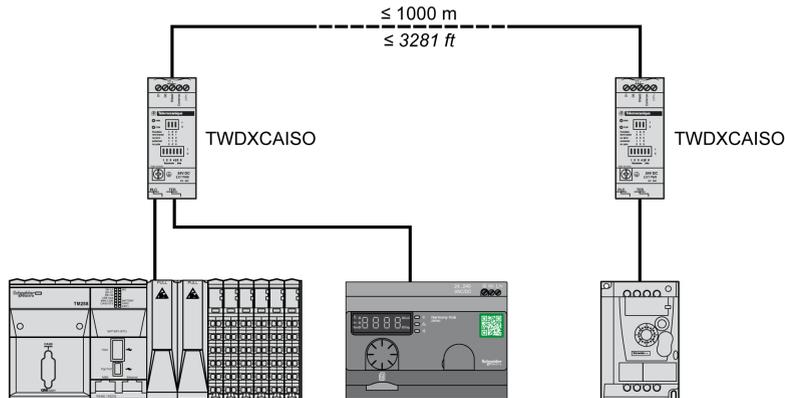

For distances longer than 20 m (65.62 ft), verify that the other devices connected to the bus are isolated. If other devices are not isolated, use the TWDXCAISO module.

Modbus Settings and Supported Functions

Modbus Message Structure

The Modbus protocol uses 16-bit words (registers) divided into 2 bytes of 8 bits each.

A Modbus message starts with a header followed by a 1-byte address. A Modbus message uses a Modbus function as its first byte.

The following table shows the full structure of a Modbus RTU message:

Address	Modbus Messages		CRC
	Function Code	Data	
1 byte	1 byte	n-byte field	2 bytes

List of Supported Commands

The following table shows the list of Modbus commands:

Modbus Function Code: Dec Index (Hex)	Sub-Function: Modbus Encapsulated Interface	Command	Description
01 (0001 H)	–	Read coils.	This function code is used to read the content of one or more contiguous coil statuses in a slave.
03 (0003 H)	–	Read holding registers.	This function code is used to read the content of one or more adjacent registers in a slave.
06 (0006 H)	–	Write single register.	This function code is used to write the content of a register in a slave.
16 (0010 H)	–	Write n registers.	This function code is used to write the content of one or more contiguous registers in the slave.
43 (002B H)	14 (000E H)	Read device identification.	This function code is used to read the identification and other information relating to the physical description of a slave.

NOTE: Registers can be read or written only if the registers are adjacent.

List of Identification Registers

The following table lists the Modbus identification registers:

Identifier	Register Name	Value	Data Type
0 (0000 H)	VendorName	Schneider Electric	ASCII string
1 (0001 H)	ProductCode	ZBRN1: 052848 ZBRN2: 052849	
2 (0002 H)	MajorMinorRevision	1.0 for the first official version	
3 (0003 H)	VendorUrl	https://www.schneider-electric.com	
4 (0004 H)	ProductName	Harmony	
5 (0005 H)	ModelName	ZBRN1 ZBRN2	


Abort Code

Function Code	Abort Code	Description
03 H	02 H	One of the registers does not exist.
	03 H	Incorrect register number.
	04 H	Unavailable value.
06 H	02 H	The register does not exist.
	04 H	Invalid value or register in read only.
10 H	02 H	The register does not exist.
	03 H	Incorrect register number.
	04 H	Invalid value or register in read only.
2B H	01 H	Modbus encapsulated interface different from 14.
	02 H	Identifier does not exist.
	03 H	Identifier > 4 or = 0

Modbus Serial Line Cables

Modbus Serial Line Cables for ZBRN2 Harmony Hub

The following figure shows the Modbus serial line cable with 2 RJ45 connectors to connect to any device supporting the protocol:

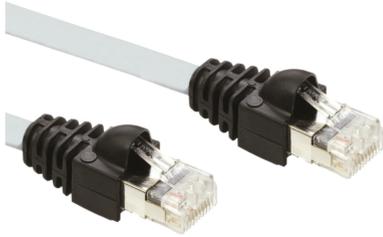

1

Item	Description	Reference	Length
1	Modbus serial line cable	VW3A8306R03	0.3 m (0.9 ft)
		VW3A8306R10	1 m (3.2 ft)
		VW3A8306R30	3 m (9.8 ft)

The following figure shows the Modbus serial line cable with 1 RJ45 connector and 1 mini DIN connector to connect to a Twido PLC:



2

Item	Description	Reference	Length
2	Modbus serial line cable for Twido PLC	TWDXCARJ003	0.3 m (0.9 ft)
		TWDXCARJ010	1 m (3.2 ft)
		TWDXCARJ030	3 m (9.8 ft)

The following figure shows the Modbus serial line cable with 1 RJ45 connector and one USB connector to connect to a PC:




3

Item	Description	Reference	Length
3	Modbus serial line cable	TCSMCNAM3M002P	2.5 m (8.2 ft)

The following figures show USB to RS-485 converter and Modbus serial line cable to connect to a PC:



4a

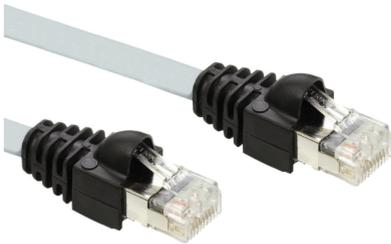

4b

Item	Description	Reference	Length
4a	USB to RS-485 converter	TSXCUSB485	–
4b	Modbus serial line cable	VW3A8306R03	–

The following figures show USB to RS-485 converter and Modbus serial line cable to connect to a Twido PLC.



Item	Description	Reference	Length
5a	USB to RS-485 converter	TSXCUSB485	–
5b	Modbus serial line cable for Twido PLC	TWDXCARJP03P	–

Chapter 6

ZBRRH Receiver for Harmony Hub

Purpose

This chapter provides an overview of the Harmony ZBRRH receiver, hardware description, output connectors, installation, power supply connections, and main procedures.

What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Presentation of ZBRRH	86
General Installation Instruction for ZBRRH	87
Receiver Wiring Diagram	91
LED Status	92
How to Teach/Unteach ZBRRH	93
Lock/Unlock for ZBRRH	96
Total Reset Function Description	99

Presentation of ZBRRH

Programmable Receiver

The following figure shows the Harmony ZBRRH receiver:

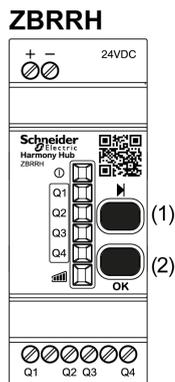

(1): Selection button

(2): Validation button

The following table describes the characteristics of the receiver:

Designation	Ouputs	Receiver Voltage	Reference	Mass
Receiver with indicator light LED and teach button	4 PNP 200 mA	24 Vdc	ZBRRH	0.130 kg (0.287 lb)

General Installation Instruction for ZBRRH


Overview

The general installation instructions for ZBRRH are the same as the ZBRN ones:

- Maximum distances transmitter/receiver,
- The installation conditions,
- The mounting tips,
- The mounting tips for antenna,
- ...

For more details, refer to the ZBRRH Instruction Sheet.

Maximum Distances

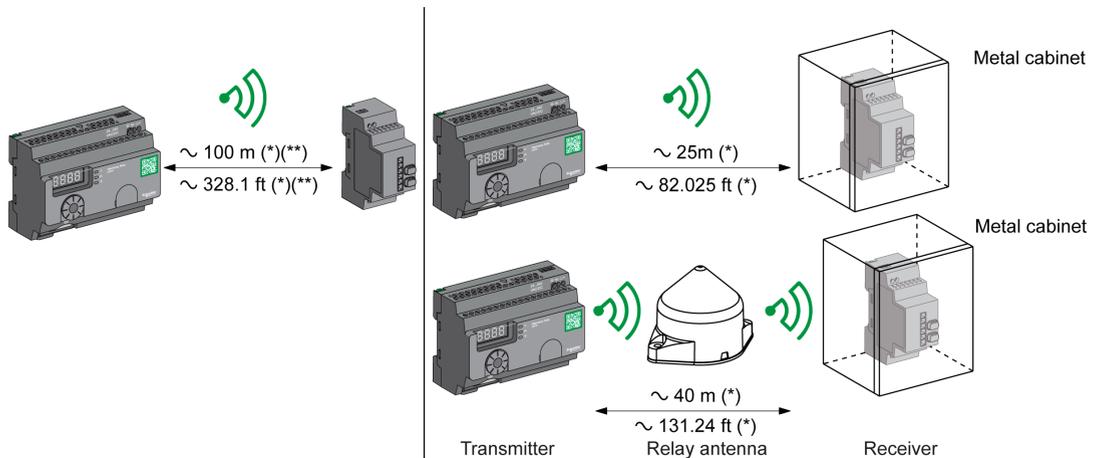

(*) Typical values that may be modified by the application environment.

(**) Free field (unobstructed).

NOTE:

- The range may be increased by adding antenna ZBRA1.
- The range is reduced if the transmitter is placed in a metal box (reduction factor: approx. 10%).
- Once wiring is complete, test the product in all possible active areas (while remaining within range).

NOTE: The relay antenna must have a firmware version $\geq V3.2$.

The level of signal attenuation depends on the materials through which the signal will pass:


Material	Attenuation
Glass window	10...20 % (*)
Plaster wall	30...45 % (*)
Brick wall	60 % (*)
Concrete wall	70...80 % (*)
Metal structure	60...100 % (*)
(*) Values for indication purposes only. Actual values depend on the thickness and nature of the material.	

Installation Conditions

Receiver operating temperature	-25...+55°C (-13...+131°F)
Receiver protection level	IP20


Mounting Tips for Antenna


The ZBRA1 relay antenna is installed with regard to its vertical axis as shown in the following figure

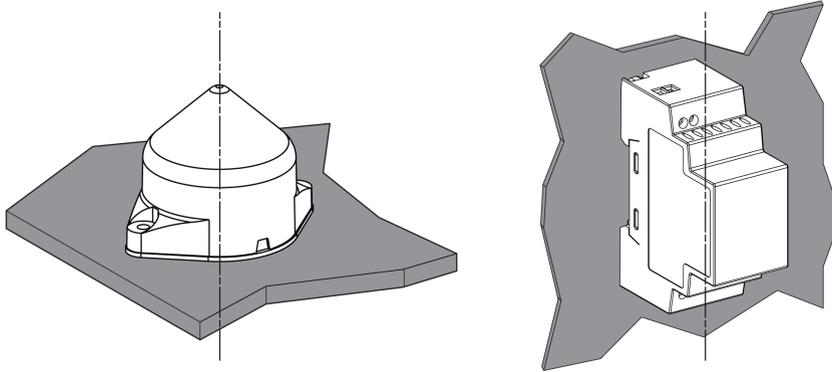

The antenna and the receiver are installed following their vertical axis.

The relay antenna is used to bypass the obstacle as shown in the following figure:

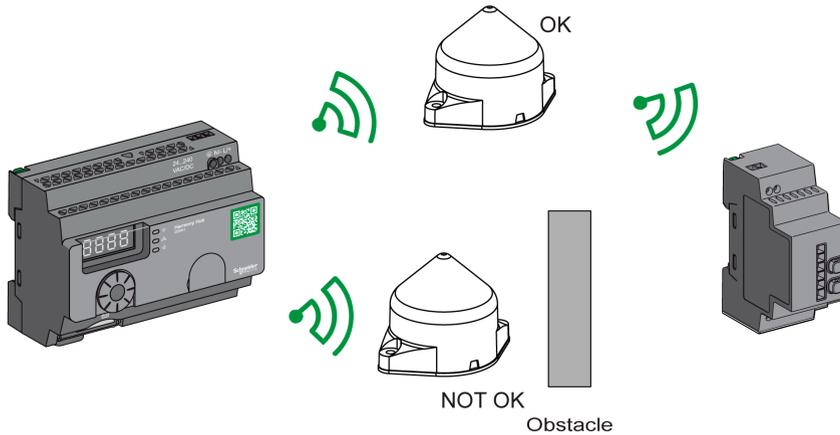

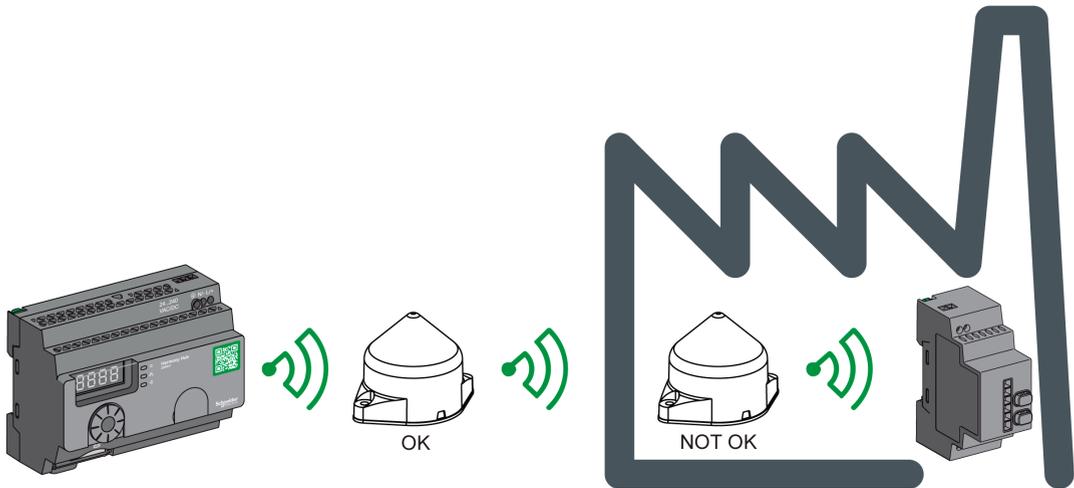

NOTE: The antenna should be placed before the obstacle. The signal will be amplified before the obstacle to enable to go through it.


Impact of the radio performances in the environment:

- For any environment, the radio performances are subjected to be instable due to perturbations made by any kind of industrial machines, processes, or electronic devices.
- As a result at any time, it is possible that radio frames sent by a transmitter will not be caught by the receiver during the perturbation.
- With XB5R offer, only one radio frame is sent to the receiver and there is no permanent radio communication. This reason makes to avoid the use of XB5R offer for applications where permanent reliability and/or permanent precisions are needed.

Receiver Wiring Diagram

Wiring Diagram


The following figure shows the wiring diagram for the Harmony ZBRRH receiver:

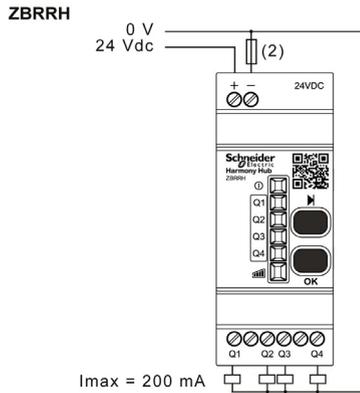

(2): 500 mA fuse from supplier Bussman® reference GMA-500 mA, 250 V 0.5 A fast-blow.

LED Status

ZBRRH

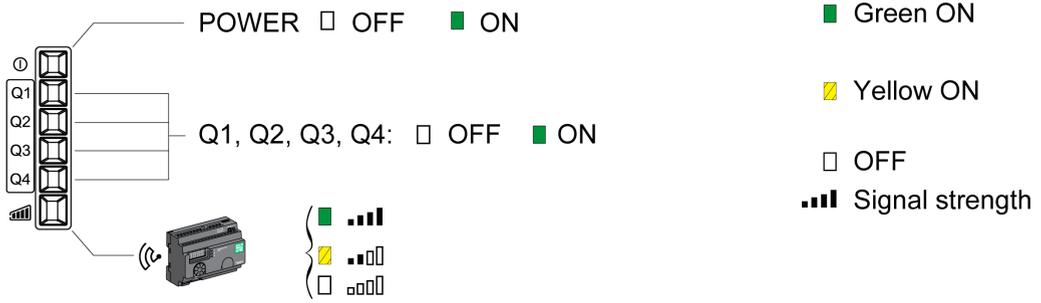

How to Teach/Unteach ZBRRH

Legend


The icons shown have the following meanings:

LEDs	Meaning
	Green
	Yellow
	Flashing

Teach ZBRRH Procedure

As a prerequisite, the Harmony Hub must have a MAC/ID. For more details, refer to Factory Mode (*see page 182*).

This procedure shows how to Teach Q1...Q4 outputs (ZBRRH):

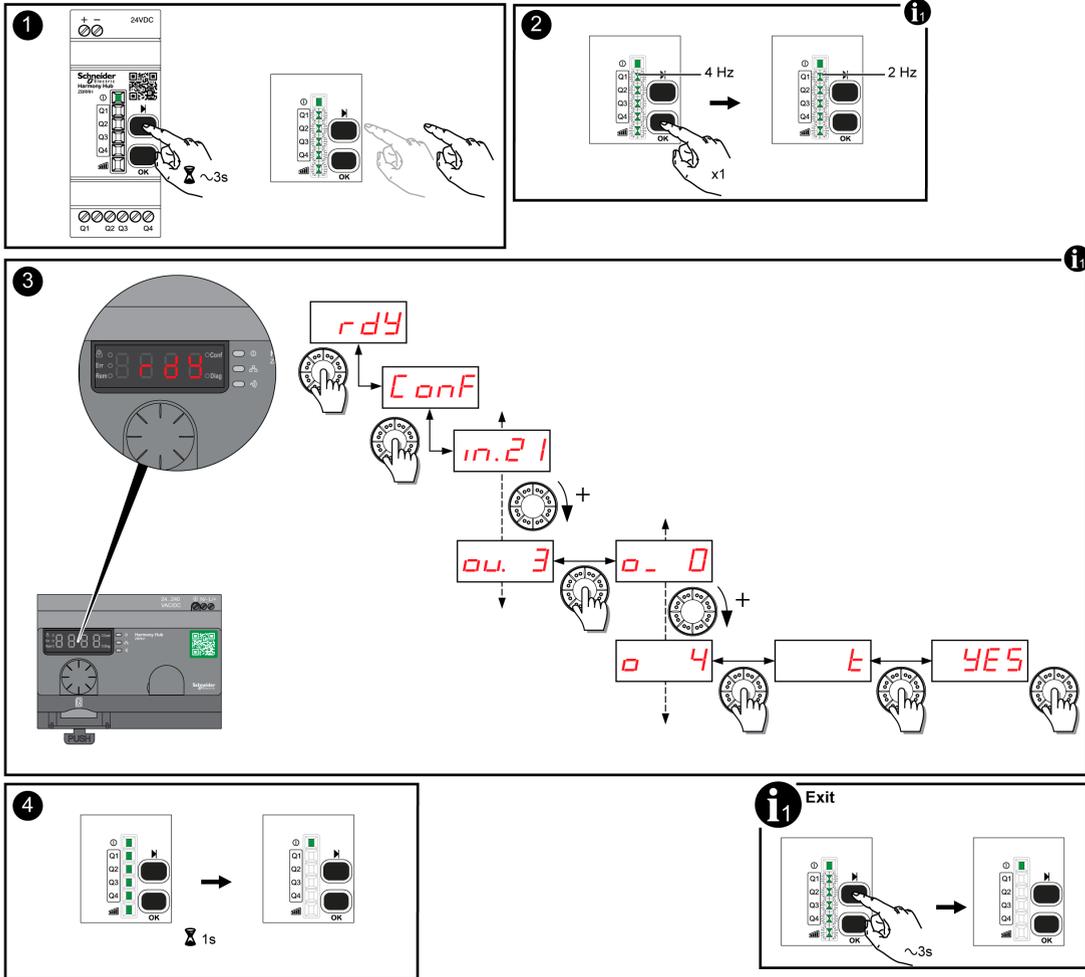


NOTE:

- If the ZBRRH receive any request from other ZBRN, the teaching procedure can not be performed.
- The Q1...Q4 outputs are active during 1 s after the teaching procedure.
- The teaching procedure must be performed within 1 min 30 s.

Unteach ZBRRH Procedure

This procedure shows how to Unteach Q1...Q4 outputs (ZBRRH):

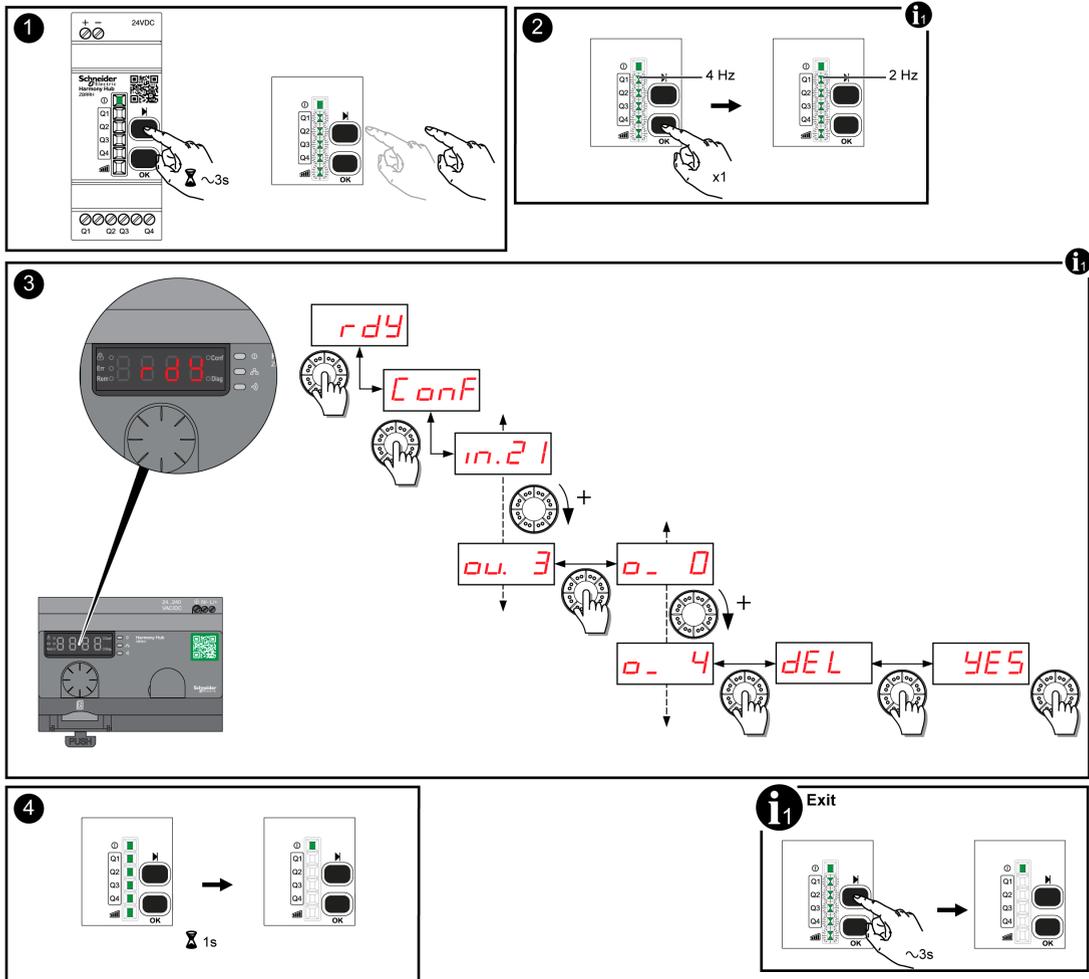

NOTE: The Q1...Q4 outputs are active during 1 s after the teaching procedure.


Lock/Unlock for ZBRRH

Introduction

Lock enables to block the menus access by non authorized persons. The functioning of the receiver is not affected.


Electronic Lock/Unlock

This procedure shows how to electronically lock/unlock the receiver:

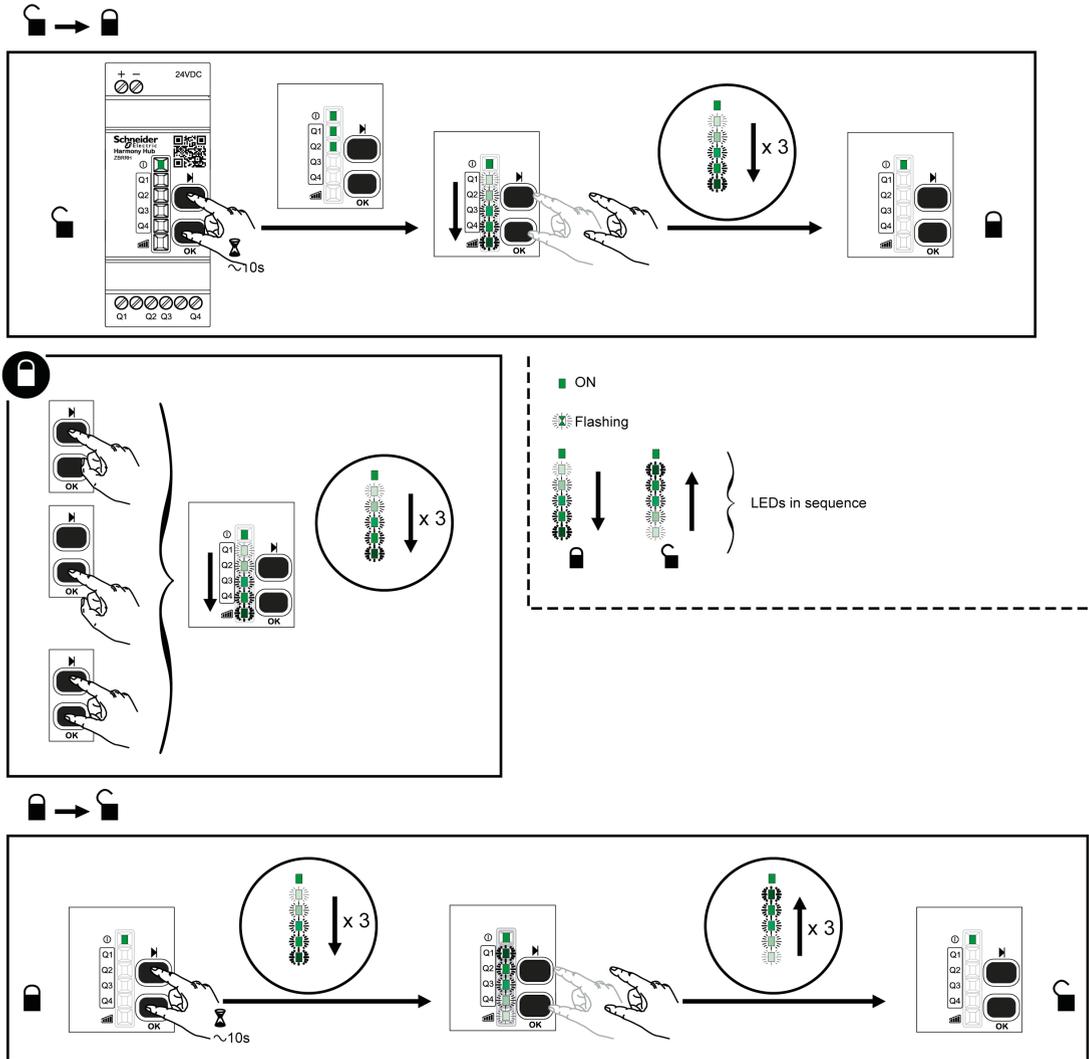

Mechanical Lock/Unlock




The following diagram shows how to perform buttons mechanical lock.

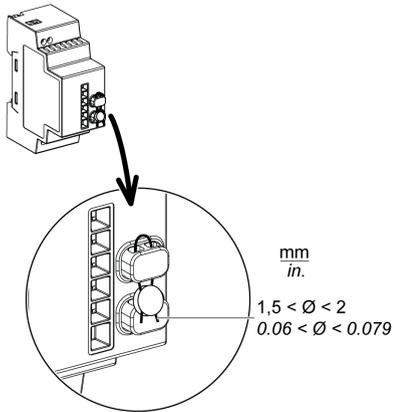

Total Reset Function Description

Total Reset procedure for ZBRRH

Total Reset: After a Total Reset, the receiver is on factory setting. The registered ID is canceled.

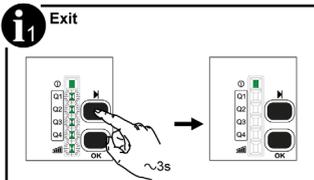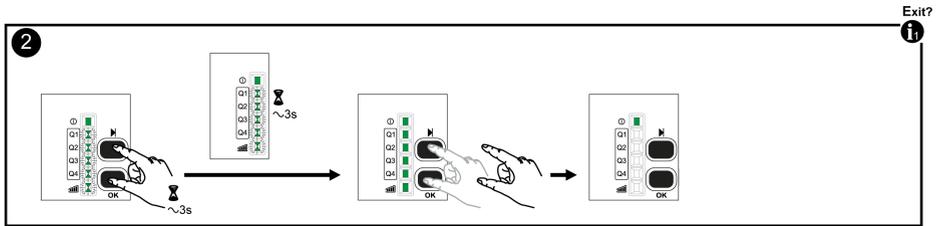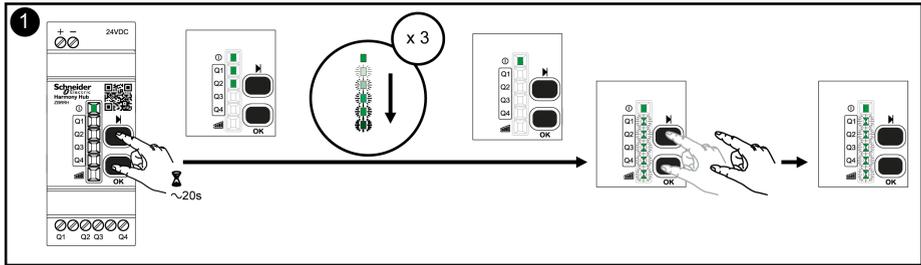

Chapter 7

Modbus Registers

Introduction

All the following addresses are indicated according to the IEC %MW standard format.

For access to Modbus registers, add 1 to each address.

 WARNING
--

UNINTENDED EQUIPMENT OPERATION

Do not write or read the register addresses which are not mentioned in this document.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

All the registers used are 16 bits.

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
7.1	Memory Table	102
7.2	Input Channels Registers	103
7.3	Output Registers	112
7.4	Action Registers	114
7.5	Diagnostic Registers	126
7.6	Configuration Registers	140

Section 7.1

Memory Table

Memory Table

Memory Table

The memory table of the Harmony Hub ZBRN is composed by:

Register Address	Name	Mainly used
0000...1999	Input registers (<i>see page 103</i>) Permits you to read inputs data.	Yes
2000...2099	Command Action registers (<i>see page 114</i>)	Advanced
2100...2339	Output registers (<i>see page 112</i>) Permits you to command the activation of each output (Q1...Q4) of each associated ZBRRH receiver.	Yes
2340...3999	Reserved	-
4000...4999	Device Diagnostic (<i>see page 127</i>)	No
5000...5999	Communication Diagnostics (<i>see page 133</i>)	No
6000...6999	Device Configuration (<i>see page 141</i>)	No
7000...7999	Communication Configuration (<i>see page 146</i>)	No

Section 7.2

Input Channels Registers

What Is in This Section?

This section contains the following topics:

Topic	Page
Input Channels Registers	104
Type 1 Input Channels Registers	106
Type 4 Input Channels Registers	107
Type 5 Input Channels Registers	108
Type 6 Input Channels Registers	109

Input Channels Registers

Input Channels

The following table presents the input channel registers:

Register Address	Name	Name	Access type ⁽¹⁾	Input Channel	Description
0000	Input registers (see page 105)	Input register 1	R	0...15	Stores the status (0 or 1) of input channels from 0 to 15 ⁽²⁾ .
0001		Input register 2	R	16...31	Stores the status (0 or 1) of input channels from 16 to 31 ⁽²⁾ .
0002		Input register 3	R	32...47	Stores the status (0 or 1) of input channels from 32 to 47 ⁽²⁾ .
0003		Input register 4	R	48...59	Stores the status (0 or 1) of input channels from 48 to 59 ⁽²⁾ .
0004 ... 0009	Reserved	Reserved	-	-	-
0010 ... 0042	Input Channel Data Registers (see page 105)	Input Channel 0 data	R	0	Stores the data of input channel 0.
0043 ... 1956		Input Channel 1 data ... Input Channel 58 data	R	1...58	Stores the data of input channels from 1 to 58.
1957 ... 1989		Input Channel 59 data	R	59	Stores the data of input channel 59.
1990 ... 1999	Reserved	Reserved	-	-	-
<p>1 R: Read only. 2 Only for push-buttons and limit switches.</p>					

Input Registers

Input registers 1...4 are reserved for push-button and limit switch transmitters (type 1 and some type 6).

Each bit represents an input of Harmony Hub. When a valid message is received, the status bit is updated to 1 for the duration of the holding time.

The following table presents the input channel registers:

Register Address	Name	Description	Channel Status
0000	Input register 1	Bit 0 = Input channel 0 status ... Bit 15 = Input channel 15 status	<ul style="list-style-type: none"> ● 0: Input channel OFF ● 1: Input channel ON
0001	Input register 2	Bit 0 = Input channel 16 status ... Bit 15 = Input channel 31 status	<ul style="list-style-type: none"> ● 0: Input channel OFF ● 1: Input channel ON
0002	Input register 3	Bit 0 = Input channel 32 status ... Bit 15 = Input channel 47 status	<ul style="list-style-type: none"> ● 0: Input channel OFF ● 1: Input channel ON
0003	Input register 4	Bit 0 = Input channel 33 status ... Bit 11 = Input channel 59 status Bit 12...15 = Reserved	<ul style="list-style-type: none"> ● 0: Input channel OFF ● 1: Input channel ON

Input Channel Data Registers

The input channel data table (0010...1989) is composed with 60 sub-sections for the 60 inputs.

Each sub-section is 33 registers long.

For the input channel N (0...59): the first input data register address = $10 + 33 * N$

The content of each input channel data registers depends on the transmitter type:

- Type 1 input channel registers for push buttons and limit switches. *(see page 106)*
- Type 4 input channel registers for thermal, humidity monitoring sensors. *(see page 107)*
- Type 5 input channel registers for thermal monitoring sensors. *(see page 108)*
- Type 6 input channel registers for generic ZigBee and power tag sensors. *(see page 109)*

Type 1 Input Channels Registers

Overview

Type 1 is reserved for push buttons and limit switches.

For an input channel N (0...59), the input data register address = $10 + 33 * N + \text{offset}$

Type 1 Input Channels Data

The following table presents the type 1 transmitter data mapping:

Offset Register	Name	Access type	Channel Status	Description	Unit
+0	Device type	R	Bit 0...Bit 7: Type of transmitter <ul style="list-style-type: none"> 0: none 1...6: type number Bit 8...Bit 15: Reserved	Stores the type of transmitter associated to the input channel.	
+1	Time out RSSI	R	Bit 0...Bit 7: Timeout flag: <ul style="list-style-type: none"> True: FF H (time out expired) False: 00 H Bit 8...Bit 15: RSSI: <ul style="list-style-type: none"> (-127...127 dBm) -128: Invalid value 	Stores the time-out flag and the radio reception power value.	
+2	Time stamp	R	Two registers to store the double word value. +2: Stores the most significant word. +3: Stores the least significant word. <ul style="list-style-type: none"> FFFF FFFF H: Invalid value 00FF 0000 H: Rollback value 	Stores the details of the time stamp	µs/320
+3					
+4...6	Reserved	-	-	-	
+7, +8	Counters	-	Application CMD = 0x20	Number of ON command received	
+9, +10		-	Application CMD = 0x21	Number of OFF commands received.	
+11, +12		-	Application CMD = 0x22	Number of Toggle commands received. Example: ZBRT1.	
+13, +14		-	Application CMD = 0x60	Number of Press commands received. Example: ZBRT2.	
+15, +16		-	Application CMD = 0x61	Number of Release commands received. Example: ZBRT2.	
+17...32	Reserved	-	-	-	

R: Read only.

Type 4 Input Channels Registers

Overview

Type 4 is reserved for thermal, humidity monitoring sensors.

For an input channel N (0...59), the input data register address = $10 + 33 * N + \text{offset}$

Type 4 Input Channels Data

The following table presents the type 4 transmitter data:

Offset Register	Name	Access type	Channel Status	Description	Unit
+0	Device type	R	Bit 0...Bit 7: Type of transmitter <ul style="list-style-type: none"> ● 0: none ● 1...6: type number Bit 8...Bit 15: Reserved	Stores the type of transmitter associated to the input channel.	
+1	Time out RSSI	R	Bit 0...Bit 7: Timeout flag: <ul style="list-style-type: none"> ● True: FF H (time out expired) ● False: 00 H Bit 8...Bit 15: RSSI: <ul style="list-style-type: none"> ● (-127...127 dBm) ● -128: Invalid value 	Stores the time-out flag and the radio reception power value.	
+2	Time stamp	R	Two registers to store the double word value. +2: Stores the most significant word. +3: Stores the least significant word. <ul style="list-style-type: none"> ● FFFF FFFF H: Invalid value ● 00FF 0000 H: Rollback value 	Stores the details of the time stamp.	µs/320
+3					
+4	Battery voltage	R	Bit 0...Bit 7: Battery voltage <ul style="list-style-type: none"> ● FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the internal battery voltage.	0.01 mV
+5	Reserved	-	-	-	
+6	Temperature	R	<ul style="list-style-type: none"> ● 8000 H: Invalid value 	Stores the measured temperature.	0.01 °C
+7	Humidity	R	<ul style="list-style-type: none"> ● 0...10,000 ● FFFF H: Invalid value 	Stores the measured humidity.	100*%
+8...32	Reserved	-	-	-	

R: Read only.

Type 5 Input Channels Registers

Overview

Type 5 is reserved for thermal monitoring sensors.

For an input channel N (0...59), the input data register address = $10 + 33 * N + \text{offset}$

Type 5 Input Channels Data

The following table presents the type 5 transmitter data:

Offset Register	Name	Access type	Channel Status	Description	
+0	Device type	R	Bit 0...Bit 7: Type of transmitter <ul style="list-style-type: none"> 0: none 1...6: type number Bit 8...Bit 15: Reserved	Stores the type of transmitter associated to the input channel.	
+1	Time out RSSI	R	Bit 0...Bit 7: Timeout flag: <ul style="list-style-type: none"> True: FF H (time out expired) False: 00 H Bit 8...Bit 15: RSSI: <ul style="list-style-type: none"> (-127...127 dBm) -128: Invalid value 	Stores the time-out flag and the radio reception power value.	
+2	Time stamp	R	Two registers to store the double word value. +2: Stores the most significant word. +3: Stores the least significant word. <ul style="list-style-type: none"> FFFF FFFF H: Invalid value 00FF 0000 H: Rollback value 	Stores the details of the time stamp.	µs/320
+3					
+4	Battery voltage	R	Bit 0...Bit 7: Battery voltage <ul style="list-style-type: none"> FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the internal battery voltage.	0.01 mV
+5	Reserved	-	-	-	-
+6	Temperature	R	<ul style="list-style-type: none"> 8000 H: Invalid value 	Stores the measured temperature.	0.01 °C
+7...32	Reserved	-	-	-	-

R: Read only.

Type 6 Input Channels Registers

Overview

Type 6 is reserved for generic ZigBee and power tag sensors.

The data updated in the registers depend on the sensor. For more details, refer to the sensor documentation.

For an input channel N (0...59), the input data register address = 10 + 33 * N + offset

Type 6 Input Channels Data

The following table presents the type 6 generic I/O transmitter data:

Offset Register	Name	Access type	Channel Status	Description	
+0	Device type	R	Bit 0...Bit 7: Type of transmitter <ul style="list-style-type: none"> ● 0: none ● 1...6: type number Bit 8...Bit 15: Reserved	Stores the type of transmitter associated to the input channel.	
+1	Time out RSSI	R	Bit 0...Bit 7: Timeout flag: <ul style="list-style-type: none"> ● True: FF H (time out expired) ● False: 00 H Bit 8...Bit 15: RSSI: <ul style="list-style-type: none"> ● (-127...127 dBm) ● -128: Invalid value 	Stores the time-out flag and the radio reception power value.	
+2	Time stamp	R	Two registers to store the double word value. +2: Stores the most significant word. +3: Stores the least significant word. <ul style="list-style-type: none"> ● FFFF FFFF H: Invalid value ● 00FF 0000 H: Rollback value 	Stores the details of the time stamp.	µs/320
+3					
+4	Battery voltage	R	Bit 0...Bit 7: Battery voltage <ul style="list-style-type: none"> ● FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the internal battery voltage.	0.01 mV
+5	Internal Temperature	R	<ul style="list-style-type: none"> ● -200...200 °C ● 8000 H: Invalid value 	Stores the internal temperature.	°C
+6	Temperature	R	<ul style="list-style-type: none"> ● 8000 H: Invalid value 	Stores the measured temperature.	0.01 °C

R: Read only.

Offset Register	Name	Access type	Channel Status	Description	
+7	Energy	R	Four registers to store the energy value. +7: Stores the most significant word. +10: Stores the least significant word. ● FFFF FFFF FFFF FFFF H: Invalid value	Stores the energy	-
+8					
+9					
+10					
+11	Unit	R	-	Stores the unit of measure.	
+12	Power A	R	● 8000 H: Invalid value	Stores the measured power phase A.	W
+13	Power B	R	● 8000 H: Invalid value	Stores the measured power phase B.	W
+14	Power C	R	● 8000 H: Invalid value	Stores the measured power phase C.	W
+15	Current A	R	● FFFF H: Invalid value	Stores the measured current phase A.	A *100
+16	Current B	R	● FFFF H: Invalid value	Stores the measured current phase B.	A *100
+17	Current C	R	● FFFF H: Invalid value	Stores the measured current phase C.	A *100
+18	Voltage A	R	● FFFF H: Invalid value	Stores the measured voltage phase A.	V *100
+19	Voltage B	R	● FFFF H: Invalid value	Stores the measured voltage phase B.	V *100
+20	Voltage C	R	● FFFF H: Invalid value	Stores the measured voltage phase C.	V *100
+21	CO2	R	Two registers to store the double word value. +21: Stores the most significant word. +22: Stores the least significant word. ● 7FC0 0000 H: Invalid value	Stores the measured CO2 level.	0.01 %
+22					
+23	CO	R	Two registers to store the double word value. +23: Stores the most significant word. +24: Stores the least significant word. ● 7FC0 0000 H: Invalid value	Stores the measured CO level.	0.01 %
+24					
+25	Illuminance	R	● FFFF H: Invalid value	Stores the measured illuminance.	10,000 *Log(Lux) +1
+26	Pressure	R	● FFFF H: Invalid value	Stores the measured pressure.	10*kPa

R: Read only.

Offset Register	Name	Access type	Channel Status	Description	
+27	Flow	R	<ul style="list-style-type: none"> FFFF H: Invalid value 	Stores the measured flow.	100*m ³ /h
+28	Humidity	R	<ul style="list-style-type: none"> 0...10,000 FFFF H: Invalid value 	Stores the measured humidity.	100*%
+29	Occupancy	R	Bit 0...Bit 7: Occupancy <ul style="list-style-type: none"> FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the status occupancy.	-
+30	State On/Off	R	Bit 0...Bit 7: State On/Off <ul style="list-style-type: none"> FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the state On/Off.	-
+31	Level state	R	Bit 0...Bit 7: Level state <ul style="list-style-type: none"> FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the level state.	-
+32	Door lock state	R	Bit 0...Bit 7: Door lock state <ul style="list-style-type: none"> FF H: Invalid value Bit 8...Bit 15: Reserved	Stores the door lock state.	-
R: Read only.					

Section 7.3

Output Registers

Output Registers

Overview

The Harmony Hub can be associated with up to 60 ZBRRH receivers. Each ZBRRH receiver has an output channel stored in the Harmony Hub.

The Harmony Hub can command the outputs (Q1...Q4) of each associated ZBRRH receiver.

Recommendations

<i>NOTICE</i>
EQUIPMENT DAMAGE AND INFORMATION LOSS
The delay between 2 Modbus request to the Harmony Hub outputs must be greater than 1 second.
Failure to follow these instructions can result in equipment damage.

In order not to saturate the radio channel, it is recommended to write this request only when the value of current request is different from the value of the previous request.

Output Registers

The output channel data table (2100...2339) is composed with 60 sub-sections for the 60 outputs. Each sub-section is 4 registers long.

For the output channel N (0...59):the output data register address = 2100 + 4 * N

The following table presents the Output command registers:

Register Address	Name	Access type	Status	Description
2100	Output 00 Command Q1	RW	Bit 0...Bit 7: Action status ● 0x00: Off ● 0x5A: Blink ● 0xFF: On	Command Q1 of Harmony Hub Output 0
2101	Output 00 Command Q2	RW		Command Q2 of Harmony Hub Output 0
2102	Output 00 Command Q3	RW		Command Q3 of Harmony Hub Output 0
2103	Output 00 Command Q4	RW		Command Q4 of Harmony Hub Output 0
2104 ... 2335	Output 01...58 Command Qx	RW	Bit 0...Bit 7: Action status ● 0x00: Off ● 0x5A: Blink ● 0xFF: On	Command Qx of Harmony Hub Output 1...58
2336	Output 59 Command Q1	RW	Bit 0...Bit 7: Action status ● 0x00: Off ● 0x5A: Blink ● 0xFF: On	Command Q1 of Harmony Hub Output 59
2337	Output 59 Command Q2	RW		Command Q2 of Harmony Hub Output 59
2338	Output 59 Command Q3	RW		Command Q3 of Harmony Hub Output 59
2339	Output 59 Command Q4	RW		Command Q4 of Harmony Hub Output 59
RW: Read and write.				

Section 7.4

Action Registers

What Is in This Section?

This section contains the following topics:

Topic	Page
Action Register	115
Action Codes	116

Action Register

Overview

Action registers permits to command Harmony Hub via Modbus. These registers are dedicated for advanced users.

Command Action

The following table presents the Command Action registers:

Register Address	Name	Access type	Status	Description
2000	Command Action	R	Bit 0: CE: Clear Error Bit 1: CC: Clear RF Counter	-
2001 ... 2009	-	R	-	-
2010	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action Codes (<i>see page 116</i>)	Stores the Modbus action and the Client ID.
2011 ... 2031		R	Action parameters	-
2032 ... 2099	-	R	-	-
R: Read only.				

Action Codes

Overview

This section contains the action codes details of the register 2010: Command Device Module Action (*see page 115*).

Action codes:

- 1: Off-line association (*see page 116*)
- 2: On-line association (*see page 118*)
- 3: Remove device (*see page 119*)
- 4: Clear all devices (*see page 119*)
- 5: Start teach (*see page 119*)
- 6: Stop teach (*see page 120*)
- 15: Start remote configuration (*see page 120*)
- 16: Stop remote configuration (*see page 121*)
- 17: Get device - Write (*see page 121*)
- 18: Get device - Read (*see page 121*)
- 22: Teach Static (*see page 123*)
- 24: Start teach all (*see page 124*)
- 26: Teach Output (*see page 124*)
- 27: Remove Output (*see page 125*)

Action Code 1 - Off-Line Association

The following table presents the Action code 1:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 1: Off-line association 	-
0001	Type / Input ID	R	Bit 0...Bit 7: Type of transmitter <ul style="list-style-type: none"> ● 0: none ● 1...6: type number Bit 8...Bit 15: Input ID <ul style="list-style-type: none"> ● 0...59: Input ID 	-
R: Read only. RW: Read and write.				

Offset Register	Name	Access type	Status	Description
0002	Association Mode	R	Bit 0...Bit 7: Address type <ul style="list-style-type: none"> ● 0: none ● 1: Address type Source ID on 4 bytes. ● 2: Address type IEEE on 8 bytes. Bit 8...Bit 15: Association Mode <ul style="list-style-type: none"> ● 0: none ● 1: Static (No security) ● 2: OTA Sensor (Security Sensor) ● 3: OTA (No security) ● 4: OTA box (Security box) 	-
0003	-	R	Address (MSB)	Source ID 2015 and 2016 IEEE 2013 to 2016
0004	-	R	Address	
0005	-	R	Address	
0006	-	R	Address (LSB)	
0007	Security Mode	R	Bit 8...Bit 15: Reserved Bit 0...Bit 7: Security Mode <ul style="list-style-type: none"> ● 0: None ● 1: L0 (Static, No security) ● 2: L1 (Static, Long OOB) ● 3: L2 (Static, Long Shared) ● 4: L3 (Static, Full OOB) ● 5: L4 (Static, Full Shared) Security Long: signature with frame counter over 4 bytes Security Full: signature + encryption	0 – for new OTA sensors commissioning[1:5] for restoring commissioned sensors or for STATIC sensors
0008	-	R	Bit 8...Bit 15: Security Key B0 Bit 0...Bit 7: Security Key B1	-
0009	-	R	Bit 8...Bit 15: Security Key B2 Bit 0...Bit 7: Security Key B3	-
0010	-	R	Bit 8...Bit 15: Security Key B4 Bit 0...Bit 7: Security Key B5	-
0011	-	R	Bit 8...Bit 15: Security Key B6 Bit 0...Bit 7: Security Key B7	-
0012	-	R	Bit 8...Bit 15: Security Key B8 Bit 0...Bit 7: Security Key B9	-
0013	-	R	Bit 8...Bit 15: Security Key B10 Bit 0...Bit 7: Security Key B11	-
R: Read only. RW: Read and write.				

Offset Register	Name	Access type	Status	Description
0014	-	R	Bit 8...Bit 15: Security Key B12 Bit 0...Bit 7: Security Key B13	-
0015	-	R	Bit 8...Bit 15: Security Key B14 Bit 0...Bit 7: Security Key B15	-
0016	-	R	Parameter 1	Type 1 and 2 only
0017	-	R	Parameter 2	Type 2 only
0018	-	R	Parameter 3	-
0019	-	R	Parameter 4	-
0020	-	R	Parameter 5	-
R: Read only. RW: Read and write.				

Action Code 2 - On-Line Association

The following table presents the Action code 2:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 2: On-line association 	-
0001	Input ID	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Input ID <ul style="list-style-type: none"> ● 0...59: Input ID 	-
R: Read only. RW: Read and write.				

Action Code 3 - Remove Device

The following table presents the Action code 3:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 3: Remove device 	-
0001	Input ID	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Input ID <ul style="list-style-type: none"> ● 0...59: Input ID 	-
R: Read only. RW: Read and write.				

Action Code 4 - Clear All Devices

The following table presents the Action code 4:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 4: Clear all devices 	-
R: Read only. RW: Read and write.				

Action Code 05 - Start Teach

The following table presents the Action code 5:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 5: Start teach 	-
R: Read only. RW: Read and write.				

Offset Register	Name	Access type	Status	Description
0001	Input ID	R	Bit 8...Bit 15: Input ID 1 Bit 0...Bit 7: Input ID 2	[0:59]: input ID 0xFF: no Input If no input selected, calls Action "Teach All" If only one input selected, calls Action "On-Line Association"
0002	Input ID	R	Bit 8...Bit 15: Input ID 3 Bit 0...Bit 7: Input ID 4	
0003	Input ID	R	Bit 8...Bit 15: Input ID 5 Bit 0...Bit 7: Input ID 6	
R: Read only. RW: Read and write.				

Action Code 06 - Stop Teach

The following table presents the Action code 6:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 6: Stop teach 	-
R: Read only. RW: Read and write.				

Action Code 15 - Start Remote Configuration

The following table presents the Action code 6:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 15: Start remote configuration 	-
R: Read only. RW: Read and write.				

Action Code 16: Stop Remote Configuration

The following table presents the Action code 6:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 16: Stop remote configuration 	-
R: Read only. RW: Read and write.				

Action Code 17 - Get Device - Write

The following table presents the Action code 17:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 17: Get device 	-
0001	Input ID	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Input ID <ul style="list-style-type: none"> ● 0...59: Input ID 	-
R: Read only. RW: Read and write.				

Action Code 18 - Get Device - Read

The following table presents the Action code 17:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 17: Get device 	-
R: Read only. RW: Read and write.				

Offset Register	Name	Access type	Status	Description
0001	Type / Input ID	R	Bit 0...Bit 7: Type of transmitter ● 0: none ● 1...6: type number Bit 8...Bit 15: Input ID ● 0...59: Input ID	-
0002	Association Mode	R	Bit 0...Bit 7: Address type ● 0: none ● 1: Address type Source ID on 4 bytes. ● 2: Address type IEEE on 8 bytes. Bit 8...Bit 15: Association Mode ● 0: none ● 1: Static (No security) ● 2: OTA Sensor (Security Sensor) ● 3: OTA (No security) ● 4: OTA box (Security box)	-
0003	-	R	Address (MSB)	Source ID 2015 and 2016
0004	-	R	Address	IEEE 2013 to 2016
0005	-	R	Address	
0006	-	R	Address (LSB)	
0007	Security Mode	R	Bit 8...Bit 15: Reserved Bit 0...Bit 7: Security Mode ● 0: None ● 1: L0 (Static, No security) ● 2: L1 (Static, Long OOB) ● 3: L2 (Static, Long Shared) ● 4: L3 (Static, Full OOB) ● 5: L4 (Static, Full Shared) Security Long: signature with frame counter over 4 bytes Security Full: signature + encryption	0 – for new OTA sensors commissioning[1:5] for restoring commissioned sensors or for STATIC sensors
0008	-	R	Bit 8...Bit 15: Security Key B0 Bit 0...Bit 7: Security Key B1	-
0009	-	R	Bit 8...Bit 15: Security Key B2 Bit 0...Bit 7: Security Key B3	-
0010	-	R	Bit 8...Bit 15: Security Key B4 Bit 0...Bit 7: Security Key B5	-
0011	-	R	Bit 8...Bit 15: Security Key B6 Bit 0...Bit 7: Security Key B7	-
R: Read only. RW: Read and write.				

Offset Register	Name	Access type	Status	Description
0012	-	R	Bit 8...Bit 15: Security Key B8 Bit 0...Bit 7: Security Key B9	-
0013	-	R	Bit 8...Bit 15: Security Key B10 Bit 0...Bit 7: Security Key B11	-
0014	-	R	Bit 8...Bit 15: Security Key B12 Bit 0...Bit 7: Security Key B13	-
0015	-	R	Bit 8...Bit 15: Security Key B14 Bit 0...Bit 7: Security Key B15	-
0016	-	R	Parameter 1	Type 1 and 2 only
0017	-	R	Parameter 2	Type 2 only
0018	-	R	Parameter 3	-
R: Read only. RW: Read and write.				

Action Code 22 - Teach Static

The following table presents the Action code 22:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action codes <ul style="list-style-type: none"> ● 22: Teach Static 	-
0001	Input ID	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Input ID <ul style="list-style-type: none"> ● 0...59: Input ID 	-
R: Read only. RW: Read and write.				

Action Code 24 - Start Teach All

The following table presents the Action code 24:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action codes <ul style="list-style-type: none"> ● 24: Start teach all 	-
R: Read only. RW: Read and write.				

Action Code 26 - Teach Output

The following table presents the Action code 26:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none"> ● 0: None ● 1...15: Client ID generated by the client Bit 8...Bit 15: Action codes <ul style="list-style-type: none"> ● 26 - Teach Output 	-
0001	Receiver Number	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Receiver Number <ul style="list-style-type: none"> ● 0...59: Receiver Number 	-
R: Read only. RW: Read and write.				

Action Code 27 - Remove Output

The following table presents the Action code 27:

Offset Register	Name	Access type	Status	Description
0000	Command Device Module Action	R	Bit 0...Bit 7: Client ID <ul style="list-style-type: none">● 0: None● 1...15: Client ID generated by the client Bit 8...Bit 15: Action codes <ul style="list-style-type: none">● 27: Remove Output	-
0001	Receiver Number	R	Bit 0...Bit 7: Reserved Bit 8...Bit 15: Receiver Number <ul style="list-style-type: none">● 0...59: Receiver Number	-

R: Read only.
RW: Read and write.

Section 7.5

Diagnostic Registers

What Is in This Section?

This section contains the following topics:

Topic	Page
Device Diagnostics	127
Communication Diagnostics	133
Error Codes	136

Device Diagnostics

Overview

Device Diagnostic is composed by:

- 4000...4009: Product Information (*see page 127*)
- 4010...4015: Binding List Information (*see page 128*)
- 4016...4039: Radio Communication Information (*see page 129*)
- 4040...4099: Modbus Serial Line Communication Information (*see page 131*)
- 4100...4999: Input Channel Transmitter Information (*see page 131*)

Product Information

The following table presents the product information registers:

Register Address	Name	Access type	Status	Description
4000	Device name	R	1: ZBRN1 2: ZBRN2	Stores the device name.
4001	Firmware version	R	Example for 0146: V3.26	Stores the firmware version.
4002	Communication protocol	R	Bit 0: ZBRN2 (Modbus serial line) Bit 1: ZBRN1 (Ethernet)	Stores the communication protocol used by Harmony Hub.
4003	Configuration	R	Bit 0: The device is being configured through the user interface. Bit 1: The device is being configured through the SD card interface. Bit 2: The device is being configured through the Modbus interface.	Stores the configuration status of the device.
4004	Detected error	R	For more details, refer to Harmony Hub error codes (<i>see page 136</i>).	Stores the code of the detected error.
4005	Communication status	R	Bit 0: ZBRN2 (Modbus serial line) Bit 1: ZBRN1 (Ethernet)	Stores the communication protocol used by Harmony Hub.
4006	Configuration file version	R	Example for 0121: V01.21 FFFF H: No file used	Stores the configuration file version.
4007	Client ID	R	Bit 0...Bit 3 0: None 1...15: Client ID	Stores the client ID.
R: Read only. RW: Read and write.				

Register Address	Name	Access type	Status	Description
4008	Action status	R	Bit 0...Bit 7: Action status <ul style="list-style-type: none"> ● 0: Action successful ● 1: Action not successful ● 2: Invalid parameter Bit 8...Bit 15: Action code <ul style="list-style-type: none"> ● 0: None ● 1: Off-line association ● 2: On-line association ● 3: Remove device ● 4: Clear all devices ● 5: Start teach ● 5: Stop teach ● 15: Start remote configuration ● 16: Stop remote configuration ● 17: Get device ● 22: Update the radio connection ● 24: Start teach all ● 26: Teach Output ● 27: Unteach Output 	Stores the Modbus action and the related status.
4009	Input	R	Bit 0...Bit 7: Current input for action Get Device	-
R: Read only. RW: Read and write.				

Binding List Information

The following table presents the binding list information registers:

Register Address	Name	Access type	Status	Description
4010	Number of max binding	R	-	Stores the maximal quantity of sensors on the binding list.
4011	Bound quantity	R	-	Stores the number of inputs occupied (with associated off-line and associated on-line sensors)
4012	Paired quantity	R	-	Stores the number of inputs associated on-line
4013	No paired quantity	R	-	Stores the number of inputs associated off-line
R: Read only. RW: Read and write.				

Register Address	Name	Access type	Status	Description
4014	Number of max Device types	R	-	Stores the number of transmitter types supported
4015	Device type enable	R	Bit field <ul style="list-style-type: none"> ● Bit 0: Type 0 (free) ● Bit x: Type x 	Stores the flags to show the supported transmitter types.
R: Read only. RW: Read and write.				

Radio Communication Information

The following table presents the radio communication information registers:

Register Address	Name	Access type	Status	Description
4016	Radio connection firmware version	R	Bit 0...Bit 7: xx	Stores the ZigBee stack version: Vxx.yy.zz
4017		R	Bit 0...Bit 7: zz Bit 8...Bit 15: yy	
4018	Radio connection - Packets received counter	R	Two registers to store the double word value. 4018: Stores the most significant word. 4019: Stores the least significant word. The value is incremented each time Harmony Hub receives a packet from an associated transmitter.	Stores the number of packets received by radio connection.
4019		R		
4020	Radio connection - non-operational packets received counter	R	Two registers to store the double word value. 4020: Stores the most significant word. 4021: Stores the least significant word. The value is incremented each time Harmony Hub receives a non-operational packet from an associated transmitter.	Stores the number of non-operational packets received by radio connection.
4021		R		
4022	Radio connection - Packets sent counter	R	Two registers to store the double word value. 4022: Stores the most significant word. 4023: Stores the least significant word. The value is incremented each time Harmony Hub sends a packet to an associated transmitter.	Stores the number of packets sent by radio connection.
4023		R		
4024	Radio channel	R	11...26: The radio channel with frequency 2.405 GHz (channel 11...26 IEEE 802.15.4).	Stores the details of the radio channel.
R: Read only. RW: Read and write.				

Register Address	Name	Access type	Status	Description
4025	Emitted radio signal strength	R	-22...4: Signal strength in dBm -127: Starting or OFF -128: Error detected.	Stores the details of the signal strength for emission.
4026	Radio connection state	R	0: OFF 20: HOLD 21: INIT 22: SCAN 23: RUN 24: Commissioning FE H: Starting FF H: Error detected.	Stores the details of the radio connection state.
4027	Radio device type	R	0: None (off) 1: Green power 2: ZigBee green power concentrator 3: ZigBee green power router 4: Controller under upgrade 24: Commissioning FE H: Starting FF H: Error detected.	Stores the current radio device type.
4028	Radio Pan ID	R	0001 H...FFFE H 0000 H: Off, starting or error detected	Stores the radio Pan ID.
4029	Radio short address	R	0000 H...FFFC H FFFD H: Off, or error detected FFFE H: Starting	Stores the radio short address.
4030	Radio IEEE address	R	Four registers to store the IEEE address. 4030: Stores the most significant word. 4033: Stores the least significant word.	Stores the radio IEEE address.
4031				
4032				
4033				
4034	Radio connection - Boot counter	R	The value is incremented each time Harmony Hub radio connection restarts.	Stores the number of radio connection restarts.
4035 ... 4039	Reserved	-	-	-
R: Read only. RW: Read and write.				

Modbus Serial Line Communication Information

The following table presents the Modbus serial line communication information registers:

Register Address	Name	Access type	Status	Description
4040	Modbus boot counter	R	The value is incremented each time Harmony Hub Modbus controller restarts.	Stores the number of Modbus controller restarts.
4041 ... 4049	Reserved	-	-	-
4050	Modbus error counter	R	The value is incremented each time Harmony Hub Modbus controller detects an error.	Stores the number of Modbus detected errors.
4051 ... 4089	Reserved	-	-	-
4090 4091 4092 4093	Modbus system clock	R	Four registers to store the Modbus system clock. 4090: Stores the most significant word. 4093: Stores the least significant word.	Stores the Modbus system clock (ms).
4094 ... 4099	Reserved	-	-	-
R: Read only. RW: Read and write.				

Input Channel Transmitter Information

The input channel data table (4100...4999) is composed with 60 sub-sections for the 60 inputs.

Each sub-section is 15 registers long.

For the input channel N (0...59): the first input data register address = $4100 + 14 * N$

The following table presents the input channel 0 transmitter information registers:

Register Address	Name	Access type	Status	Description
4100 4101	Green power - Input 0 Frame counter	R	Two registers to store the double word value. 4100: Stores the most significant word. 4101: Stores the least significant word. The value is incremented each time Harmony Hub input 0 receives a frame from an associated transmitter.	Stores the number of the Green power - input 0 frame counter.
R: Read only. RW: Read and write.				

Register Address	Name	Access type	Status	Description
4102 4103	Green power - Input 0 Time stamp	R	Two registers to store the double word value. 4102: Stores the most significant word. 4103: Stores the least significant word. The value is updated each time Harmony Hub input 0 receives a frame from an associated transmitter.	Stores the details of the Green power - input 0 time stamp ($\mu\text{s}/320$).
4104 4105	Green power - Input 0 Packets received counter	R R	Two registers to store the double word value. 4104: Stores the most significant word. 4105: Stores the least significant word. The value is incremented each time Harmony Hub receives a packet from an associated transmitter.	Stores the number of the Green power - input 0 packets received since last restart.
4106 4107	Green power - Input 0 Non-operational packets received counter	R R	Two registers to store the double word value. 4106: Stores the most significant word. 4107: Stores the least significant word. The value is incremented each time Harmony Hub receives a non-operational packet from an associated transmitter.	Stores the number of the Green power - input 0 non-operational packets received since last restart.
4108 4109	Green power - Input 0 Lost packets received counter	R R	Two registers to store the double word value. 4108: Stores the most significant word. 4109: Stores the least significant word. The value is incremented each time Harmony Hub detects a lost packet from an associated transmitter.	Stores the number of the Green power - input 0 lost packets since last restart.
4110	Green power - Input 0 Radio link strength	R	Bit 0...Bit 7: LQI (0...255) Bit 8...Bit 15: Radio reception power (-128...127 dBm)	Stores the radio signal strength of the Green power input 0
4111	Green power - Input 0 Teach status	R	Bit 0...Bit 7: Detected error code. Refer to Transmitter Error Codes (<i>see page 138</i>) Bit 8...Bit 15: Teach status ● 1: Sensor is selected for a teach action	Stores the teach status for the Green power input 0.
4112 ... 4113	-	-	-	Reserved
4114	Green power - Input 0 Type 2 sensor details	R	Bit 0...Bit 7: Type 2 sensor timeout Bit 8...Bit 15: Type 2 clamp type	Stores the clamp type and timeout.
R: Read only. RW: Read and write.				

Communication Diagnostics

Overview

The communication diagnostic memory table depends on the device communication:

- Modbus Serial Line Communication Diagnostics (*see page 133*)
- Modbus TCP Communication Diagnostics (*see page 134*)

Modbus Serial Line Communication Diagnostics

The following table presents the Modbus serial line communication diagnostics registers:

Register Address	Name	Access type	Status	Description
5000	Actual baud rate	R	1: 1200 bps 2: 2400 bps 3: 4800 bps 4: 9600 bps 5: 19,200 bps 6: 38,400 bps 7: 115,200 bps	Stores the baud rate at which the data is sent.
5001	Actual frame setting	R	1: The frame format sent is 8 data bits, even parity, and 1 stop bit. 2: The frame format sent is 8 data bits, odd parity, and 1 stop bit. 3: The frame format sent is 8 data bits, no parity, and 2 stop bits.	Stores the data frame format received by Harmony Hub.
5002	Number of packages received	R	Two registers to store the double word value. 5002: Stores the most significant word. 5003: Stores the least significant word.	Stores the number of packages received by Harmony Hub.
5003		R		
5004	Number of non-operational packages received	R	Two registers to store the double word value. 5004: Stores the most significant word. 5005: Stores the least significant word.	Stores the number of non-operational packages received by Harmony Hub.
5005		R		
5006	Number of packages sent	R	Two registers to store the double word value. 5006: Stores the most significant word. 5007: Stores the least significant word.	Stores the number of packages sent by the transmitters.
5007		R		
5008	Number of non-operational packages sent	R	Two registers to store the double word value. 5008: Stores the most significant word. 5009: Stores the least significant word.	Stores the number of non-operational packages sent by the transmitters.
5009		R		
R: Read only.				

Register Address	Name	Access type	Status	Description
5010 ... 5999	-	-	-	Reserved
R: Read only.				

Modbus TCP Communication Diagnostics

The following table presents the Modbus TCP communication diagnostics registers:

Register Address	Name	Access type	Status	Description
5000	IP address	R	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP address used.
5001				
5002	IP mask	R	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP mask used.
5003				
5004	IP gateway	R	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP gateway used.
5005				
5006	MAC address	R	Three registers to store the MAC address.	Stores the MAC address used.
5007				
5008				
5009 ... 5018	-	-	-	Reserved
5019	Number of packages received	R	Two registers to store the double word value. 5019: Stores the most significant word. 5020: Stores the least significant word.	Stores the number of packages received by Harmony Hub.
5020		R		
5021	Number of non-operational packages received	R	Two registers to store the double word value. 5021: Stores the most significant word. 5022: Stores the least significant word.	Stores the number of non-operational packages received by Harmony Hub.
5022		R		
5023	Number of packages sent	R	Two registers to store the double word value. 5023: Stores the most significant word. 5024: Stores the least significant word.	Stores the number of packages sent by Harmony Hub.
5024		R		
5025	Number of non-operational packages sent	R	Two registers to store the double word value. 5025: Stores the most significant word. 5026: Stores the least significant word.	Stores the number of non-operational packages sent by the transmitters.
5026		R		
R: Read only.				

Register Address	Name	Access type	Status	Description
5027 ... 5999	-	-	-	Reserved
R: Read only.				

Error Codes

Overview

Harmony Hub Error Codes

The detected errors of the Harmony Hub are stored in the 4004 register (*see page 127*).

They are displayed in the HMI via `r d Y > d , A G > d S > E r . 0 0`.

The following table presents Harmony Hub error codes:

Error Code	Detected error Range	Description
00	General	No error detected
01		Target not supported
02		Invalid version of Industrial configuration
03		Industrial configuration not found
04		Invalid Industrial configuration
05		Assert Error
10	SD memory card For more details on the SD card files, refer to File management and diagnostics (<i>see page 194</i>).	The SD card cannot be accessed
11		The SD card is write protected
12		Not enough space available in the SD card
13		Invalid parameter
14		Invalid network configuration file
15		Invalid device configuration file
16		More than one network configuration file in the net folder
17		More than one device configuration file in the device folder
18		No network configuration file in the net folder
19		No device configuration file in the device folder

Error Code	Detected error Range	Description
20	Green Power	COM_FCS_ERROR
21		Invalid Status Code in response
22		Process Timeout
23		Request Invalid
24		Request Execution Timeout
25		Invalid parameter
26		Decode Message Error
27		Module Invalid Capacity
28		Incompatible Version
29		Start/Stop Process
2A		Error during start Process
2B		Error during run Process
2C		Error during upgrade Process
2D		Undefined message
30		Ethernet
31	Invalid IP address	
32	Communication module detected error	
33	Communication module not supported	
34	Communication module not detected	
40	Data	Error while processing device data
41		Error while processing device commissioning
50	Watchdog	Harmony Hub Reset
51		Other Reset
60	Backup	Invalid configuration slot 1
61		Invalid configuration slot 2
62		Invalid configuration slot 1 and slot 2
63		Initialization configuration slot 1
64		Initialization configuration slot 2
65		Store configuration slot 1
66		Store configuration slot 2
67		Store 2 configuration slot 1
68		Store 2 configuration slot 2
70	Modbus	Modbus Invalid configuration
80	Action	Trace Action Process

Transmitter Error Codes

The transmitter detected errors are stored in the 4111 register (*see page 131*).

They are displayed in the HMI via `r d Y > d , A G > , n . 2 l > , - . 0 0 > E r . 0 0 .`

The following table presents the transmitter error codes:

Error Code	Detected error Range	Description
00	General	No error detected
10	Commissioning	Commissioning unsupported
11		Commissioning Error Device type
12		Commissioning Error Manufacturer ID
13		Commissioning Error Manufacturer Product ID
14		Commissioning Error Security
15		Commissioning Error Device Capacity
16		Commissioning Error Cluster List
20		Data
21	No data	
22	Data unsupported Command ID	
23	Data Error parse Length Manufacturer ID	
24	Data Error parse Length Cluster ID	
25	Data Error parse Length Attribute Id	
26	Data Error parse Length data,	
27	Data unsupported data type,	
28	Data Error Search Attribute	
29	Data Mismatch data type	
2A	Data Parse Error	
2B	Data Error	
30...37	Process E3	Reserved

Error Code	Detected error Range	Description	
40	Process ZCL	Process ZCL Invalid Metering Value 1	
41		Process ZCL Invalid Metering Value 2	
42		Process ZCL Invalid Metering Value 3	
43		Process ZCL Invalid Metering Value 4	
44		Process ZCL Invalid Electrical measurement Current value 1	
45		Process ZCL Invalid Electrical measurement Current value 2	
46		Process ZCL Invalid Electrical measurement Voltage value 1	
47		Process ZCL Invalid Electrical measurement Voltage value 2	
48		Process ZCL Invalid Electrical measurement Power value 1	
49		Process ZCL Invalid Electrical measurement Power value 2	
50		Process	Process Error

Section 7.6

Configuration Registers

What Is in This Section?

This section contains the following topics:

Topic	Page
Device Configuration	141
Communication Configuration	146

Device Configuration

Overview

Device configuration is composed by:

- 6000...6099: Channel Configuration (*see page 141*)
- 6100...6199: Teaching List (*see page 142*)
- 6200...6399: Input Parameters 1...2 (*see page 143*)
- 6400...6699: MAC Addresses (*see page 143*)
- 6700...6999: Input Parameters 3...5 (*see page 145*)

Channel Configuration

The following table presents the channel configuration for all inputs registers:

Register Address	Name	Access type	Input Channel	Channel Status	Description
6000	Radio communication mode	RW	–	0: None (off) 1: Green power 2: ZigBee green power concentrator 3: ZigBee green power router	Stores the radio communication mode.
6001	Radio channel	RW	–	11...26: The radio channel with frequency 2.405 GHz (channel 11...26 IEEE 802.15.4).	Stores the radio channel.
6002	Radio Pan ID	RW	–	0001 H...FFFF H	Stores the radio Pan ID.
6003	Emitted radio signal strength	RW	–	-22...4: Signal strength in dBm	Stores the details of the signal strength for emission.
6004 ... 6009	Reserved	–	–	–	–
6010	Table selection	RW	–	0: One UID per Harmony Hub 1...4: One UID per sensor	Stores the table selection.
6011 ... 6019	Reserved	–	–	–	–

RW: Read and write.

Register Address	Name	Access type	Input Channel	Channel Status	Description
6020	Holding time	RW	–	0: 100 ms 1: 200 ms 2: 300 ms 3: 400 ms 4: 500 ms 5: 1 s	Stores the holding time for all the input channels.
6021 ... 6099	Reserved	–	–	–	–
RW: Read and write.					

Holding time:

A 16-bit register stores the holding time of the input channels.

Teaching List

The following table presents the teaching list registers:

Register Address	Name	Access type	Input Channel	Channel Status	Description
6100 ... 6159	Teaching list	RW	0...59	Bit 0 to 2: <ul style="list-style-type: none"> ● 0: The channel is disabled. ● 1...6: The type 1...6 transmitter is used. Bits3 to 13 are not used. Bit 14: Pairing status <ul style="list-style-type: none"> ● 0: Sensor associated online. ● 1: Sensor associated offline. Bit 15: Address type length <ul style="list-style-type: none"> ● 0: Address type Source Id on 4 bytes. ● 1: Address type IEEE on 8 bytes. 	Stores the details of the transmitter used.
6160 ... 6199	Reserved	–	–	–	–
RW: Read and write.					

Teaching list:

A 16-bit register stores the details of the transmitters used.

Input Parameters 1...2

The following table presents the input parameters registers 1...2:

Register Address	Name	Access type	Input Channel	Channel Status	Description
6200 ... 6259	Input parameter 1 list	RW	0...59	Holding time.	Stores the input parameter 1 list.
6260 ... 6299	Reserved	–	–	–	–
6300 ... 6359	Input parameter 2 list	RW	0...59	–	Stores the input parameter 2 list. Output Association - Channel
6360 ... 6399	Reserved	–	–	–	–

RW: Read and write.

MAC Addresses

The following table presents the MAC addresses registers:

Register Address	Name	Access type	Input Channel	Channel Status	Description
6400 ... 6519	Transmitter ID/MAC addresses	RW	0...59	srcID4: First byte of the MAC address. srcID5: Second byte of the MAC address. srcID6: Third byte of the MAC address. srcID7: Fourth byte of the MAC address.	Stores the MAC addresses of the transmitters. Two registers are used to store MAC address of one transmitter. Example: Transmitter ID (written on the transmitter label) = 030079B1. Registers 6410–6411, input channel 5. 6410: stores 0300 (2 bytes of the transmitter ID). 6411: stores 79B1 (2 bytes of the transmitter ID).

RW: Read and write.

Register Address	Name	Access type	Input Channel	Channel Status	Description
6520 ... 6639	Transmitter ID/MAC extended addresses	RW	0...59	srcID0: First byte of the MAC address. srcID1: Second byte of the MAC address. srcID2: Third byte of the MAC address. srcID3: Fourth byte of the MAC address.	Stores the MAC extended addresses of the transmitters. Two registers are used to store extended MAC address of one transmitter. Example: Transmitter ID (written on the transmitter label) = 030079B1. Registers 6530–5331, input channel 5. 6530: stores 0300 (2 bytes of the transmitter ID). 6531: stores 79B1 (2 bytes of the transmitter ID).
6640 ... 6699	Reserved	–	–	–	–
RW: Read and write.					

Transmitter/MAC addresses:

- Two registers of 16 bits store the MAC address of the transmitters.
- The first byte of the MAC address is stored in 8 bits of register 1.
- The second byte of the MAC address is stored in 8 bits of register 1.
- The third byte of the MAC address is stored in 8 bits of register 2.
- The fourth byte of the MAC address is stored in 8 bits of register 2.

Input Parameters 3...5

The following table presents the input parameters registers 3...5:

Register Address	Name	Access type	Input Channel	Channel Status	Description
6700 ... 6759	Input parameter 3 list	RW	0...59	–	Stores the input parameter 3 list. Output association - Q1...Q4
6760 ... 6799	Reserved	–	–	–	–
6800 ... 6859	Input parameter 4 list	RW	0...59	–	Stores the input parameter 4 list.
6860 ... 6899	Reserved	–	–	–	–
6900 ... 6959	Input parameter 5 list	RW	0...59	–	Stores the input parameter 5 list.
6960 ... 6999	Reserved	–	–	–	–
RW: Read and write.					

Communication Configuration

Overview

The communication configuration memory table depends on the device communication:

- Modbus Serial Line Communication Configuration (*see page 133*)
- Modbus TCP Communication Configuration (*see page 134*)

Modbus Serial Line Communication Configuration

Register Address	Name	Access type	Status	Description
7000	Baud rate	RW	1: 1200 bps 2: 2400 bps 3: 4800 bps 4: 9600 bps 5: 19,200 bps 6: 38,400 bps 7: 115,200 bps	Stores the baud rate at which the data is sent.
7001	Frame setting	RW	0: Automatic detection 2: The frame format sent is 8 data bits, odd parity, and 1 stop bit. 3: The frame format sent is 8 data bits, no parity, and 2 stop bits.	Stores the data frame format received by Harmony Hub.
7002	Slave ID	RW	1...247	Stores the Modbus slave ID of Harmony Hub.
7003	Auto detection	RW	0: Auto detection mode is disabled. 1: Auto detection mode is enabled.	Stores the auto detection mode.
7004 ... 7999	-	-	-	Reserved
RW: Read and write.				

Modbus TCP Communication Configuration

Register Address	Name	Access type	Status	Description
7000	IP address	RW	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP address.
7001				
7002	IP mask	RW	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP mask.
7003				
7004	IP gateway	RW	Two registers to store the four bytes value. 0.0.0.0 ... 255.255.255.255	Stores the IP gateway.
7005				
7006	IP mode	RW	0: DHCP 1: BOOTP 2: Stored. 3: Default.	Stores the IP mode.
7007	IP name	RW	0...255	Stores the IP name.
7008 ... 7999	-	-	-	Reserved
RW: Read and write.				

Chapter 8

Radio

Radio Communication

Introduction

Harmony Hub is equipped with:

- A radio receiver: Harmony Hub receives radio frames from wireless transmitters.
- A radio transmitter: Harmony Hub transmit radio frames to ZBRRH receiver.

Radio Communication Specifications

The following table shows the specifications of the radio communication:

Characteristics	Specifications
Frequency	2.405 GHz (channel 11 IEEE 802.15.4)
Maximum distance	100 m (328.08 ft) (when Harmony Hub is in free field)


For more details, refer to Maximum Distances (*see page 31*).

ZBRA2 External Antenna

The ZBRA2 external antenna is an accessory, which you have to order separately.

You can connect it to Harmony Hub to improve the signal reception.

To install the ZBRA2 external antenna, open the protective plug and connect the antenna as shown in the following figure:

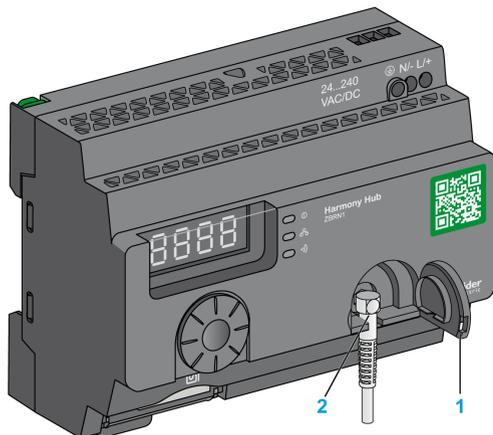

- 1 Protective plug
- 2 Radio connector


NOTE: Only the ZBRA2 external antenna can be connected to the radio connector.

The following table shows the specifications of ZBRA2 antenna:

Parameters	Specifications
Bandwidth	83...100 MHz
Frequency	2400...2483 MHz
Gain	>3 dBi
Impedance	50 ohms
Polarization	Vertical
RF connector	Radial R 300113100
Cable length	2 m (6.56 ft)

Mounting Tips for The ZBRA2 External Antenna

The ZBRA2 external antenna is to be placed on the top of the metal cabinet where Harmony Hub is installed as shown in the following figure:

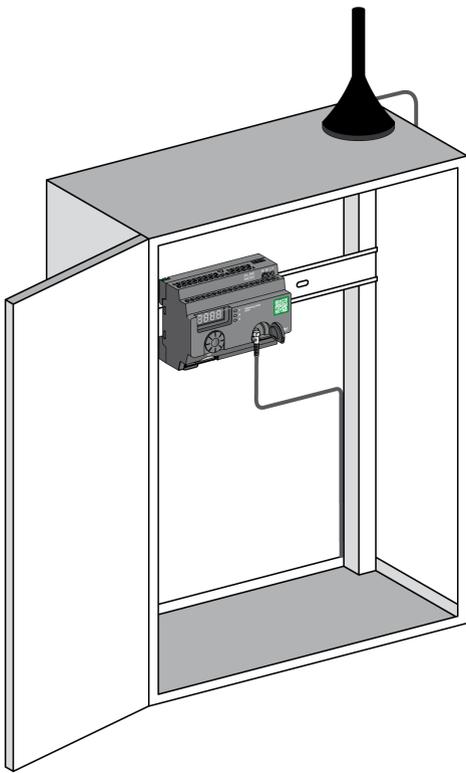


The antenna is equipped with a magnet at the bottom to mount it on the metal cabinet.


When the ZBRA2 external antenna is connected to Harmony Hub, you can also use the ZBRA1 relay antenna.

Mounting Tips for The ZBRA1 Relay Antenna


The ZBRA1 relay antenna and Harmony Hub are installed with regard to their vertical axis as shown in the following figure:

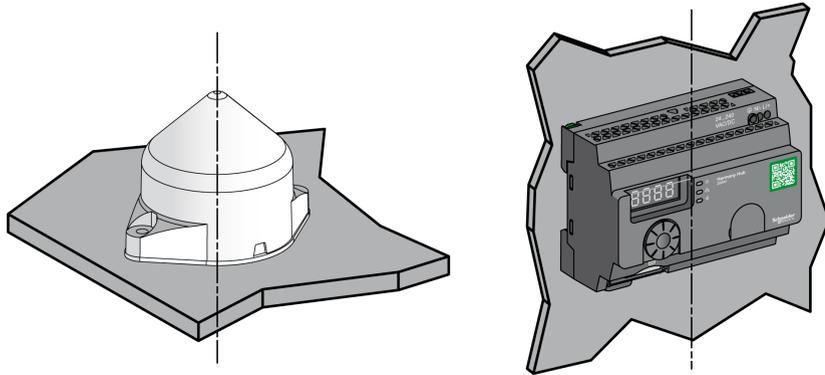

The relay antenna is used to bypass the obstacle as shown in the following figure:

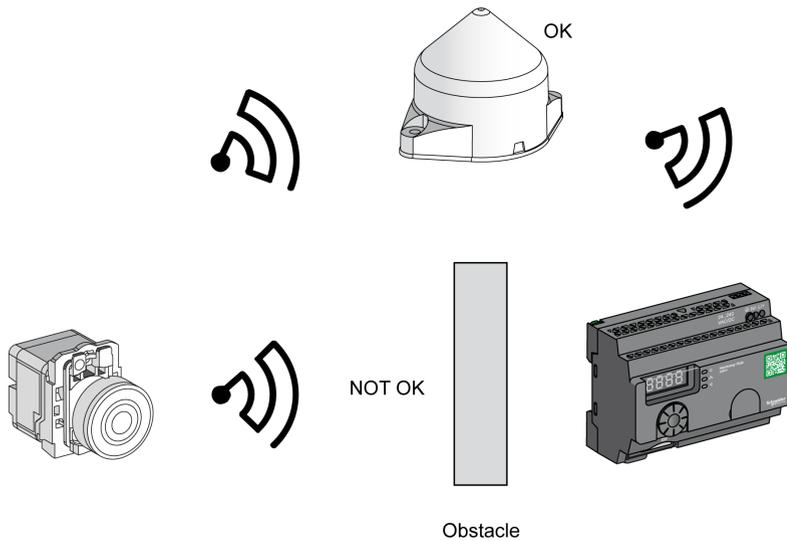

You can also use the relay antenna to amplify the signal before an obstacle that cannot be bypassed, such as a factory building as shown in the following figure:

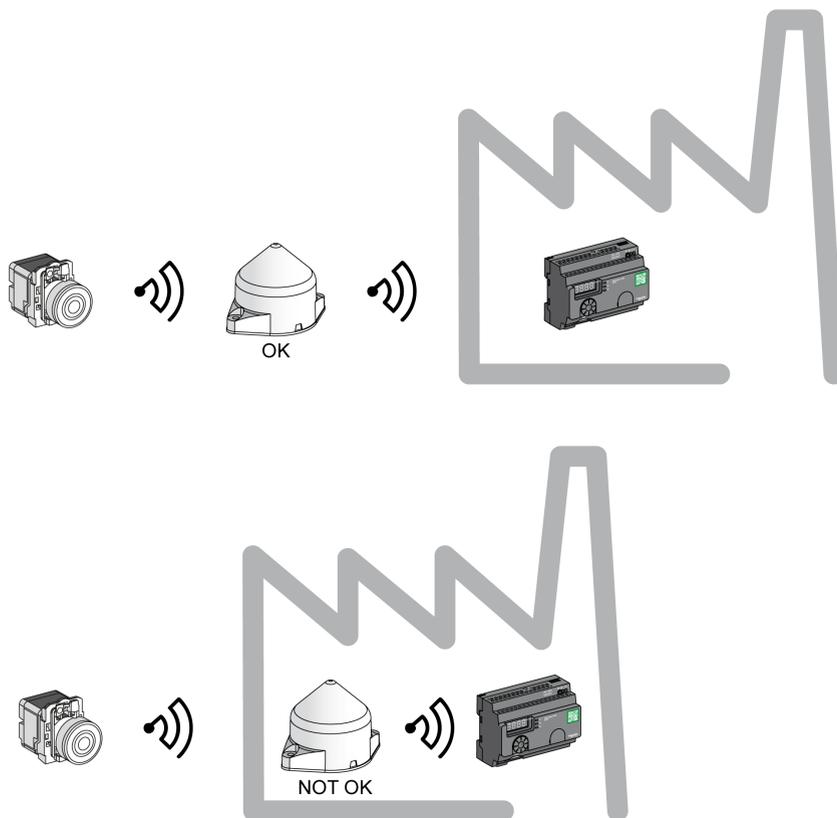

NOTE: In this case, if there is no relay antenna, the signal received by Harmony Hub may not be sufficient.

The following table shows the differences between ZBRA1 and ZBRA2:

ZBRA1	ZBRA2
An active antenna (transceiver) for increasing the signal reception.	A passive antenna for increasing the signal reception without saturating the bandwidth.
Repeats the signal received from the transmitter and amplifies it.	Does not repeat the signal received from the transmitter.
Consumes power.	Does not consume power.

FCC USA and IC Canada Compliance Statement (ZBRN1 and ZBRN2)

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following 2 conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivante:

- 1) L'appareil ne doit pas produire de brouillage.
- 2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter (IC: 7002C-ZBRN1, 7002C-ZBRN2) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio (identifier IC: 7002C-ZBRN1, 7002C-ZBRN2) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

- ZBRN1 and ZBRN2: Maximal gain of internal antenna = 6 dB / allowed impedance: 50 Ohm.
- ZBRA2: Maximal gain of external antenna (including cable) = 1 dB / allowed impedance: 50 Ohm.

Any changes or modifications not expressly approved by Schneider Electric could void the user's authority to operate the equipment.

Chapter 9

User Interface

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
9.1	Overview	158
9.2	Configuration Menu	166
9.3	Diagnostic Menu	183
9.4	SD Card Menu	187

Section 9.1

Overview

What Is in This Section?

This section contains the following topics:

Topic	Page
Principle	159
Modes	162
Menu Structure	165

Principle

Jog Dial Operation


The following table shows the operation of the jog dial:

Input Keys	Function
	Turn the jog dial clockwise/counterclockwise for menu navigation and to increase/decrease the parameter values.
 = ENT Single click	Press once the jog dial for less than 3 s to validate the parameters entered.
 = ESC Double click	Press twice the jog dial to return to the previous menu.
 Long press	<p>Press and maintain the jog dial for more than 3 s to return to the Ready mode immediately.</p> <p>When Harmony Hub is in the Ready mode, press the jog dial for more than 3 s to lock the user interface.</p> <p>When Harmony Hub is locked, press the jog dial for more than 3 s to unlock the user interface.</p>

NOTE: If there is no action on the jog dial after 3 minutes, Harmony Hub automatically switches to **Ready** mode. For more information, refer to Modes ([see page 162](#)).

User Interface LEDs

The following figure shows LEDs on the user interface:

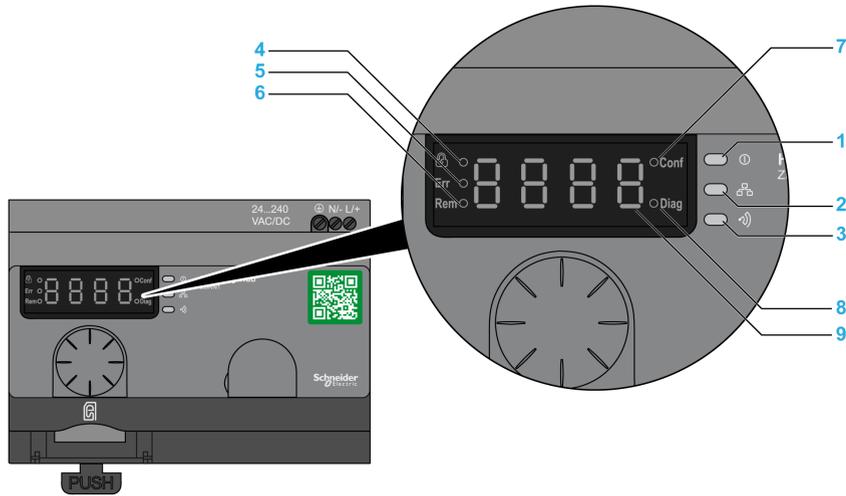

Item	LED	Color	Function
1	Power	Green	On: The unit is turned on. Off: The unit is turned off.
2	Communication	Yellow	Flashing: Communication for the Ethernet or Modbus serial line is detected on the bus. Off: No communication for the Ethernet or Modbus serial line is detected on the bus.
3	Radio signal strength	Green/Yellow	The LED color indicates the strength of the radio signal. See Radio Signal Strength LED (<i>see page 161</i>).
4	Lock	Red	On: The user interface is locked. Off: The user interface is unlocked.
5	Err	Red	On: Harmony Hub has detected an error. Off: Harmony Hub did not detect an error.
6	Rem	Red	On: Harmony Hub is in auto teach mode and is remotely configured. Off: Harmony Hub is not remotely configured.
7	Conf	Red	On: Configuration menu is active. Off: Configuration menu is not active.
8	Diag	Red	On: Diagnostic menu is active. Off: Diagnostic menu is not active.

Item	LED	Color	Function
9	Display	Red	Slow flashing: The parameter value can be changed through the jog dial. Fast flashing 3 times: The parameter setting was successful.

Radio Signal Strength LED

The following figure shows the status of the radio signal strength LED:



Modes

Operating Modes

Harmony Hub has the following 3 basic operating modes:

- **Ready**
- **Configuration**
- **Diagnostic**

Ready Mode

The normal working state of Harmony Hub is **Ready** mode. When Harmony Hub is switched on, it displays the protocol (for example, SL for serial line) and the firmware version (for example, 01.00). Then, it switches to **Ready** mode, and the power LED turns on.

The following figure shows the default screen in **Ready** mode:



In **Ready** mode, Harmony Hub receives the input signal from the transmitter, the input/output LED turns on, and the radio signal strength LED indicates the strength of the input signal.

The following figure shows the input status in run mode:



NOTE: The 7 segment display shows the channel number and input value for 1 s.

The red LED indicates that the user interface is locked.

All the parameters of the device are set in **Configuration** mode. All parameters are accessible as read-only values in **Diagnostic** mode.

You can switch from **Ready** mode to **Configuration** or **Diagnostic** modes by pressing the jog dial once when Harmony Hub is in **Ready** mode.

You can turn the jog dial clockwise or counterclockwise to navigate through the different menus while in **Ready** mode.

In online auto binding mode, the dedicated LED turns on and the 7 segment LED displays the current binding channel.

The following figure shows the default screen in online auto binding mode:



NOTE: You can exit from auto-binding mode by rotating the jog dial clockwise or counterclockwise.

Configuration Mode

The following table shows the properties of the **Configuration** menu:

Menu	Parameters (Can Be Configured)
Input Configuration (<i>see page 169</i>)	Allows you to do the following operations: <ul style="list-style-type: none"> ● Auto teach. ● Auto unteach. ● Manual teach. ● Manual unteach. ● Output association.
Output Configuration (<i>see page 175</i>)	Allows you to do the following operations: <ul style="list-style-type: none"> ● Teach. ● Unteach.
Serial Line Menu (<i>see page 177</i>)	Allows you to set the following: <ul style="list-style-type: none"> ● Manual baud rate ● Manual frame format ● Auto baud rate ● Auto frame format
IP Setting Menu (<i>see page 179</i>)	Allows you to do the following operations: <ul style="list-style-type: none"> ● Select the DHCP mode. ● Select the BOOTP mode. ● Select the static IP mode. <ul style="list-style-type: none"> ○ Set the 4 bytes IP address. ○ Set the 4 bytes subnet mask. ○ Set the 4 bytes gateway address. ○ Save the IP address.
Radio frequency menu (<i>see page 181</i>)	Allows you to do the following operations: <ul style="list-style-type: none"> ● Active/deactivate the radio communication ● Set the power transmission level ● Set the radio frequency channel
Factory Mode (<i>see page 182</i>)	Allows you to do the following operations: <ul style="list-style-type: none"> ● Reset the communication parameter to the default value. ● Reset all the parameters to the default value. ● Set the PAN ID Harmony Hub MAC/ID

Diagnostic Mode

The following table shows the properties of the **Diagnostic** menu:

Menu	Parameters Displayed
Input status	Status of the transmitter.
Output status	Status of the receiver
Serial link information	<ul style="list-style-type: none"> ● Slave ID. ● Baud rate. ● Frame format.
Ethernet information	<ul style="list-style-type: none"> ● IP address. ● Subnet mask. ● Gateway address. ● MAC address.
Radio frequency	<ul style="list-style-type: none"> ● RF state (<i>r u n</i> or <i>o f f</i>) ● RF channel ● RF power transmission level (in dBm) ● PAN ID ● Green Power Brick version
Device status	<ul style="list-style-type: none"> ● Code of the detected error. ● Device reference (ZBRN1/ZBRN2). ● Firmware version. ● Industrial Configuration Version.
For further information, refer to Diagnostic Menu (see page 183).	

SD Card


The following table shows the properties of the **SD card** menu:

Menu	Parameters
Save all parameters	Allows you to save all the parameters in the SD card.
Load all parameters	Allows you to load all the parameters from the SD card.
For further information, refer to SD Card Menu (see page 187).	

Menu Structure

Overview

The following figure shows the menu structure:

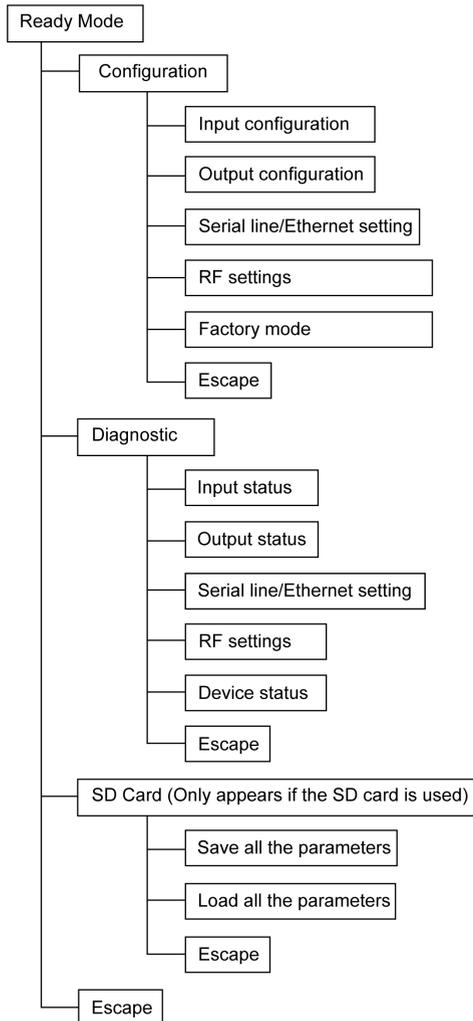

Section 9.2 Configuration Menu

What Is in This Section?

This section contains the following topics:


Topic	Page
Configuration Menu Overview	167
Input Configuration Menu	169
Output Configuration Menu	175
Communication Menus	177
Radio Frequency Menu	181
Factory Mode	182

Configuration Menu Overview

Introduction

You can enter all the settings for Harmony Hub from the **Configuration** menu. When you activate the **Configuration** menu, configuration LED turns on.


The following figure shows the display screen when **Configuration** menu is active:



NOTE: In this example, the value 21 represents the total number of configured inputs.

Organization Tree

The following figure shows the **Configuration** menu structure:

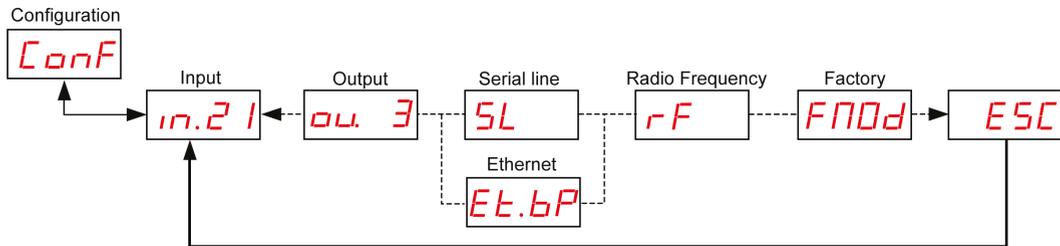


Code	Name/Description
	Configuration menu.
	Input menu. <i>(see page 169)</i>
	Output menu. <i>(see page 175)</i>
	Serial Line setting menu <i>(see page 177)</i> . It appears only in ZBRN2.
	IP Setting menu <i>(see page 179)</i> . It appears only in ZBRN1.
	Radio Frequency menu <i>(see page 181)</i> .

Code	Name/Description
	Factory mode menu (<i>see page 182</i>). It allows you to reset the device settings to the default factory mode and set the Harmony Hub MAC/ID.

Input Configuration Menu

Input Configuration

The following figure shows the organization tree of **Input Configuration** menu:

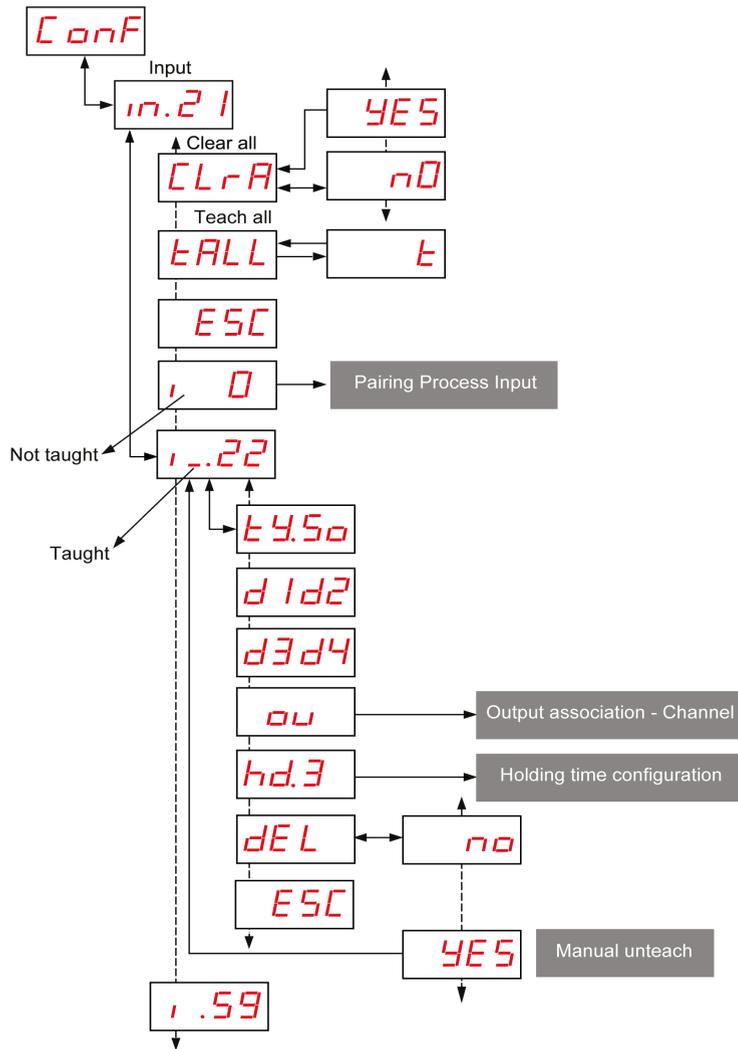

Pairing Process Input For more details, refer to Pairing Process Input ([see page 171](#)).


Output association For more details, refer to Output Association ([see page 173](#)).

Holding time For more details, refer to Holding time menu ([see page 174](#)).

Code	Name/Description	Range	Factory Setting
	Displays the channel number which is taught.	0-59	0
	Transmitter not taught. For details, refer to Pairing Process Input (see page 171).	-	-
	Transmitter taught.	-	-
	Type of Transmitter	S o C L E t S I	-
 	First byte and second byte of the transmitter MAC/ID. Third byte and fourth byte of the transmitter MAC/ID.	-	-
	Input Holding Time Menu (see page 174).	-	-
	Output association-Channel (see page 173).	-	-
	Unteach all the transmitters.	-	-
	Launch auto teach process for the inputs with an ID configured but not yet paired (6 input maximum).	-	-
	Auto teach mode.	-	-

Pairing Process Input

The following figure shows the pairing process for type 0 devices (push-buttons and limit switches):

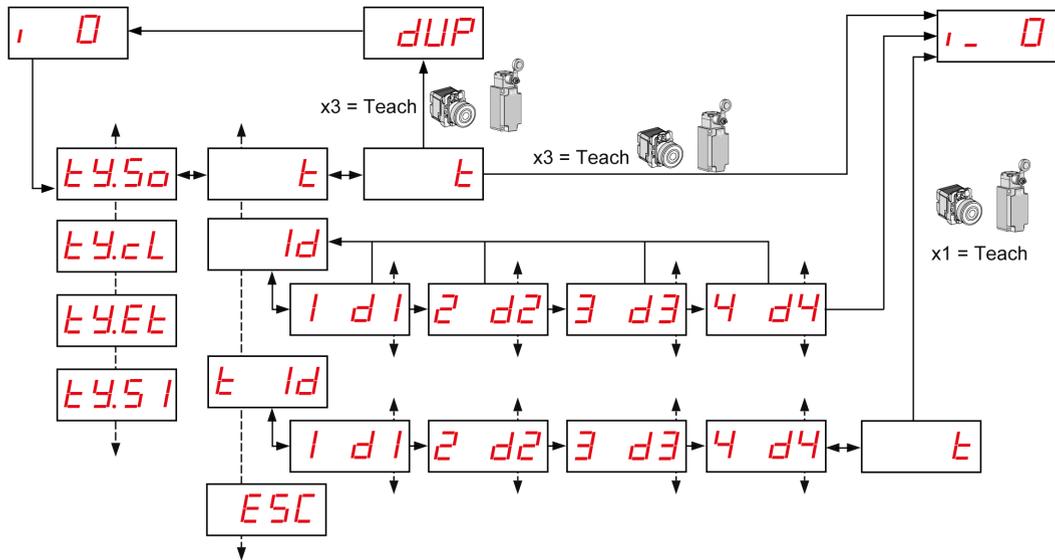


1 For other type of transmitter, refer to Pairing Procedures Input (*see page 54*).

Code	Name/Description	Range	Factory Setting
	Transmitter taught.	-	-
	Transmitter not taught.	-	-
	Type of Transmitter	S o c L E t S I	-
	teach mode.	-	-

Code	Name/Description	Range	Factory Setting
	The transmitter is already taught. Duplication of MAC addresses is not allowed.	–	–
	Enter the 4 bytes of the MAC/ID of the transmitter.	–	–
	Enter the 4 bytes of the MAC/ID of the transmitter then launch the auto teach process	–	–
   	First byte of the transmitter MAC/ID. Second byte of the transmitter MAC/ID. Third byte of the transmitter MAC/ID. Fourth byte of the transmitter MAC/ID.	00...FF 00...FF 00...FF 00...FF	00


Output Association - Channel

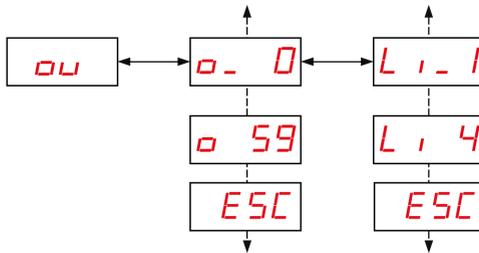

Code	Name/Description	Range	Factory Setting
	Output association.	-	-
	Receiver associated.	-	-
	Receiver not associated.	-	-
	Q1 output of the transmitter associated to the input.	-	-
	Q4 output of the transmitter not associated to the input.	-	-

Input Holding Time Menu

The following figure shows the organization tree of **Input Holding Time** menu:

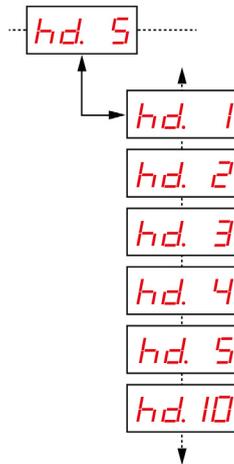


Code	Name/Description	Range	Factory Setting
hd. 5	Input holding time setting menu.	1 = 100 ms	1 = 100 ms
		2 = 200 ms	
		3 = 300 ms	
		4 = 400 ms	
		5 = 500 ms	
		10 = 1 s	

Output Configuration Menu

Output Configuration

The following figure shows the organization tree of **Output** menu:

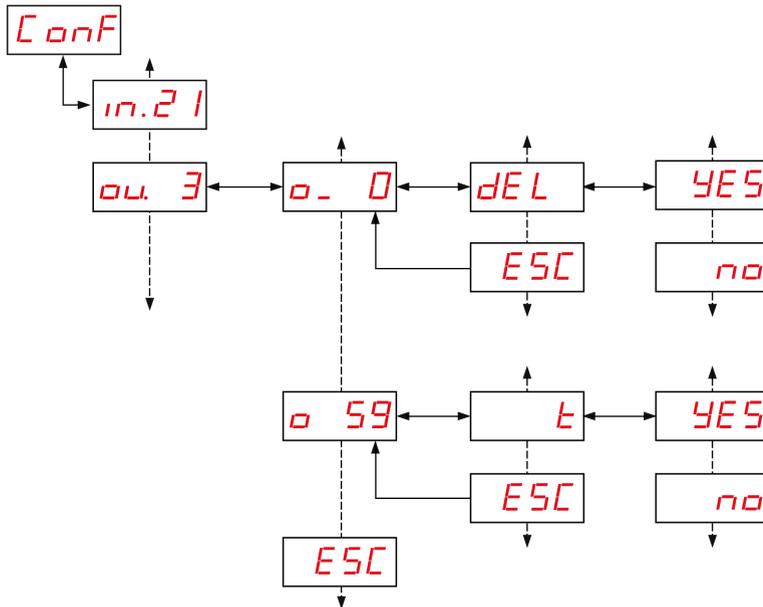

Code	Name/Description	Range	Factory Setting
	Reset associated receiver.	-	-
	Receiver taught.	-	-
	Receiver not taught.	-	-

Code	Name/Description	Range	Factory Setting
<input type="text" value="E"/>	Teach mode.	-	-
DEL	UnTeach mode.	-	-


Communication Menus


Overview

Code	Name/Description
SL	Serial Line setting menu (<i>see page 177</i>). It appears only in ZBRN2.
Et.bP	IP Setting menu (<i>see page 179</i>). It appears only in ZBRN1.

Serial Line Menu


The following figure shows the organization tree of **Serial Line** menu:

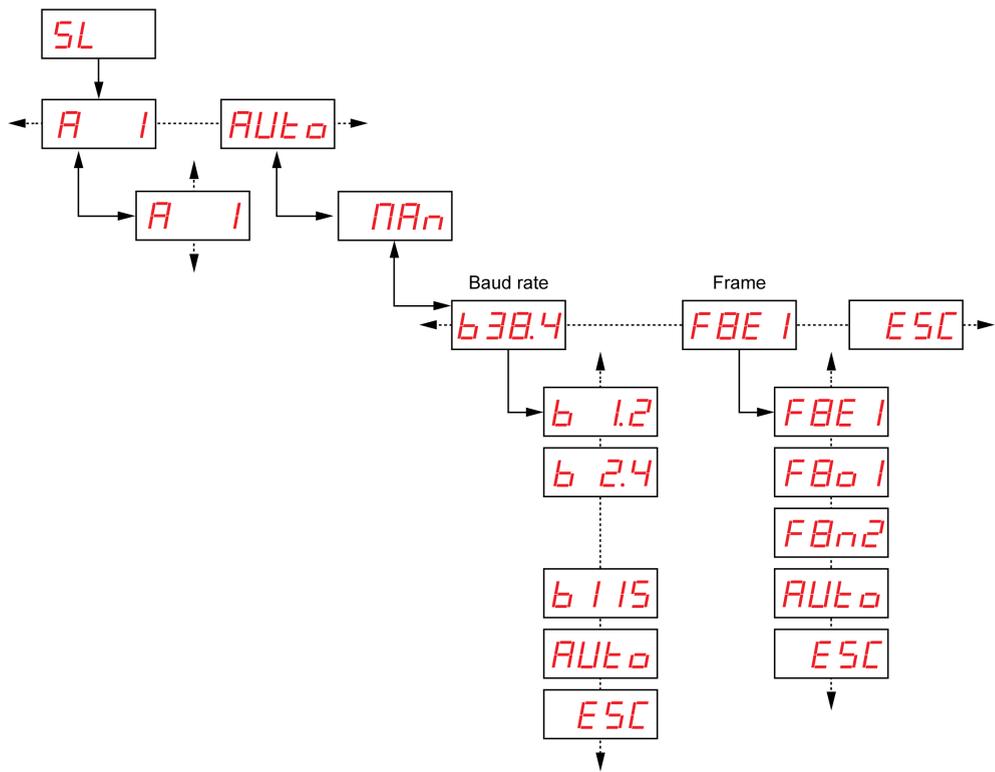

Code	Name/Description	Range	Factory Setting
	Slave address menu. It allows you to set the slave address.	1-247	1
	Enables auto detection mode. All the parameters (baud rate and frame setting) are set automatically.	–	Auto
	Allows you to set the baud rate and frame setting manually.	–	–
	Baud rate menu. It allows you to select the baud rate value from the list.	1.2 = 1200 bps	–
		2.4 = 2400 bps	
		4.8 = 4800 bps	
		9.6 = 9600 bps	
		19.2 = 19,200 bps	
		38.4 = 38,400 bps	
	Frame setting menu. It allows you to select the frame format from the list.	8e1 = Even parity	Auto
		8o1 = Odd parity	
		8n2 = No parity	

IP Setting Menu

The following figure shows the organization tree of **IP Setting** menu:

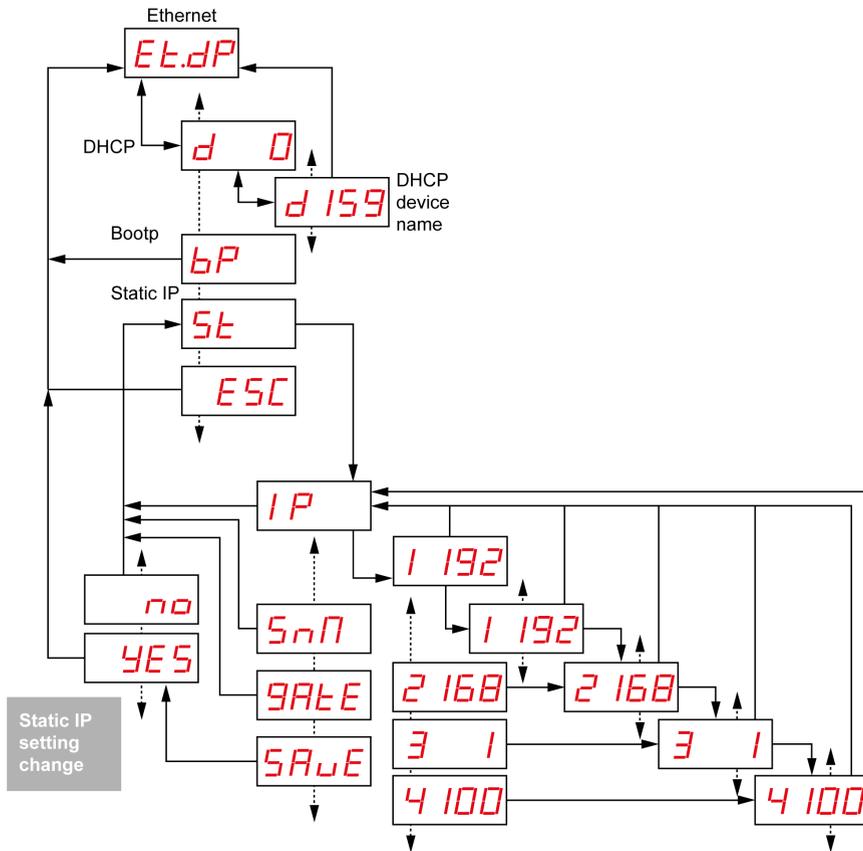


Code	Name/Description	Range	Factory Setting
<code>Et.dP</code>	Harmony Hub uses DHCP mode to set the network-specific parameters.	-	-
<code>d 159</code>	In DHCP mode, enter the device name. Harmony Hub gets the IP address from the DHCP server. Example: The complete device name is ZBRN1_078 when the value is set to 78.	000-159	000

Code	Name/Description	Range	Factory Setting
	Harmony Hub uses BOOTP mode to set the network-specific parameters.	-	-
	BOOTP mode Harmony Hub gets the IP address from BOOTP server.	-	-
	Harmony Hub uses static IP mode to set the network-specific parameters.	-	-
	In static IP mode, the IP address, subnet mask, and gateway are entered manually using the jog dial.	-	-
	Enter the 4 bytes of the subnet address.	-	-
	Enter the 4 bytes of the gateway address.	-	-
	Enable the IP address and return to the previous menu.	-	-

Radio Frequency Menu

Radio Frequency Menu

The following figure shows the organization tree of **Radio Frequency** menu:

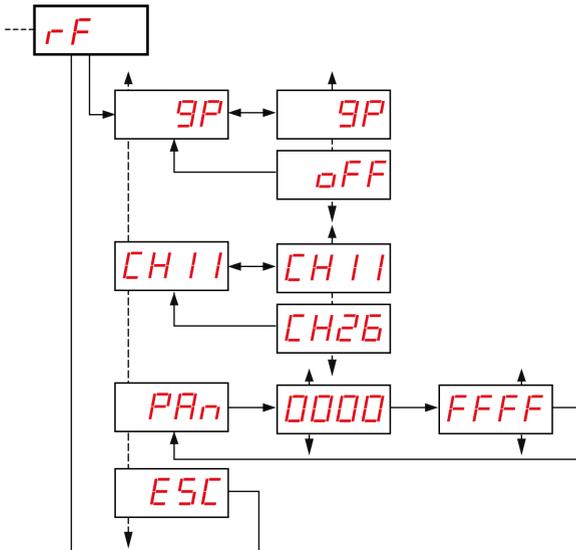


Code	Name/Description
<code>GP</code>	Activate/deactivate the radio communication.
<code>CH11</code>	Select the radio frequency channel (11...26).
<code>PAN</code>	Enter the PAN ID of the Harmony Hub (0000 H...FFFF H).
<code>ESC</code>	Quit to return to the previous menu.

Factory Mode

Factory Mode

The following figure shows the organization tree of **Factory Mode** menu:

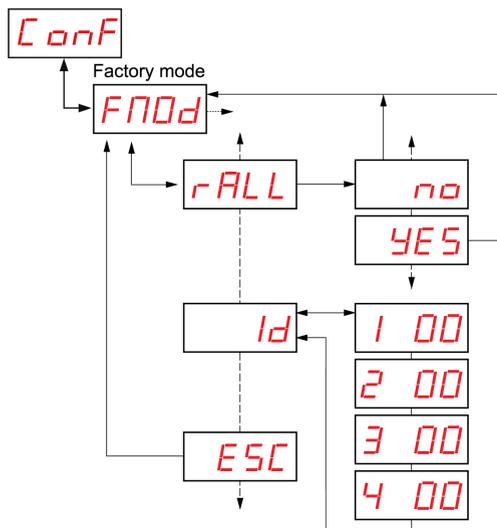

Code	Name/Description
<code>rALL</code>	Reset all the parameter values to default setting.
<code>Id</code>	The 4 bytes of the MAC/ID of the Harmony Hub. If the MAC/ID is empty (00.00.00.00), contact your Schneider Electric Local Support.
<code>ESC</code>	Quit to return to the previous menu.

Section 9.3


Diagnostic Menu

Diagnostic Menu

Introduction

Diagnostic menu gives the information about various settings of the device and the detected error status. When you activate the **Diagnostic** menu, **Diagnostic** LED turns on.


The following figure shows the display screen when the **Diagnostic** menu is active:






NOTE: In this example, the value 21 represents the total number of configured inputs.


Organization Tree

The following figure shows the **Diagnostic** menus:

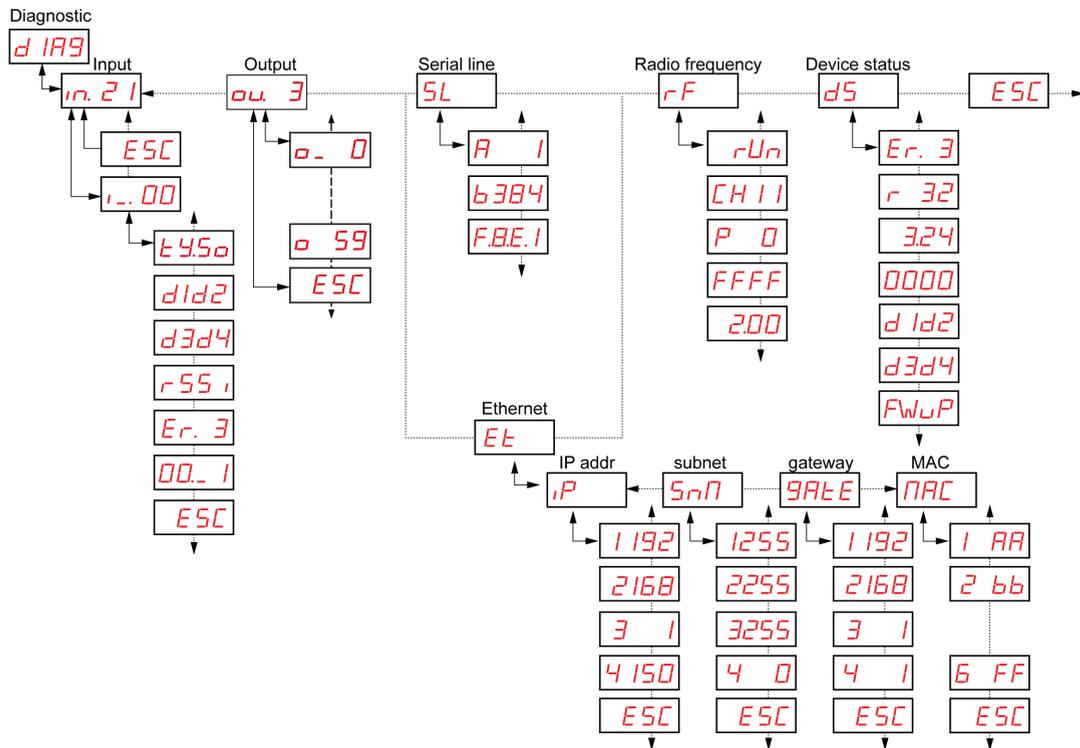

Code	Name/Description
d 1A9	Diagnostic menu.

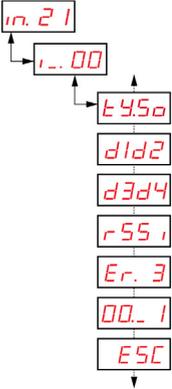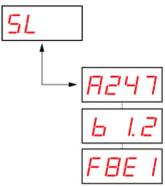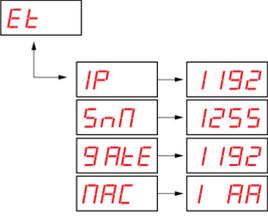Code	Name/Description
	<p>Displays the binding information, such as the current binding number.</p> <p>Displays:</p> <ul style="list-style-type: none"> • Type of transmitter • First byte and second byte of the transmitter MAC/ID. • Third byte and fourth byte of the transmitter MAC/ID. • Received Signal Strength Indication (dB). • Transmitter Error Codes (<i>see page 138</i>). • Reserved.
	<p>Displays the binding information, such as the current binding number.</p>
	<p>Displays the serial information:</p> <ul style="list-style-type: none"> • Slave address • Current baud rate • Frame setting
	<p>Displays the IP information:</p> <ul style="list-style-type: none"> • IP address • Subnet mask • Gateway • MAC address

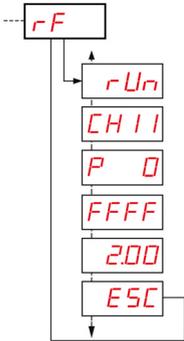Code	Name/Description
 <p>The diagram shows a vertical sequence of menu items: <code>rf</code>, <code>rUn</code>, <code>CH11</code>, <code>P 0</code>, <code>FFFF</code>, <code>200</code>, and <code>ESC</code>. Arrows indicate the flow from <code>rf</code> to <code>rUn</code>, and from <code>rUn</code> to each of the subsequent items down to <code>ESC</code>.</p>	<p>Displays the radio frequency status:</p> <ul style="list-style-type: none"> ● RF state (<code>r u n</code> or <code>o f f</code>) ● RF channel ● RF power transmission level (in dBm) ● PAN ID ● Green Power Brick version
 <p>The diagram shows a vertical sequence of menu items: <code>d5</code>, <code>Er. 3</code>, <code>r 32</code>, <code>324</code>, <code>0000</code>, <code>d1d2</code>, <code>d3d4</code>, <code>FwUP</code>, and <code>ESC</code>. Arrows indicate the flow from <code>d5</code> to <code>Er. 3</code>, and from <code>Er. 3</code> to each of the subsequent items down to <code>ESC</code>.</p>	<p>Displays the Harmony Hub device status:</p> <ul style="list-style-type: none"> ● Harmony Hub error codes (<i>see page 136</i>) ● Product version ● Application version ● Industrial configuration version ● First byte of the MAC/ID of Harmony Hub ● Second byte of the MAC/ID of Harmony Hub ● Third byte of the MAC/ID of Harmony Hub ● Fourth byte of the MAC/ID of Harmony Hub ● Firmware update action (only when <code>SD:/EA_sme.txt</code> is present) <p>NOTE: To clear a detected error, press the jog dial when selecting the code of the detected error parameter.</p>

NOTE: The serial line information menu exists only for ZBRN2. The IP information menu exists only for ZBRN1.

Section 9.4

SD Card Menu


SD Card Menu

Introduction

The SD card menu allows you to back up and restore the binding and network parameters.

Organization Tree

The following figure shows the SD card menus:

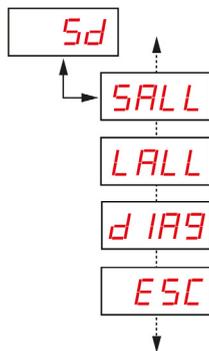

Code	Name/Description
	The SD card setting menu allows you to back up and restore the binding and network parameters.
	Allows you to save all the parameters in the SD card. To validate this parameter, select Yes from the submenu.
	Loads all the parameters from the SD card. To validate this parameter, select Yes from the submenu.
	Allows you to save all the binding information in the SD card. To validate this parameter, select Yes from the submenu.

NOTE: The SD card menu appears only if the SD card is inserted into the device.

Chapter 10

SD Card

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	190
Functions	192
File Management and Diagnostics	194

Introduction

General

The secure digital card (SD card) is an ultra small flash memory card designed to provide high-capacity memory in a small size. The minimum capacity of the SD card is 16 Mb.

SD Card Insertion and Removal


⚠ CAUTION

UNINTENDED EQUIPMENT OPERATION

- Do not expose the SD card to any of the following:
 - Electrostatic or electromagnetic sources.
 - Heat, sunlight, water, or moisture.
 - High radiation. High-level radiation can erase the content of the SD card.
- Avoid impact to the SD card.


Failure to follow these instructions can result in injury or equipment damage.

The following figure shows how to insert the SD card into Harmony Hub:

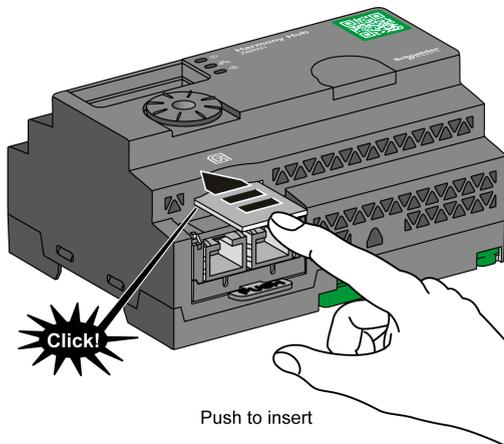

Push to insert the SD card into the SD card slot on Harmony Hub. Make sure that the SD card is inserted properly.

The following figure shows how to remove the SD card from Harmony Hub:

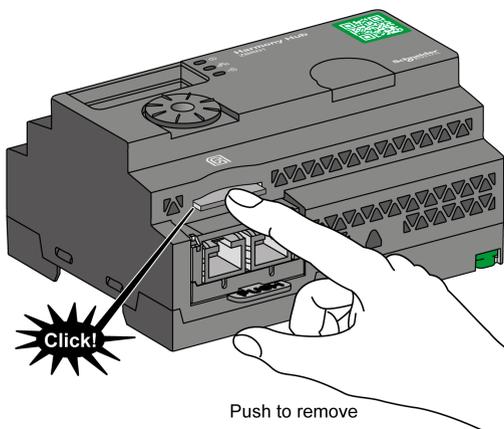

Push to remove the SD card from the SD card slot on Harmony Hub.

Functions

Supported Features

The SD card supports the following features:

- Saving the configuration and network parameters (*see page 192*)
- Loading the configuration and network parameters (*see page 192*)
- Firmware update operation (*see page 192*)

Saving the Configuration

The following steps explain how to save the configuration and network parameters:

Step	Action
1	Insert an empty SD card into Harmony Hub.
2	On the SD card menu, select Save all .
3	Select Yes from the submenu to validate the action.
4	Wait until Yes stop blinking.
5	This action creates 2 subfolders in the SD card: <ul style="list-style-type: none"> • <i>ldevice</i>: Stores the device configuration file <i>ZBRNxxDEV.CSV</i>. • <i>lnet</i>: Stores the network configuration file <i>ZBRNxxNET.CSV</i> <p>NOTE: You can update the .CSV files manually and load them into Harmony Hub afterwards.</p>

Loading the Configuration

The following steps explain how to load the device configuration and network parameters:

Step	Action
1	Insert the SD card into Harmony Hub.
2	Make sure that the files you want to load are located in the appropriate SD card subfolders (create <i>ldevice</i> and <i>lnet</i> subfolders if they do not exist in the SD card): <ul style="list-style-type: none"> • <i>ldevice</i>: Stores the device configuration file <i>ZBRNxxDEV.CSV</i> • <i>lnet</i>: Stores the network configuration file <i>ZBRNxxNET.CSV</i>
3	On the SD card menu, select Load all .
4	Select Yes from the submenu to validate the action.
5	Wait until Yes stop blinking.

Firmware Update

This feature allows the user to update Harmony Hub firmware with the SD card.

NOTE: A firmware update does not erase Harmony Hub configuration. Modbus settings, RF settings, and binding list are kept in memory after firmware update.

NOTE:

The firmware requires upgrading in the following cases:

- Schneider Electric recommends or requires the upgrade.
- There is a new functionality that is required and is only available by firmware upgrade.

In all other cases, it is not necessary to upgrade the firmware.

While using “FWUP” action on the HMI menu, it is possible to see “FWUP” and Err.

LED blinking for 2 seconds. This indicates that the SD card is asking for “checking and repair”. Therefore, the action is interrupted and the SD card is “repaired”. A second try at this action launches “FWUP” action.

The following steps explain how to update Harmony Hub firmware:

Step	Action
1	Load <code>Harmony_Hub_Vxx.xx.zip</code> from Schneider Electric Website depending on the firmware version.
2	Verify the SHA in the release note.
3	Copy the content of the zip file into the SD Card.
4	Insert SD card into Harmony Hub (unlocked).
5	Restart Harmony Hub.
6	The Radio signal strength LED becomes orange for 1 s during restart, indicating a success of the update.

NOTE: User application can be updated with the HMI menu “FWUP”.

File Management and Diagnostics

File Management

The following table shows the file names with the path used in the SD card:

Files	Description
User application	
SD:/device/ZBRNxxDEV.CSV	Device configuration file including the transmitters binding list.
SD:/device/ZBRNxxDEV.CSV.bck <i>i</i>	Backup file ⁽¹⁾ .
SD:/net/ZBRNxxNET.CSV	Network configuration file including Harmony Hub general settings.
SD:/net/ZBRNxxNET.CSV.bck <i>i</i>	Backup file ⁽¹⁾ .
SD:/diag/ZBRNxxdiag.CSV	Diagnostic file including the transmitters diagnostic information.
SD:/diag/ZBRNxxdiag.CSV.bck <i>i</i>	Backup file ⁽¹⁾ .
FW Updates	
SD:/EA_image/gp/xxxx.bin	Binary file for the update of the CC2530 application. Path SD:/EA_image/gp/ is default path when using "FWUP" NOTE: By default, the first file found in the folder is taken for update. Other files are ignored.
SD:/EA_image/fw_app/xxxx.bin	Binary file for the update of the user application. Path SD:/EA_image/fw_app/ is default path when using "FWUP" NOTE: By default, the first file found in the folder is taken for update. Other files are ignored.
SD:/EA_sme.txt	Enables and displays the menu "FWUP" (Firmware Update) (for "gp" and "ap" updates only). This file is empty.
SD:/ap_fwup.txt	Enables the update of the user application. Can be created by the user to load .bin file from a specific path, and update the application on the restart of Harmony Hub. Can be generated automatically when using "FWUP".
SD:/gp_fwup.txt	Enables the update of the green power application. Can be created by the user to load .bin file from a specific path. Can be generated automatically when using "FWUP".
Industrial configuration	
SD:/EA_image/indus/xxxx.bin	Binary file for the update of the industrial configuration. Path SD:/EA_image/indus/ can be modified.
(1) i: [0...5]. When new files are stored in the SD card, instead of erasing previous files, Harmony Hub saves the files with extension bck <i>i</i> . Harmony Hub can store 6 older files, bck0 is the most recent.	

Files	Description
SD:/indus_up.txt	Enables the update of the industrial parameters on the restart of Harmony Hub. Must be created by the user to load .bin file from a specific path.
(1) i: [0...5]. When new files are stored in the SD card, instead of erasing previous files, Harmony Hub saves the files with extension bck <i>i</i> . Harmony Hub can store 6 older files, bck0 is the most recent.	

SD Card Diagnostics

The following table shows the diagnostic details of the SD card:

Code of the Detected Error	Device Indication	Description
00	The SD Card menu is available.	SD card is present in Harmony Hub.
	The SD Card menu is not available.	SD card is not present in Harmony Hub.
10	Error LED turns on.	SD card cannot be accessed or is not compatible.
11	Error LED turns on.	SD card is write-protected.
12	Error LED turns on.	Not enough space in the SD card.
13	Error LED turns on.	Invalid parameter in the SD card.
14	Error LED turns on.	Network configuration file ZBRNxxNET.CSV is invalid.
15	Error LED turns on.	Device configuration file ZBRNxxDEV.CSV is invalid.
16	Error LED turns on.	More than 1 network configuration file is stored in the Net folder while restoring, which is not allowed.
17	Error LED turns on.	More than 1 Device configuration file is stored in the Net folder while restoring, which is not allowed.
18	Error LED turns on.	Network configuration file is not available in the SD card.
19	Error LED turns on.	Device configuration file is not available in the SD card.

Device Configuration File

The Device configuration file *ZBRNxxDEV.CSV* contains the sensors binding list.

Location in the SD card: SD:/device/ZBRNxxDEV.CSV.

Device configuration file content:

Parameter name	Value	Description
Input	[0: 59]	-
Enable	True / False	True: A transmitter is associated False: The input is free
Association mode	[1:4]	1: Static (No security) 2: OTA Sensor (Security Sensor) 3: OTA (No security) 4: OTA Box (Security Box)
Type	[Type1: Type6]	Type1: Push-button or limit switches Type2...Type3: Reserved Type4: Humidity and thermal monitoring sensors Type5: Thermal monitoring sensors Type6: Generic ZigBee, PowerTag sensors
Address	[00000001 H: FFFFFFFE H]	Unique ZigBee ID of the transmitter.
Security Type	[0:5]	Handles both security level and security type parameters (These parameters are updated automatically in the gateway once the transmitter is associated online).
Security Key	Format 00:00...00:00 (16 bytes)	Encryption key
Param1	Type1: [1:6]	Type1: Holding time 1: 100 ms 2: 200 ms 3: 300 ms 4: 400 ms 5: 500 ms 6: 1 s
	Type2: [0: 65635]	Reserved
Param2	Type1: [0: 59]	Output number associated (Receiver associated)
	Type2: [0: 100]	Reserved
Param3	Type1: [0: 3]	Q1...Q4 controlled output of the associated receiver

Example of Device configuration file with four transmitters:

Input	Enable	Association	Type	Address	Security Type (1)	Security key	Param1	Param2 (2)	Param3 (2)
0	True	1	Type 1	03005EAA H	1		5	2	4
1	True	2	Type 5	FFC12430 H	0				
2	True	2	Type 6	E2000356 H	0				
3	True	2	Type 4	FF900F90 H	0				

(1) "Security Type" for Type 1 is set to 1 since transmitters are paired with No security.
 "Security Type" for Type 4 and Type 5 is set to 0 since we want to take sensor's security. Once the sensor is Associated Online, this parameter will be automatically set to its right value.
 "Security Type" for Type 6 is set to 0 since the sensor in the example is secured.

(2) "Param2" for Type 1 is set from 0 to 59 since output is enabled. If output is disabled, then "Param2" is 0. "Param3" for Type 1 is set from 1 to 4 since output is enabled. If output is disabled, then "Param3" is 0.

Example of Device configuration file with one receiver:

Output	Enable
0	False
1	False
2	True
3	False

CSV files generated by SD card (with SAll HMI command) present 120 lines, one per input and output. It is not mandatory to write those 120 lines: Harmony Hub only consider lines with "Enable" parameter set to True.

Same Device Configuration File edited:

```
Input;Enable;Association;Type;Address;Security Type (1);Security key;Param1;Param2;Param3
0;TRUE;1;Type 1;03005EAA H;1;;5;2;4
1;TRUE;2;Type 5;FFC12430 H;0;;;
2;TRUE;2;Type 6;E2000356 H;0;;;
3;TRUE;2;Type 4;FF900F90 H;0;;;
Output;Enable;;;;;;;;;
2;TRUE;;;;;;;;;
```

Network Configuration File

The Network configuration file *ZBRNxxNET.CSV* contains Harmony Hub parameters.

Location in the SD card: SD: /net/ZBRNxxNET.CSV.

Network configuration file content:

Parameter Name	Value	Default Value	Description
General settings			
RF mode	[0:3]	1	0: Off 1: Green Power 2: ZigBee Green Power Concentrator 3: ZigBee Green Power Router
Channel	[11:26]	11	Radio channel
PanID	[0001 H: FFFF H]	FFFF H	Radio Panel ID
PWTX	[-22:4]	0	Radio Power TX
Modbus settings			
Auto detection	TRUE / FALSE	TRUE	TRUE: Automatic detection of Master Modbus Settings FALSE: Baud rate and Frame setting are set by eponym parameters
Baud rate	[1:7]	5	1: 1200 bps 2: 2400 bps 3: 4800 bps 4: 9600 bps 5: 19200 bps 6: 38400 bps 7: 115200 bps
Frame setting	[1:3]	1	1: 8e1 (8 data bits, even parity, 1 stop bit) 2: 8o1 (8 data bits, odd parity, 1 stop bit) 3: 8n2 (8 data bits, no parity, 1 stop bit)
Table selection	[0:4]	0	0: One UID per Harmony Hub [1:4]: One UID per device
Default settings			
Holding time	[1:6]	1	1: 100 ms 2: 200 ms 3: 300 ms 4: 400 ms 5: 500 ms 6: 1000 ms
Default voltage	[0:65535]	2300	Reserved
Default CosPhi	[0:100]	100	Reserved

Diagnostic File

The diagnostic file *ZBRNxxDIAG.CSV* contains the transmitters information.

Location in the SD card: SD: /diag/ZBRNxxDIAG.CSV.

Diagnostic file content:

Parameter name	Value	Description
Input	[0: 59]	-
Status	[On-Line, Off-Line]	Off-Line: the input parameters are configured (via SD card, Modbus or screen menu) but no radio exchanges have been performed On-Line: Input is paired, radio exchanges have been performed.
Type	[Type1: Type6]	Type1: Push-button or limit switches Type2...Type3: Reserved Type4: Humidity and Thermal monitoring sensors Type5: Thermal monitoring sensors Type6: Generic ZigBee, PowerTag sensors
Address	[00000001 H: FFFFFFFE H]	Unique ZigBee ID of the sensor
RSSI	UINT8 Unit: dBm Invalid value: -128	Radio reception power
PCBA temperature	INT16 [-200; 200] Unit: °C Invalid value: 8000 H	Device temperature
Battery Voltage	UINT8 Invalid value: FF H	Internal battery voltage