

**EMS BT DIN - State and control module
for Latching relays and Contactors****Cat. No:**
F80BCS

Contents	Pages
1. Description - Use.....	2
2. Range	2
3. Overall dimensions.....	2
4. Preparation - Connection.....	2
5. General characteristics.....	8
6. System architectures.....	13
6.1 Stand-alone	13
6.1.1 with local addressing.....	13
6.1.2 with remote addressing	14
6.2 Supervised.....	15
6.2.1 with local addressing.....	15
6.2.2 with remote addressing	17
7. Compliance and approvals	19

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS

1. DESCRIPTION - USE

- . Module dedicated to Energy Management System (EMS BT DIN) use.
- . Enables to remotely command and control the state of BTicino modular Latching relays and Contactors.
- . Equipped with DIP switches (on the side) allowing product configuration of:
 - type of associated device (latching relay or contactor)

Symbol:




2. RANGE

- . Cat. n° F80BCS: State and control module for BTicino modular Latching relays and Contactors 1 and 2 modules width up to 25 A, with 1 configurable relay max. 250 V~ -6 A contacts

Width:

- . 1 module. 17,8 mm width.

3. OVERALL DIMENSIONS

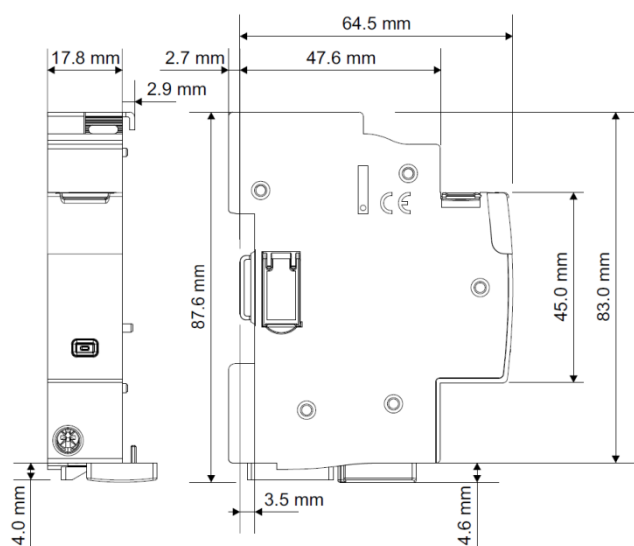

4. PREPARATION -CONNECTION

Fixing:

- . On symmetric rail EN/IEC 60715 or DIN 35 rail

Operating positions:


- . Vertical, Horizontal, Upside down, On the side




4. PREPARATION -CONNECTION (continued)

Power Supply:

- . Mandatory in 12 VDC via the specific Power supply module Cat n°F80BA
- . Two ways:
 - via specific communication patch cords (cat. nos F80BC250/500/1000) to connect at the downstream through dedicated ports

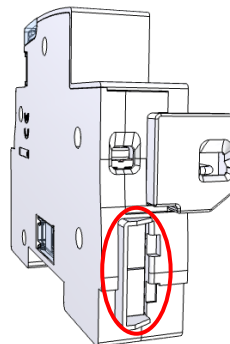


- via specific communication rails (cat. nos F80BR18/24/36) to connect at the rear through dedicated connectors

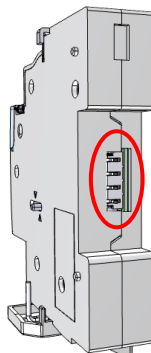

Assembling:

- . On the left side of BTicino modular Latching relays and contactors 1 and 2 modules width up to 25 A
- . No tools are required. Clipped by mean of plastic clamps on the associated device.
- . Assembling products with the associated device in non-working position
- . The mechanical pin of the EMS BT DIN module must fit into the housing on the left side of the associated device.

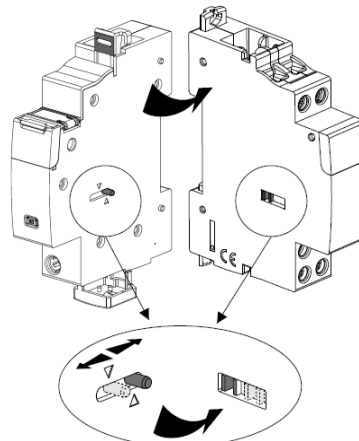

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS

4. PREPARATION –CONNECTION (continued)

List of allowed associations:

- . Latching relays, 1 or 2 DIN modules width, up to 25 A
- . Power contactors with handle BT DIN, 1 or 2 DIN modules width, up to 25 A
- . Power contactors without handle BT DIN, 1 or 2 DIN modules width, up to 25 A

Terminals:

- . Terminal depth: 8 mm.
- . Stripping length: 8 mm

Screw head:

- . Mixed, slotted and Pozidriv n°1 (UNI7596 type Z1).

Recommended tightening torque:

- . 1 Nm.


Recommended tools:

- . For the terminals: Pozidriv n°1 or flat screwdriver 4 mm.
- . For fixing: flat screwdriver 5.5 mm (6 mm maximum).
- . For configuration DIP switches: flat screwdriver 2 mm

Conductor type:

	Copper cable	
	Without ferrule	With ferrule
Rigid Cable	1 x 0,5 mm ² to 1,5 mm ² 2 x 1,5 mm ²	-
Flexible Cable	1 x 0,5 mm ² to 1,5 mm ² 2 x 1,5 mm ²	1 x 0,5 mm ² to 1,5 mm ² 2 x 1,5 mm ²

Wiring diagrams:

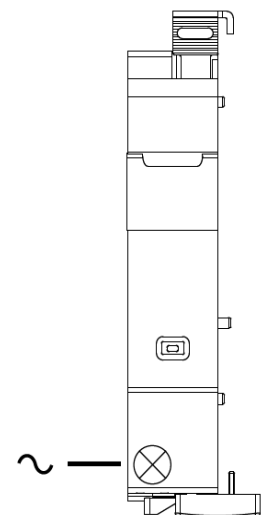


. The internal relay is configurable. Refer to § "Module Configuration"


4. PREPARATION –CONNECTION (continued)

Module configuration:

- . On the left side the EMS CX³ module is equipped with 4 DIP switches allowing configuration of:
 - type of associated device (latching relay or contactor)
 - type of contactor
- Dipswitches may be manipulated by a screwdriver

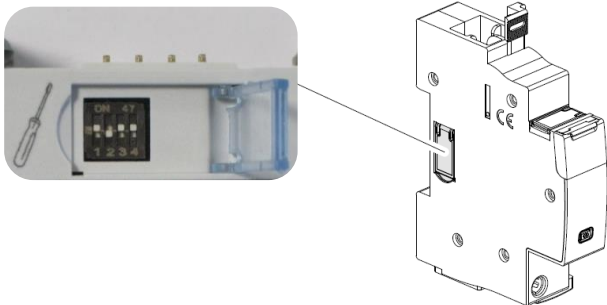

- . Default configuration (switch in 0000 position)

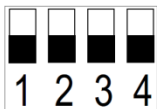

The module is delivered with the 4 DIP switches at the bottom.

- . Table of possible configurations:

	1	2	3	4

more explanation on next page]

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS

4. PREPARATION –CONNECTION (continued)

Module configuration (continued):

Note:


Dip switch 1		choice between: - contactor - latching relay
Dip switch 2		choice between: - device 2 modules width - device 1 module width
Dip switch 3		no function always in "0" position
Dip switch 4		choice between: - device with frontal handle - device without frontal handle

Connection with an associated device:

- . Association with Latching relay BT DIN, 1 DIN module width (e.g. cat. no FP1A1N230)
- . Lateral DIP-switches of the EMS BT DIN module must be locally configured as shown



. Wiring diagram:

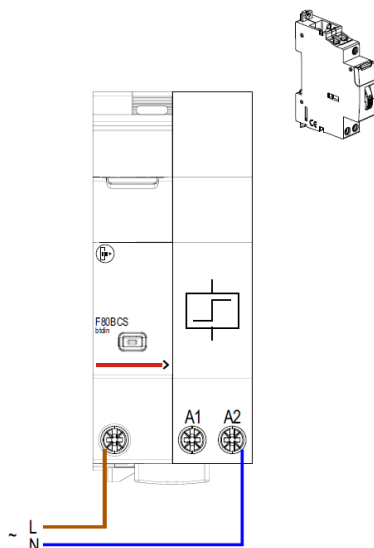


4. PREPARATION –CONNECTION (continued)

Connection with an associated device (continued):

- . Association with Latching relay BT DIN, 2 DIN modules width (e.g. cat. no FP2A4N230)
- . Lateral DIP-switches of the EMS BT DIN module must be locally configured as shown




. Wiring diagram:

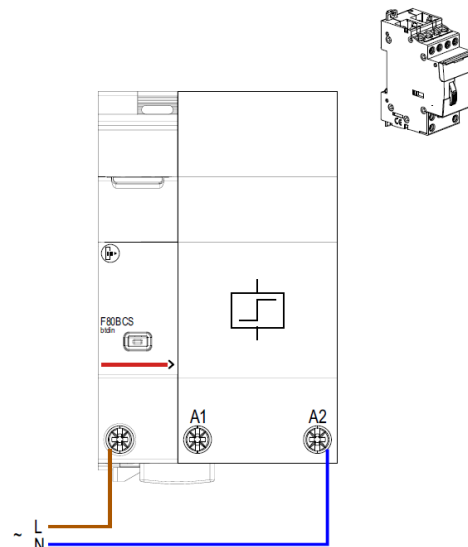

- . Association with Monostable relay BT DIN, 1 DIN module width with handle (e.g. cat. no FM1AC1N230M)
- . Lateral DIP-switches of the EMS BT DIN module must be locally configured as shown



. Wiring diagram:

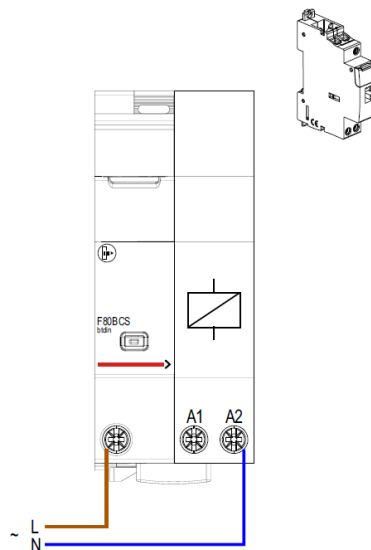

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS


4. PREPARATION –CONNECTION (continued)

Connection with an associated device (continued):

- . Association with Monostable relay BT DIN, 2 DIN modules width with handle (e.g. cat. no FM2A4N230M)
- . Lateral DIP-switches of the EMS BT DIN module must be locally configured as shown




. Wiring diagram:

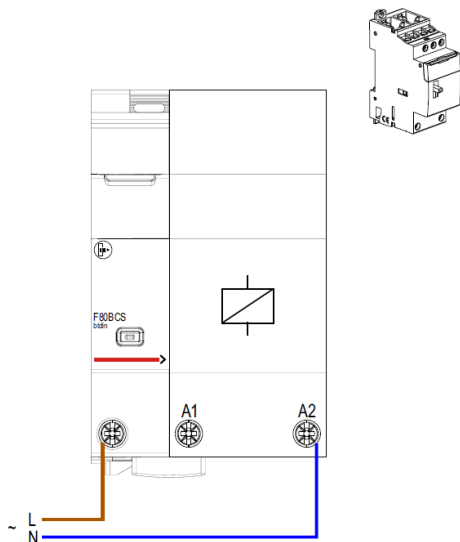

- . Association with Contactor BT DIN, 1 DIN module width without handle (e.g. cat. no FT1A2N230)
- . Lateral DIP-switches of the EMS BT DIN module must be locally configured as shown



. Wiring diagram:

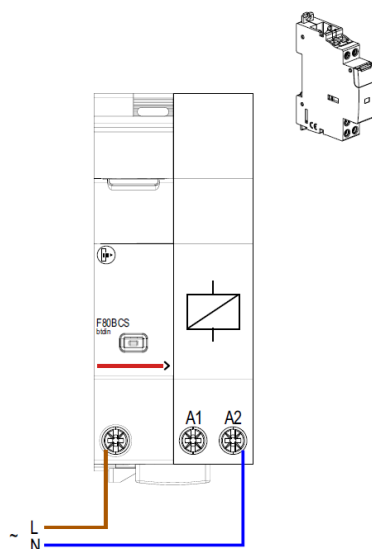


4. PREPARATION –CONNECTION (continued)

Connection with an associated device (continued):

- . Association with Contactor BT DIN, 2 DIN modules width with handle (e.g. cat. no FT2A4N230)
- . Lateral DIP-switches of the BT DIN module must be locally configured as shown




. Wiring diagram:

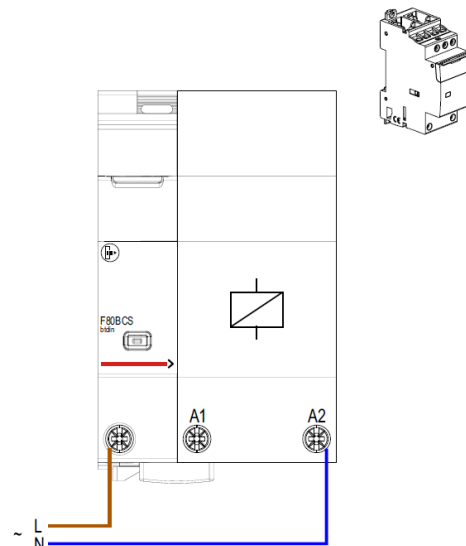

By-pass port:

- . Located on the protection cover of the EMS BT DIN module, used to multiply the command points for a latching relay

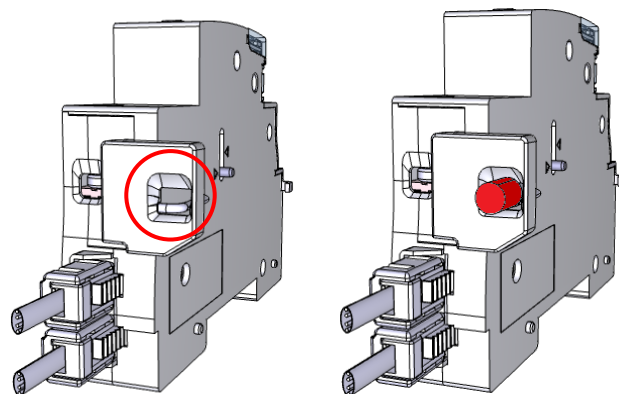

- . Tool required to break the pre-fracture: flat screwdriver 2,5 mm
- . The port accepts the passage of 1 x 1,5 mm² cable with or without ferrule
- . Cable stripping length: 10 mm

Note: lateral Dip switches of the EMS BT DIN module must be configured in function of the associated device as shown in the § "Connection with an associated device"

EMS BT DIN - State and control module for Latching relays and Contactors


Cat. No:
F80BCS

4. PREPARATION –CONNECTION (continued)


By-pass port (continued):

. Wiring diagrams:

Control of a Latching relay from 1 or more points over the EMS BT DIN module

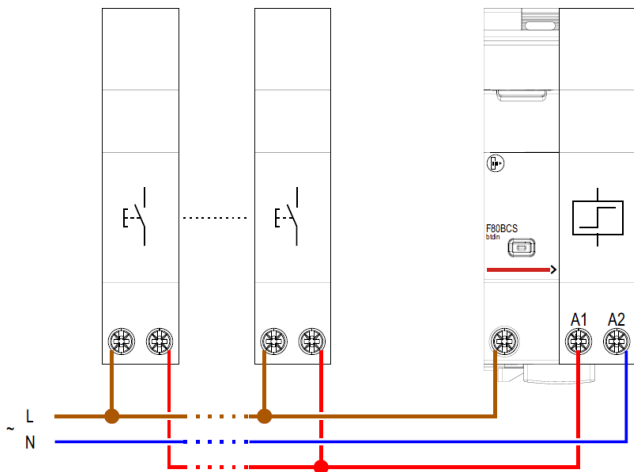

Control of a Contactor creating, with a Changeover switch - 2-way (e.g. cat. no F61N32C), a local/remote command selector

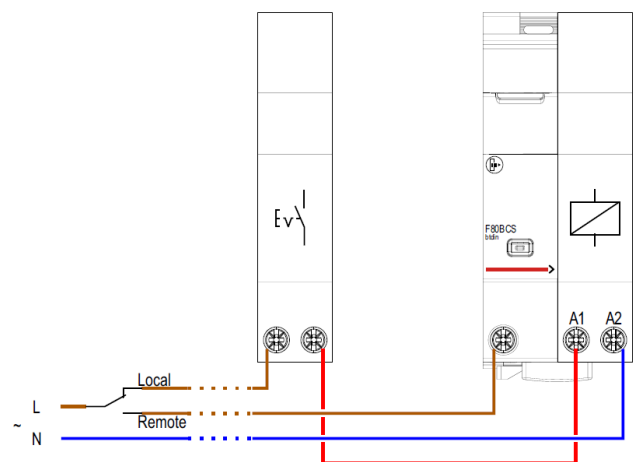

Note: for other allowed combinations: contact the BTicino technical service


4. PREPARATION –CONNECTION (continued)

Data connection (EMS BT DIN modules inter-connection):


. Via specific communication patch cords (cat. nos F80BC250/500/1000)



Allow data transmission between the different EMS BT DIN modules. This type of connection is recommended when there are few EMS BT DIN modules, distributed all over the enclosure.

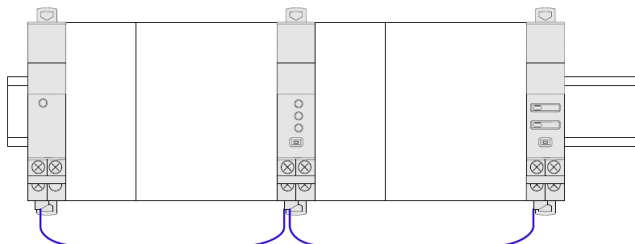

Implementing: with this configuration, the plastic protection cover of the backside communication ports on the EMS BT DIN module must be kept on.

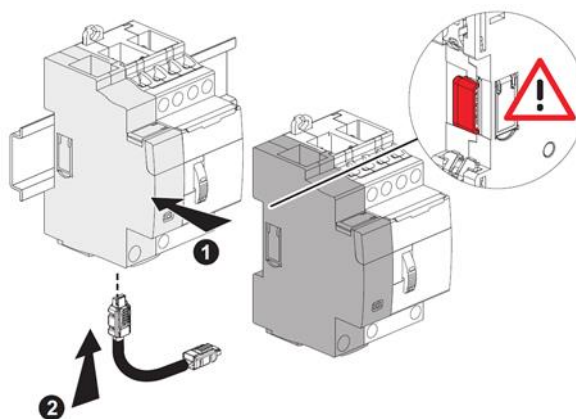

EMS BT DIN - State and control module for Latching relays and Contactors


Cat. No:
F80BCS

4. PREPARATION –CONNECTION (continued)

Data connection (EMS BT DIN modules inter-connection)


(continued):

- Via specific communication rails (cat. nos F80BR18/24/36).


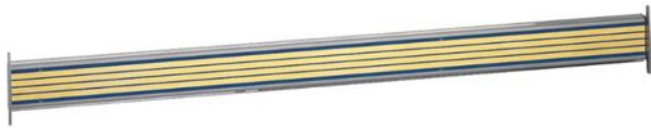


- Allow data transmission between the different EMS BT DIN modules.

This type of connection is recommended when there are several EMS BT DIN modules on the same DIN row.

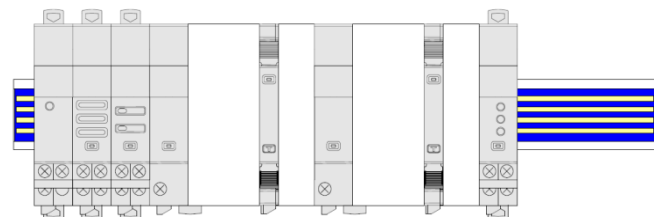

Implementing: with this configuration, the plastic protection cover of the backside communication ports on the EMS BT DIN module must be removed.

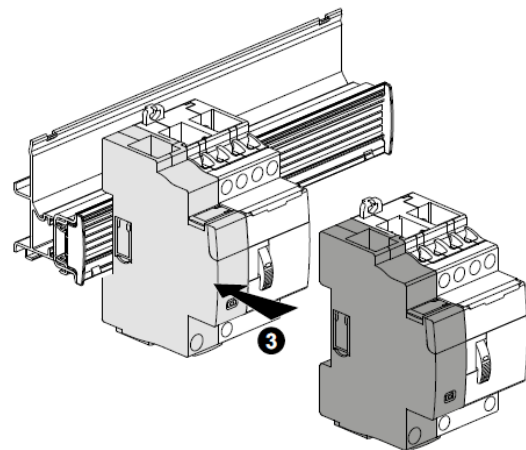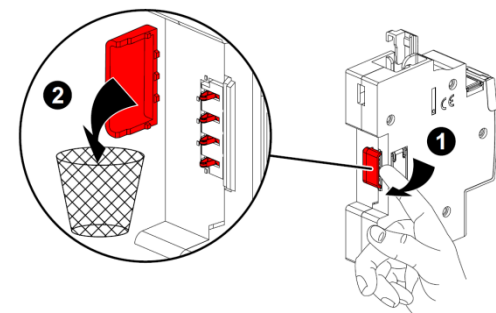

4. PREPARATION –CONNECTION (continued)


Data connection (EMS BT DIN modules inter-connection)

(continued):


- Via a mix between specific communication patch cords and communication rails in order to create a link between several rows

Two situations:

- Individually connected with communication rails.
The communication patch cord allows to connect two rows.

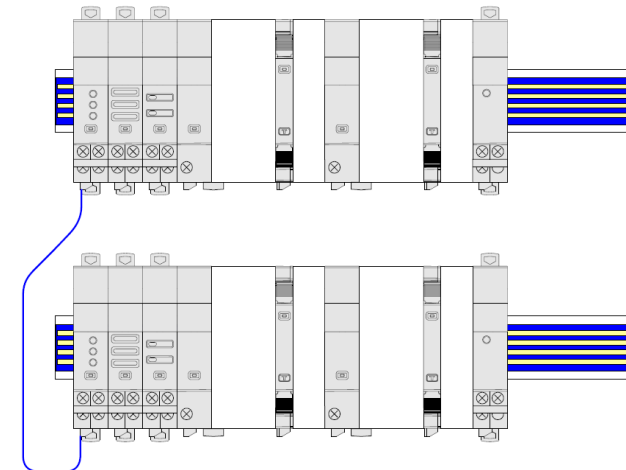


- Individually connected with communication patch cords & communication rail.
The communication patch cords allow to connect EMS BT DIN module on a row and to connect two rows.

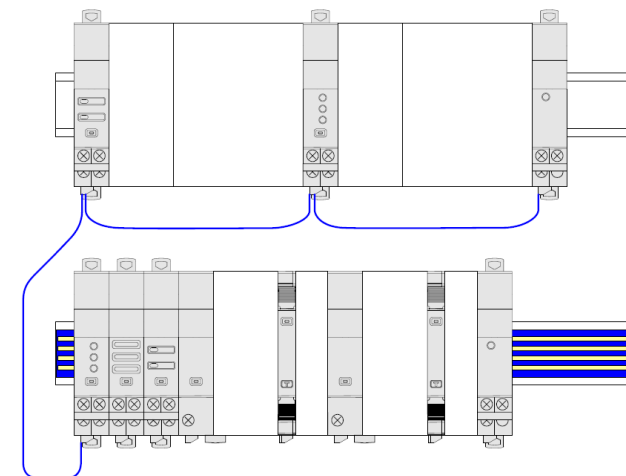

Labelling:

- Circuit identification by way of a label inserted in the label holder situated on the front of the product.

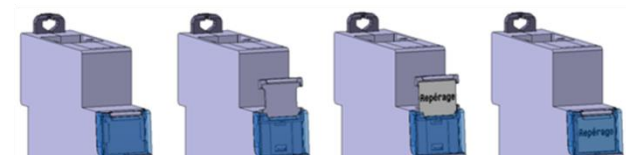


EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS

4. PREPARATION –CONNECTION *(continued)*

Position in a row:


. The product profile and the position of the terminals at the downstream allow the insertion of the prong-busbar by the upstream. In this way the position of the EMS BT DIN module in a row can be freely chosen

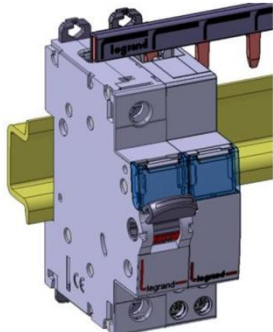


Module maintenance:

. A device may be replaced in the middle of a row supplied with prong-busbar without disconnecting the other devices.


1. Put the clamp
in the unlocking
position

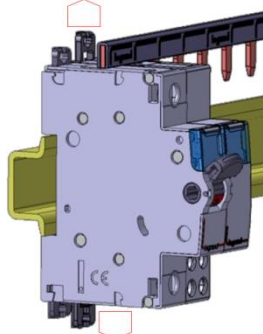

1. Put the clamp
in the unlocking
position

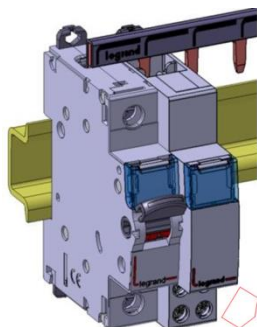

2. Pull the device
forward in order to
release it from the
rail

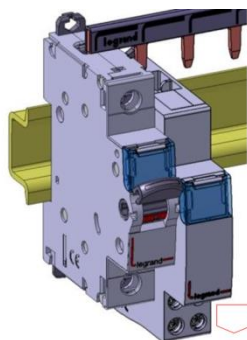


3. Pull the device
downward in order to
release it completely from
the prongs of the busbar

5. GENERAL CHARACTERISTICS

Front face marking:


. By permanent ink pad printing (red line) and laser marking

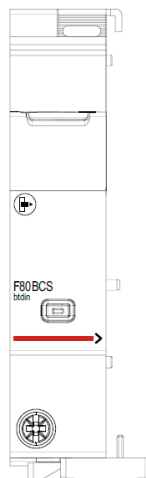


Lateral side marking:

. By laser.

left side: Standard and programming information

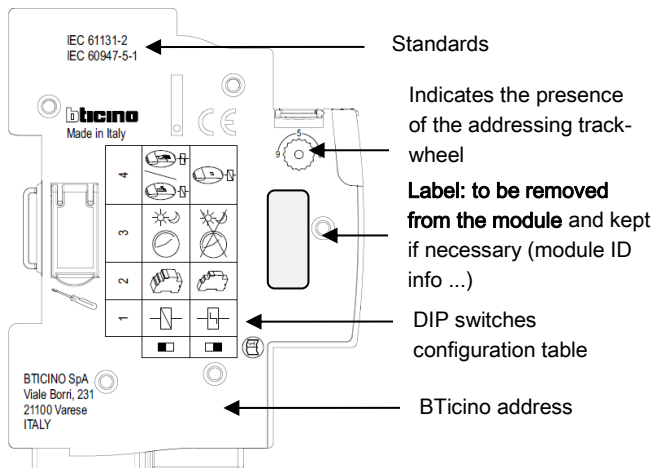


right side: cabling and traceability information

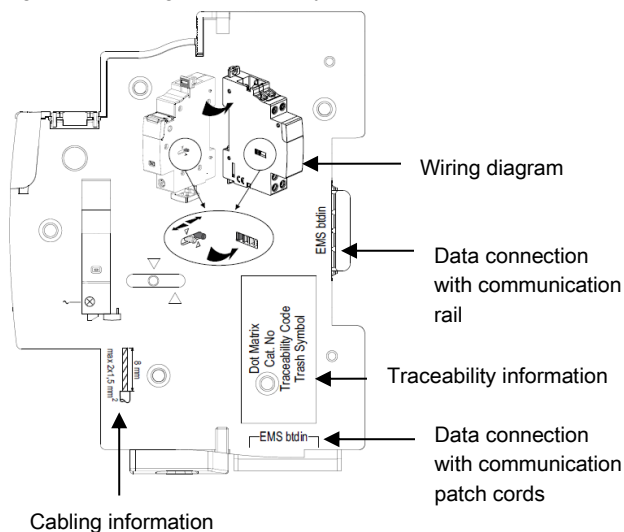

5. GENERAL CHARACTERISTICS *(continued)*




Multi-Functions button:

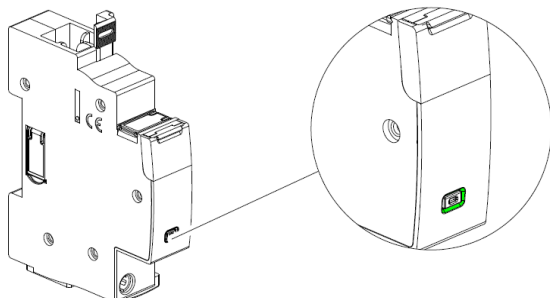. Front face button as several functions:



. Gives information about the operating state on the module

Possible states:

Led colour	State	Meaning
 red	Slow blinking	Error (e.g. addressing error)
	Fast blinking	No function
	Steady <i>(pressing the multifunction button longer than 10 sec.)</i>	Total reset [any firmware updates are preserved]
 green	Slow blinking	System process is running. Wait until the Led turns steady
	Fast blinking <i>(pressing the multifunction button for 5 sec.)</i>	put in "Stand-by" the EMS BT DIN module (no remote action and communication available)
	Steady	System OK, connection is running
 orange	Slow blinking	Creation of a link with "Link Functionality" procedure (see next §)
	Fast blinking	Device's firmware update in progress
	Steady	No function

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS


5. GENERAL CHARACTERISTICS *(continued)*

Link Functionality:

. This function allows you to link two EMS BT DIN modules to create automatic actions that, once programmed, can run independently without a connection to a manager is needed.

The basic rule is the link between an event (circuit breaker that trip, a threshold exceeded, etc.) and an action accordingly (signalling, opening of a circuit by motorized control or contactor, etc.).

Possible associations are:

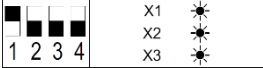Event generator	Action module		
	Command: F80BC	State + Command: F80BCS	State: F80BV
Measure: F80BM3M63, F80BMM63, F80BMT63, F80BMT125, F80BMT, F80BMR630, F80BMR1600, F80BMR3200, F80BMR6300	✓	✓	✓ Only with the module configured (locally or remotely) as shown: 
State: F80BCR, F80BVS	✓	✓	✗ It's enough to configure the module (locally or remotely) as "Slave"
State + Command: F80BCS	✓	✓	✗ It's enough to configure the module (locally or remotely) as "Slave"

Note:

- association can only be of type 1 to 1 (1 event and 1 action).
- modules already associated cannot be used for other associations.
- all the configuring procedure will be done with the Configuration Software (available online for free). *[For more details refer to the Installation Manual of EMS BT DIN Configuration software]*

EMS BT DIN - State and control module for Latching relays and Contactors

Cat. No:
F80BCS

5. GENERAL CHARACTERISTICS *(continued)*

Modules compatible with "Link Functionality" feature: firmware versions and production date:

Cat n°	Firmware version	Production date indicated on the label sticked on the side of the module
F80BM3M63	all firmware versions	any production date
F80BMM63	ver. $\geq 2.0.1$	date $\geq 18W25$
F80BMT63	ver. $\geq 2.0.1$	date $\geq 18W49$
F80BMT125	all firmware versions	any production date
F80BMT	ver. $\geq 2.0.1$	date $\geq 18W35$
F80BMR630	all firmware versions	any production date
F80BMR1600	all firmware versions	any production date
F80BMR3200	all firmware versions	any production date
F80BMR6300	all firmware versions	any production date
F80BCR	ver. $\geq 2.0.1$	date $\geq 18W47$
F80BVS	ver. $\geq 2.0.2$	date $\geq 18W35$
F80BCS	ver. $\geq 2.0.6$	date $\geq 18W45$
F80BC	ver. $\geq 3.0.2$	date $\geq 18W39$
F80BV	ver. $\geq 2.0.4$	date $\geq 18W38$
F80BIM1	ver. $\geq 3.0.8$	date $\geq 18W34$

Relay operating voltage:

. $U_e = 250\text{ V} \sim$

Relay rated current:

. $I_n = 6\text{ A} @ \cos\phi = 1$

Rated frequency:

. 50/60 Hz with standard tolerances.

Insulation voltage:

. $U_i = 400\text{ V}$

Impulse withstand voltage U_{imp} :

. EMS ports / Relay terminal:

wave 1,2 / 50 μs : 6 kV

alternate current 50 Hz / 1 min.: 3 kV

Pollution degree:

. 2 according to IEC/EN 60898-1.

Overvoltage category:

. III

Dielectric strength:

. 2500 V

Mechanical endurance:

. Min. 10×10^6 operations.

Utilization category:

. AC15: electromagnetic load, according to IEC 60947-5-1

5. GENERAL CHARACTERISTICS *(continued)*

Plastic material:

- . Self-extinguishing polycarbonate.
- . Heat and fire resistant according to IEC/EN 60695-2-12, glow-wire test at 960°C.
- . Classification UL 94 / IECEN 60695-11-10: V1

Ambient operating temperature:

- . Min. = -25°C. Max. = +70°C

Ambient storage temperature:

- . Min. = -40°C. Max. = +70°C

Protection Index:

- . Protection index of terminals against direct contacts: IP2X (IEC/EN 60529).
- . Protection index of terminals against solid and liquid bodies (wired device): IP 20 (IEC/EN 60529).
- . Protection index of the front face against solid and liquid bodies: IP 40 (IEC/EN 60529).
- . Class II, front panel with faceplate.

Average weight per device:

- . 0,065 kg.

Volume when packed:

- . 0,21 dm³.

Consumption:

- . Values at 12 VDC

Configuration	W	mA
Stand-by	0,234	19,5
Closed contact	0,375	31

6. SYSTEM ARCHITECTURES

The EMS BT DIN is a polyvalent system and, according to the needs of the customer, can be set up and/or used as "Stand-alone" or "Supervised" system. Based on this choice the configuration and addressing methods are different.

Four possible architectures are provided:

6.1 Stand-alone system

6.1.1 with local addressing (through the track wheel)

6.1.2 with remote addressing (through a computer)

6.2 Supervised (Computer Supervisory System)

6.2.1 with local addressing

6.2.2 with remote addressing

6.1 Stand-alone system

. **Stand-alone** = autonomous system. To be used by the end-user if it is not necessary to have a computer for the supervision outside the envelope. Everything can be managed on site.

6.1.1 Stand-alone system with local addressing (through the track wheel)

Local addressing advantages:

- No configuration software needed to set-up the installation
- **It is not necessary to use a computer to manage settings** (configurations, test, ...) and to use the system (visualize and be alerted, ...). Everything can be done through the Mini configuration module (local display, cat. no F80BV). [Refer to the technical sheet dedicated to this module for details].
- No communication Interfaces or gateways are required.
- Installation can be done without the intervention of a System Integrator


Programming procedure:

. For EMS BT DIN modules which need some: mandatory through the lateral DIP-switches of each EMS BT DIN module (see § "Module configuration")

Addressing procedure:

. For all EMS BT DIN modules: mandatory through the track wheel located on the top upper face of each EMS BT DIN modules

. Marked from 0 to 9 in order to locally define the Modbus address of the EMS BT DIN modules

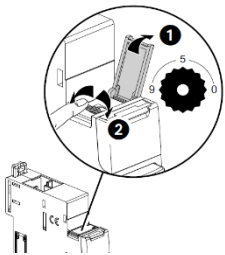


Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 12, Addresses of the module 12, 13, 14)

Consequences of the local addressing mode (through the track wheel):

- . Each device of the system must be addressed.
- . Addresses available: from 1 to 9
- . Address 0 not permitted
- . It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no F80BCR), a universal control module (cat. no F80BC), a measuring module, and so on. In this way on the EMS BT DIN mini configuration module (local display) the grouped function will be displayed as a unique "device" with all grouped functions. [Refer to the schemes hereunder]

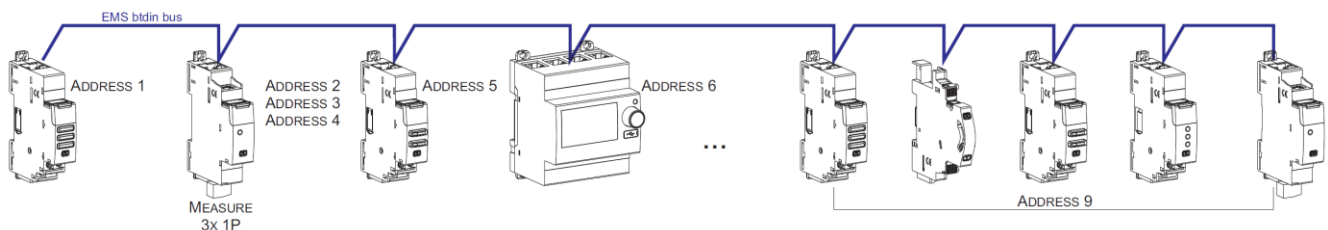

Note for the mini configuration module (local display)

- . It is possible to assign it the same address as another EMS BT DIN through the programming menu of the device
- . The mini configuration module can be placed everywhere in the EMS BT DIN bus

6. SYSTEM ARCHITECTURES

6.1 Stand-alone system (continued)

6.1.2 Stand-alone system with remote addressing (through a computer)



Remote addressing advantages:

- Whole configuration (addresses and functions) can be set up through the EMS Configuration software
- Configuration software available for free
- **Automatic detection of the EMS BT DIN modules** installed in the system (characteristics, functions, configuration...)
- **Increased settings possibilities: load shedding function**
- Increased addressing: **up to 30 Modbus addresses in a system**

Programming procedure:

. For EMS BT DIN modules which need some: mandatory through the lateral DIP-switches of each EMS BT DIN module or via the configuration software (see § "Module configuration")

Addressing procedure:

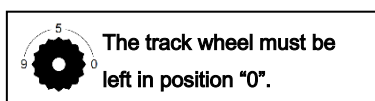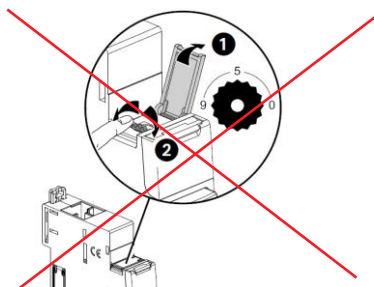



The track wheel must be left in position "0".

. It is not necessary to address the EMS BT DIN modules. **The track wheel must be left in default position "0".**

. All the addressing/configuring procedure will be done with the Configuration Software (available online for free)

. With remote addressing, the software does the automatic detection of modules installed in the system, but the supervision is not possible until the user assigns the remote address and all the characteristics to each module.

Note: it is mandatory to connect the computer to the mini configuration module with an USB-micro USB cable. [For more details, refer to the technical data sheet of the Mini configuration module EMS BT DIN]

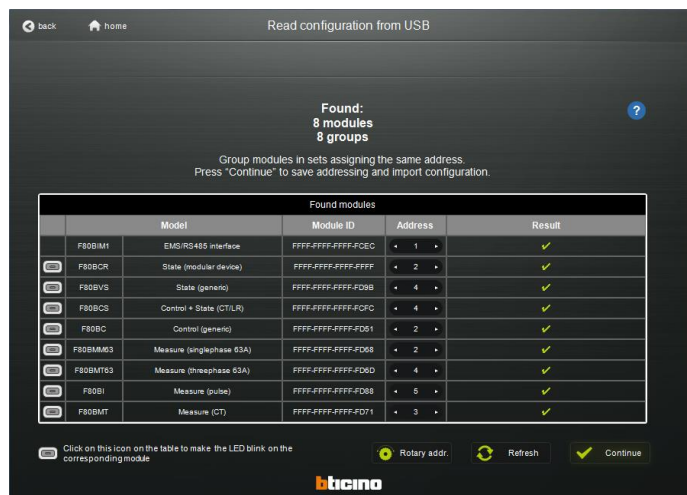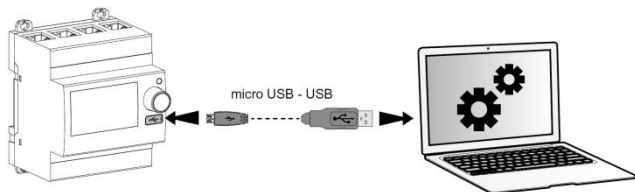

Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 2, Addresses of the module 2, 3, 4)

6. SYSTEM ARCHITECTURES


6.1 Stand-alone system (continued):

6.1.2 Stand-alone system with remote addressing (through a computer) (continued):

Consequences for the system architecture:

- for 1 mini configuration module (cat. no F80BV)
 - o up to **30 EMS BT DIN modules** (e.g. 30 devices grouped per functions with addresses from 1 to 30)

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no F80BCR), a universal control module (cat. no F80BC), a measuring module, and so on. In this way on the EMS BT DIN display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. [Refer to the schemes here under]

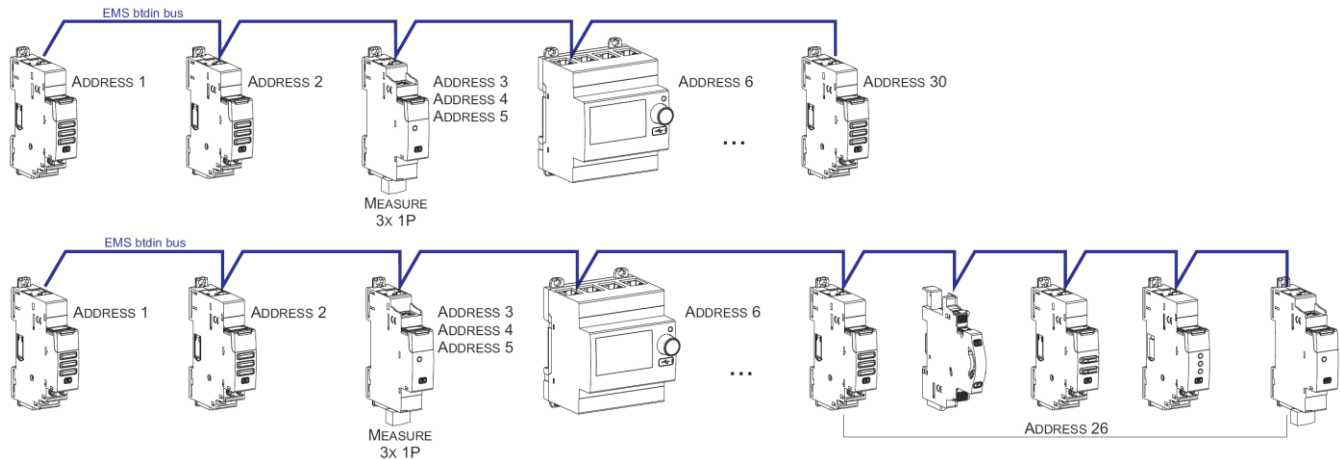

Note for the mini configuration module (local display)

- . It is possible to assign it the same address as another EMS BT DIN
- . The mini configuration module can be placed everywhere in the EMS BT DIN bus

6.2 Supervised system (Computer Supervisory System)

. **Supervised system** = System to be used through a Computer Supervisory System to remotely read data from the EMS BT DIN devices and/or do operations on these devices (e.g. commands of a motor driven or contactor ...).

6.2.1 Supervised system-with local addressing (through the track wheel)

Local addressing advantages:

- No configuration software needed to set-up the installation
- Installation can be done without the intervention of a System Integrator

Programming procedure:

. For EMS BT DIN modules which need some: mandatory through the lateral DIP-switches of each EMS BT DIN module (see § "Module configuration")

Addressing procedure:


. For all EMS BT DIN modules: mandatory through the track wheel located on the top upper face of each EMS BT DIN modules

. Marked from 0 to 9 in order to locally define the Modbus address to EMS BT DIN modules

In this system the Modbus address of an EMS BT DIN module device or group of modules (several functions) is obtained considering the address of the interface Modbus/EMS BT DIN Interface as tenth and the address of a device or group of function as unit (e.g. Interface address 1 = 10 → address of module n°5 = Modbus address 15)

Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 12, Addresses of the module 12, 13, 14)

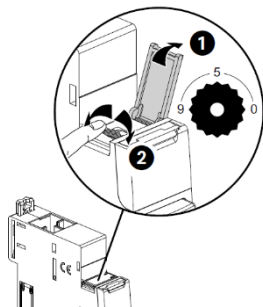

6. SYSTEM ARCHITECTURES *(continued)*

6.2 Supervised system (Computer Supervisory System) *(continued)*


6.2.1 Supervised system-with local addressing (through the track wheel) *(continued)*

Consequences of the local addressing mode (through the track wheel):

- . Each device of the system must be addressed.
- . Addresses available: from 1 to 9
- . Address 0 not permitted

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no F80BCR), a universal control module (cat. no F80BC), a measuring module, and so on. In this way on the EMS BT DIN display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the scheme hereunder]*

Note: In this configuration the Modbus address of an EMS BT DIN module device or group of modules (several functions) is obtained considering the address of the interface Modbus/EMS BT DIN Interface as tenth and the address of a device or group of function as unit (e.g. Interface address 1 = 10 and device address = 5 → Modbus address = 15)

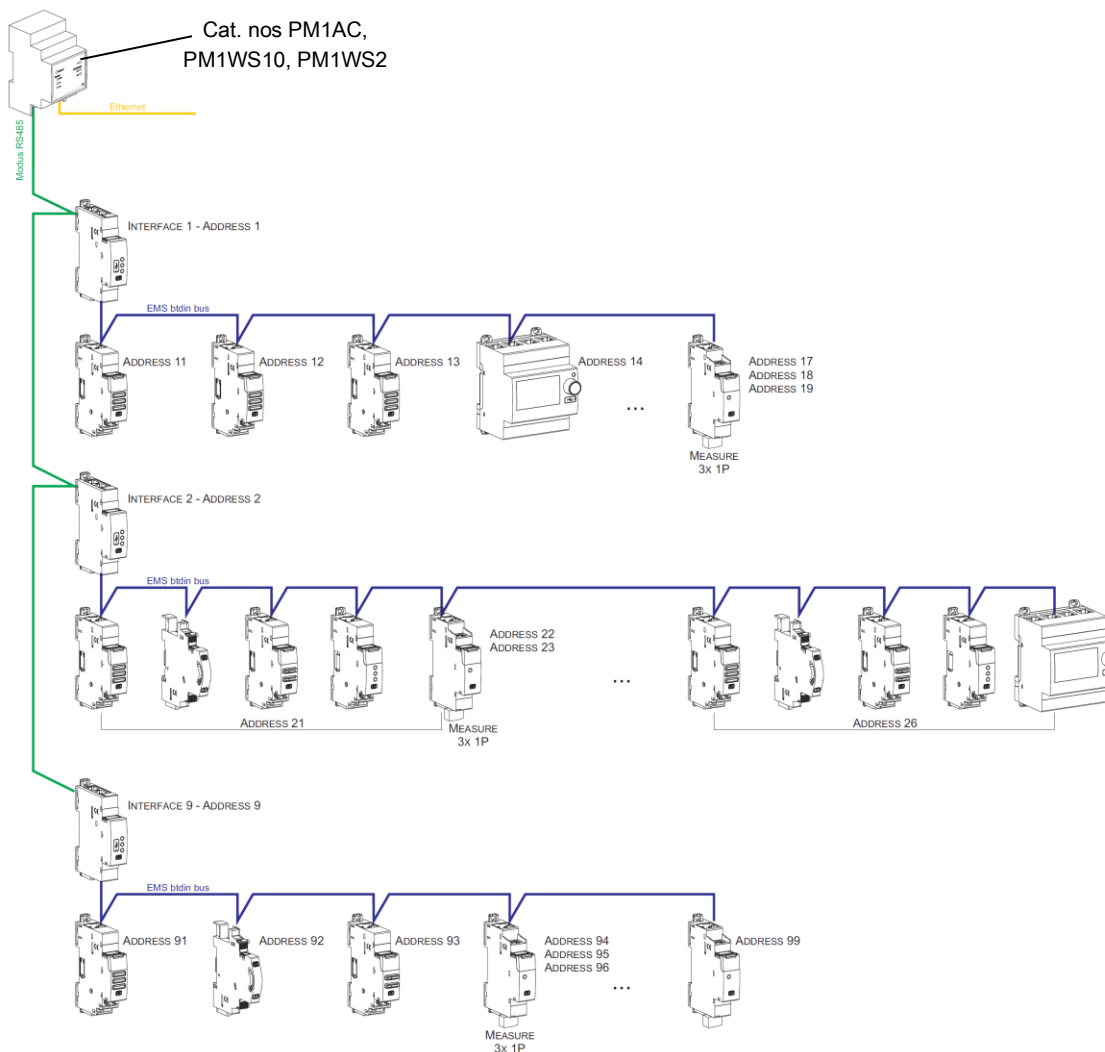

Consequences for the system architecture:

- for 1 IP/Modbus gateway (cat. no PM1AC):
 - o up to **81 Modbus address**
 - o mandatory limit of max. **9 Modbus/EMS BT DIN interfaces** or max. **1000 m of Modbus cable** (cable Belden 9842, Belden 3106A or equivalent) or max. **50 m of Category 6 cable** (FTP or UTP).
- for 1 Modbus/EMS BT DIN Interface (cat. no F80BIM1):
 - o up to **30 EMS BT DIN modules** (ex. 30 devices grouped per functions with addresses from 1 to 9)

Note: with local addressing, the Modbus/EMS BT DIN interface, does the automatic detection of modules (characteristics, functions, configuration...)

6. SYSTEM ARCHITECTURES *(continued)*

6.2 Supervised system (Computer Supervisory System) *(continued)*

6.2.2 Supervised system-with remote addressing (through a computer)


Remote addressing advantages:

- Whole of configuration (addresses and functions) can be done a remotely through the EMS Configuration software
- Configuration software available for free
- **Automatic detection of the EMS BT DIN modules** installed in the system (characteristics, functions, configuration...)
- **Increased settings possibilities: load shedding function**
- Increased addressing: **up to 32 Modbus/EMS BT DIN interfaces**
- Increased addressing: **up to 247 Modbus addresses in a system**

Programming procedure:

. For EMS BT DIN modules which need some: mandatory through the lateral DIP-switches of each EMS BT DIN module or via the configuration software (see § "Module configuration")

Addressing procedure:

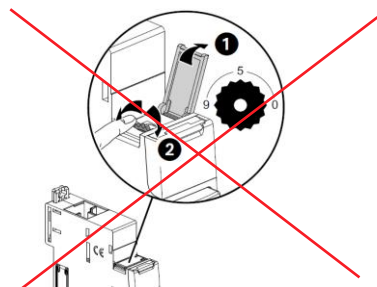



The track wheel must be left in position "0".

. It is not necessary to address the EMS BT DIN modules. **The track wheel must be left in default position "0".**

. All the addressing/configuring procedure will be done with the Configuration Software (available online for free)

. With remote addressing, the software does the automatic detection of modules installed in the system, but the supervision is not possible until the user assigns the remote address and all the characteristics to each module.

Note: it is mandatory to connect the computer to the different Modbus/EMS BT DIN interface with an USB-micro USB cable (one interface at a time). [For more details, refer to the technical data sheet of the Modbus/EMS BT DIN interface]

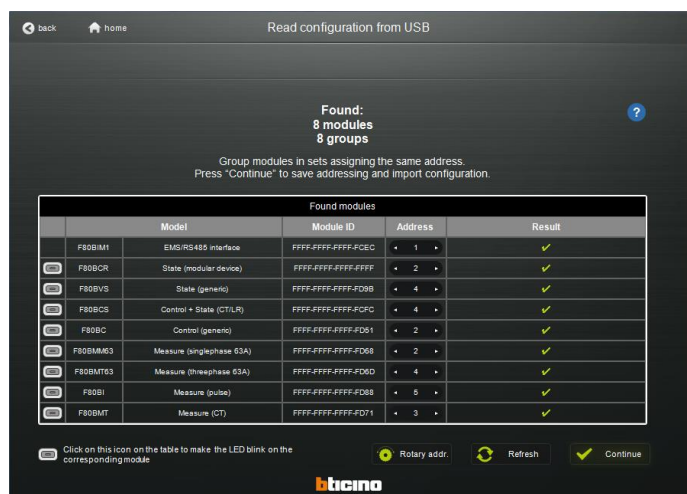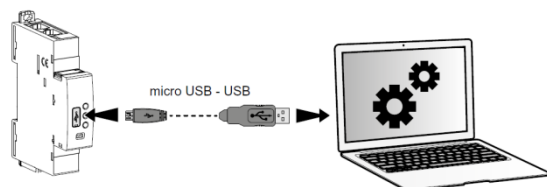


Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 2, Addresses of the module 2, 3, 4)

6. SYSTEM ARCHITECTURES *(continued)*

6.2 Supervised system (Computer Supervisory System) *(continued)*

6.2.2 Supervised system-with remote addressing (through a computer) *(continued)*

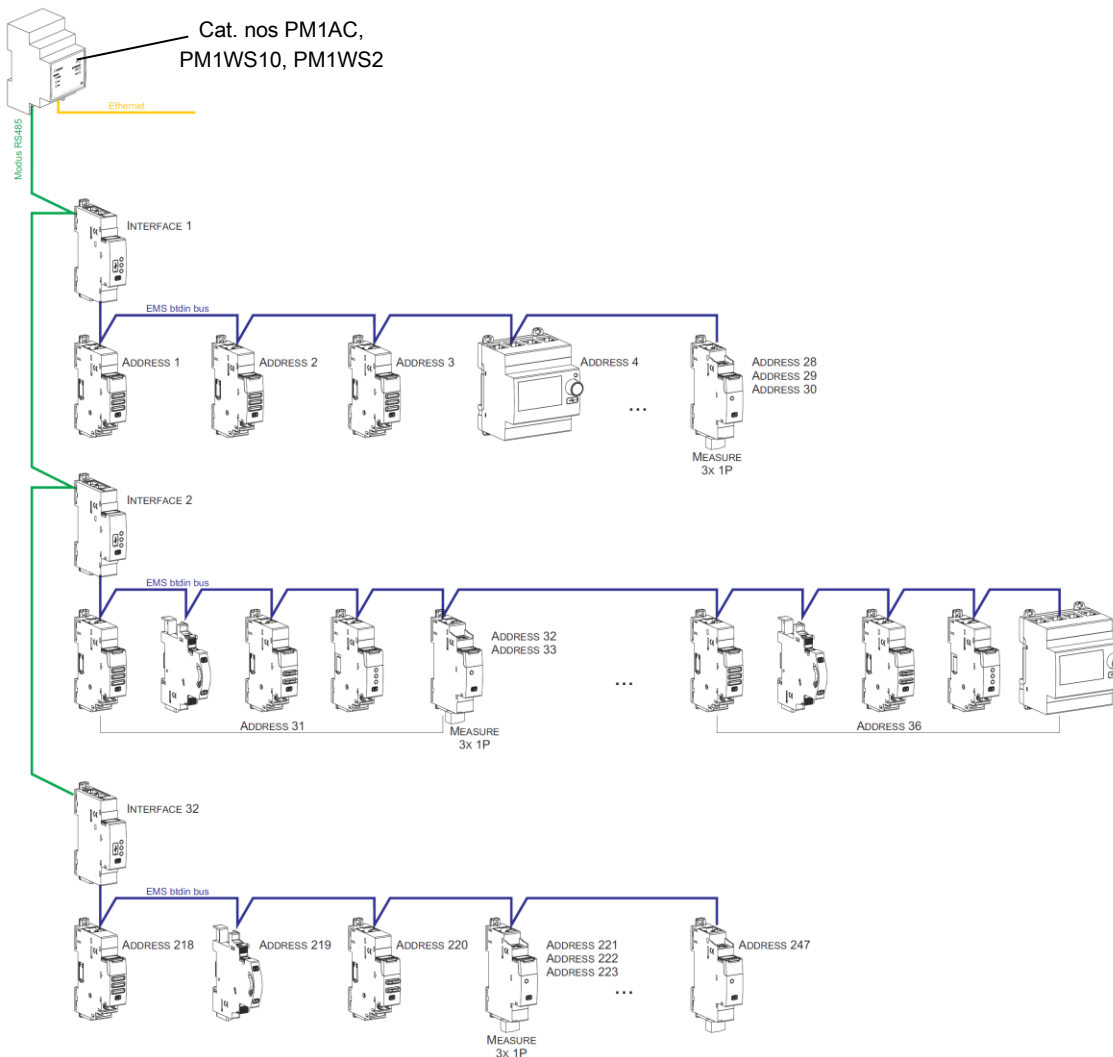

Consequences for the system architecture:

- for 1 IP/Modbus gateway (cat. no PM1AC):
 - o up to **247 Modbus address**
 - o Because of Modbus: mandatory limit of max. **32 Modbus/EMS BT DIN interfaces** or max. **1000 m of Modbus cable** (cable Belden 9842, Belden 3106A or equivalent) or max. **50 m of Category 6 cable** (FTP or UTP).
- for 1 Modbus/EMS BT DIN Interface (cat. no F80BIM1):
 - o up to **30 EMS BT DIN modules** (e.g. 30 devices grouped per functions with addresses from 1 to 30)

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no F80BCR), a universal control module (cat. no F80BC), a measuring module, and so on. In this way on the EMS BT DIN display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the scheme up here]*

7. COMPLIANCE AND APPROVALS

Compliance to standards:

- . Compliance with Directive on electromagnetic compatibility (EMC) n° 2014/30/EU
- . Compliance with low voltage directive n° 2014/35/EU.
- . Electromagnetic Compatibility:
 - IEC/EN 61131-2
 - IEC/EN 60947-5-1

Environment respect - Compliance with EU directives:

- . Compliance with Directive 2011/65/EU as amended by Directive 2015/863 (RoHS 2) on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- . Compliance with REACH regulation (1907/2006): at the date of the publication of this document no element of the SVHC substance list (updated on 27/06/2018) is present in these products.
- . WEEE directive (2012/19/EU): the sale of this product is subject to a contribution to eco-organisations in each country responsible for managing end-of-life products in the field of application of the European Waste Electronic and Electrical Equipment Directive.

Plastic materials:

- . Halogens-free plastic materials.
- . Marking of parts according to ISO 11469 and ISO 1043.

Packaging:

- . Design and manufacture of packaging compliant to decree 98-638 of the 20/07/98 and also to directive 94/62/CE.

Environmental profile:

- . PEP document available