

**Multi-axis control with
a fastest servo cycle time of 25 μs/5
axes
enables precision machining**



CK□M-CPU1□1


Features

- Up to 32 axes can be controlled by analog commands using eight CK3W-AX□□□□□□ Axial Interface Units and a CK5M expansion rack
- The CK5M-CPU141 controls up to 32 EtherCAT servo drives
- G-Code/ANSI C/original programming language
- EtherCAT slaves including vision and I/O can be connected
- Compact design (1/3 the size of conventional models*1)
- The EtherCAT network reduces wiring and machine size
- The OPC UA and MQTT communication are supported. (Firmware revision 2.8.1 or later.)

*1. Compared with UMAC from OMRON's Delta Tau Data Systems, Inc.

System Configurations

Basic System Configuration

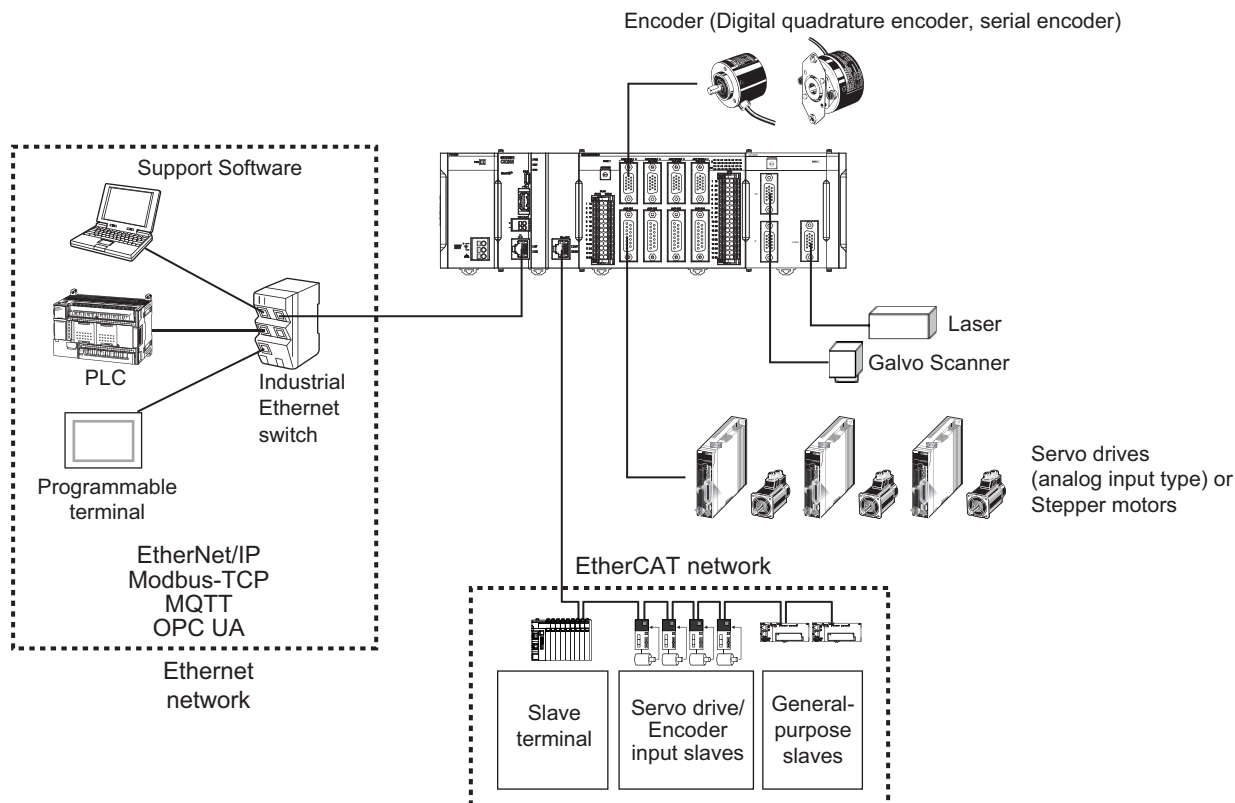

*1. You will need this unit when you use the Galvo Scanner.

CK□W Unit Configuration (CPU Rack/Expansion Rack)

The following shows the configuration of CK□W Units.

CPU Rack

The CK3W Unit configuration in the CPU Rack consists of a Power Supply Unit, CPU Unit, CK3W-AX Unit, CK3W-MD Unit, CK3W-AD Unit, CK3W-ECS Unit, CK3W-GC Unit and End Cover.

Up to four CK3W Units (or up to two CK3W-AX Units) can be connected to the CPU Unit.

Expansion Rack

Up to one Expansion Rack can be added for the CK3M CPU Unit, and up to three Expansion Racks can be added for the CK5M CPU Unit.


To connect an Expansion Rack, use the Expansion Master Unit (CK3W-EXM01) and Expansion Slave Unit (CK5W-EXS01, CK3W-EXS02).

Up to four CK3W Units (or up to two CK3W-AX Units) can be installed to the Expansion Rack.


Connect the Expansion Master Unit (CK3W-EXM01) to the immediate right side of the CPU Unit. Connect the Expansion Slave Unit (CK5W-EXS01, CK3W-EXS02) to the immediate right side of the Power Supply Unit.

Unless the Expansion Master Unit (CK3W-EXM01) is connected adjacent to the right side of the CPU Unit, the Sys.Status register CK3WConfigErr becomes "5".

Use the CK3W-EXS02 for the Expansion Slave Unit farthest from the CPU Rack, and the CK5WEXS01 for the Expansion Slave Unit located in the middle. The CK5W-EXS01 can only be used with the CK5M CPU Unit. It can not be used with the CK3M CPU Unit.

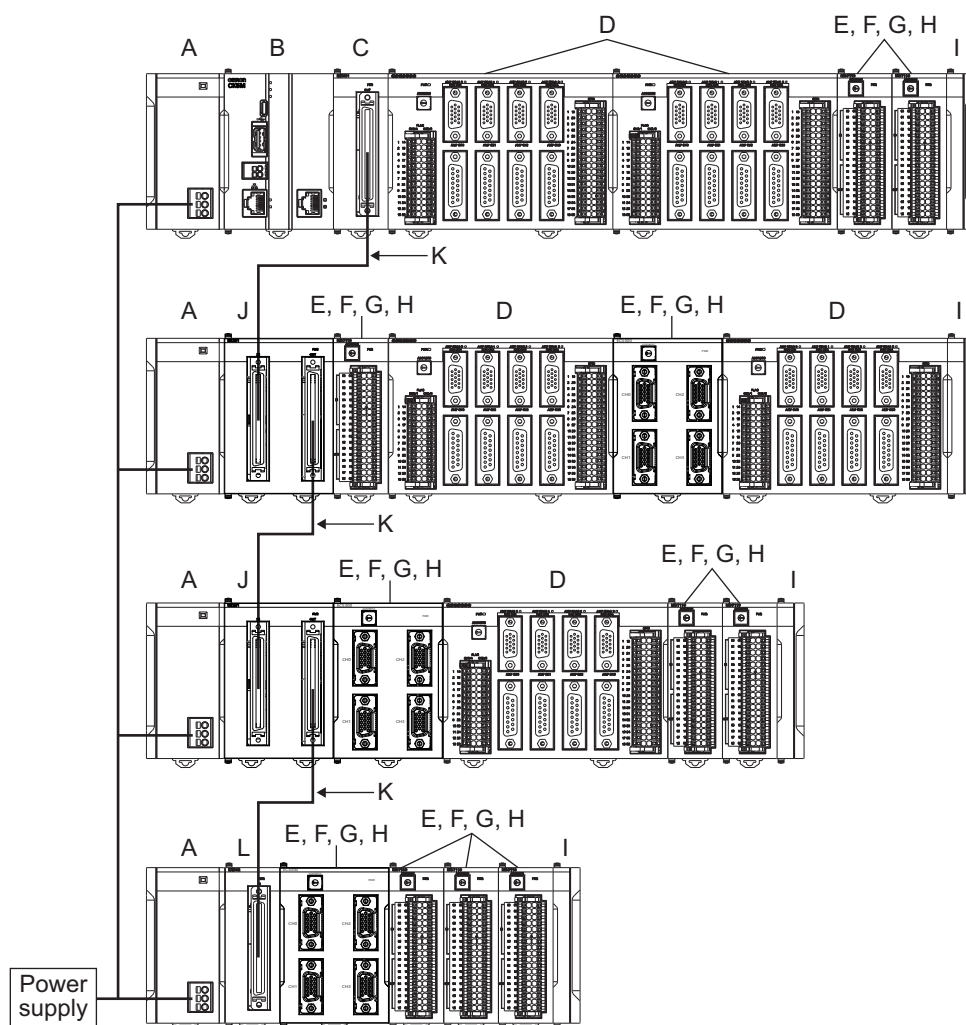For CK5M CPU Unit


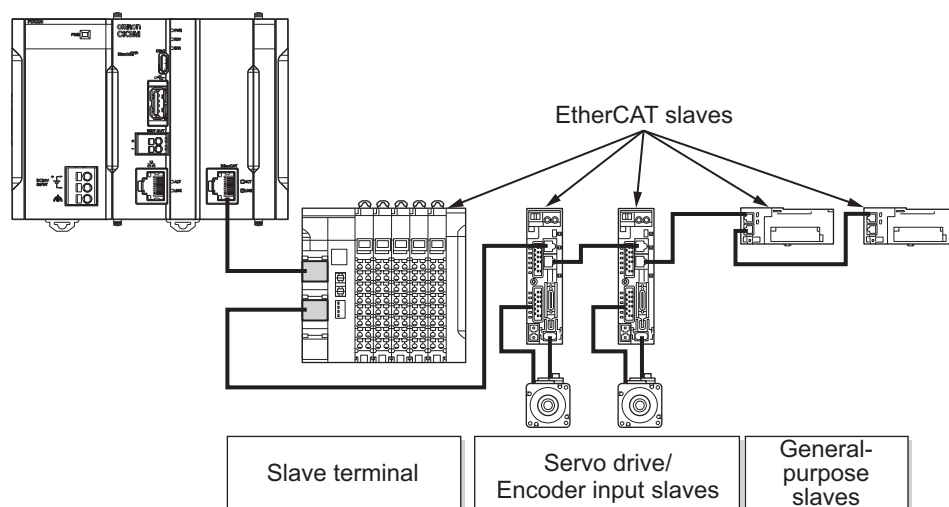
| Letter | Configuration | Remarks |
|--------|----------------------|--|
| A | Power Supply Unit | Input the 24 V power source. Always wire the CPU Rack and Expansion Rack to the same power supply. |
| B | CK5M-series CPU Unit | This is the Unit at the center of the motion control, which executes the motion program. |
| C | CK3W-EXM01 | Expansion Master Unit. Connect this Unit adjacent to the right side of the CPU Unit in the Expansion Rack. |
| D | CK3W-AX Unit | Axis Interface Unit. For axis control, connect this to a Servo Drive and encoder. |
| E | CK3W-MD Unit | Digital I/O Unit. You can add 16 digital inputs and 16 digital outputs. |
| F | CK3W-AD Unit | Analog Input Unit. You can add 4 or 8 voltage inputs. |
| G | CK3W-ECS Unit | Encoder Input Unit. You can connect four channels of the serial encoder. |
| H | CK3W-GC Unit | Laser Interface Unit. You can connect the Galvo Scanner compatible with the interface of XY2-100 or SL2-100. |
| I | End Cover | Must be connected to the right end of the CPU Rack and Expansion Rack. The CPU Unit and the Expansion Slave Unit are each provided with one End Cover. |
| J | CK5W-EXS01 | Expansion Slave Unit. Use this in the Expansion Rack located in the middle. Connect this Unit to the immediate right side of the Power Supply Unit. This unit can only be used with the CK5M CPU Unit. It can not be used with the CK3M CPU Unit. |
| K | Expansion cable | Use this cable to connect the Expansion Master Unit and Expansion Slave Unit. The cable length is 30 cm. Be sure to use the CK3W-CAX03A (30 cm) cable. |
| L | CK3W-EXS02 | Expansion Slave Unit. Use this for the Expansion Rack farthest from the CPU Rack. Connect this Unit to the immediate right side of the Power Supply Unit. |

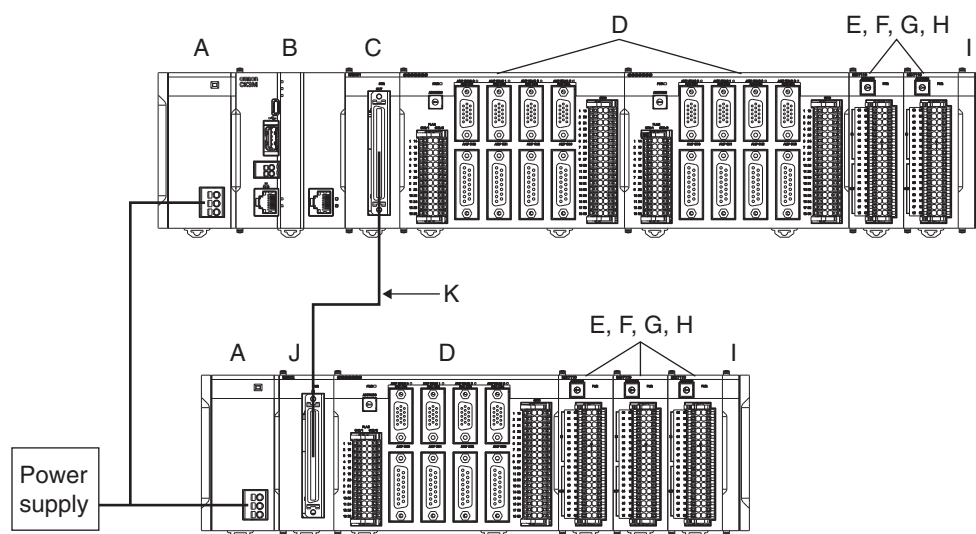For CK3M CPU Unit


| Letter | Configuration | Remarks |
|--------|----------------------|---|
| A | Power Supply Unit | Input the 24 V power source. Always wire the CPU Rack and Expansion Rack to the same power supply. |
| B | CK3M-series CPU Unit | This is the Unit at the center of the motion control, which executes the motion program. |
| C | CK3W-EXM01 | Expansion Master Unit. Connect this Unit adjacent to the right side of the CPU Unit in the Expansion Rack. |
| D | CK3W-AX Unit | Axis Interface Unit. For axis control, connect this to a Servo Drive and encoder. |
| E | CK3W-MD Unit | Digital I/O Unit. You can add 16 digital inputs and 16 digital outputs. |
| F | CK3W-AD Unit | Analog Input Unit. You can add 4 or 8 voltage inputs. |
| G | CK3W-ECS Unit | Encoder Input Unit. You can connect four channels of the serial encoder. |
| H | CK3W-GC Unit | Laser Interface Unit. You can connect the Galvo Scanner compatible with the interface of XY2-100 or SL2-100. |
| I | End Cover | Must be connected to the right end of the CPU Rack and Expansion Rack. The CPU Unit and the Expansion Slave Unit are each provided with one End Cover. |
| J | CK3W-EXS02 | Expansion Slave Unit. Use this in the Expansion Rack. Connect this Unit adjacent to the right side of the Power Supply Unit. |
| K | Expansion cable | Use this cable to connect the Expansion Master Unit and the Expansion Slave Unit. The cable length is 30 cm. Be sure to use the CK3W-CAX003A (30 cm) cable. |

EtherCAT Network Configuration

The EtherCAT network configuration consists of a Power Supply Unit, CPU Unit, End Cover, and EtherCAT slaves. Use the built-in EtherCAT port on the CK□M-series CPU Unit to connect EtherCAT slaves.




EtherCAT is synchronized with the servo cycle of the CK□M-series CPU Unit. This enables acquisition of the I/O data of slave terminals that are synchronized with the servo cycle.

Refer to the *CK3M/CK5M-series Programmable Multi-Axis Controller User's Manual Hardware* (Cat.No.O036) for information on using the NX-series EtherCAT Coupler Unit.

Network Configuration



Connecting to the Power PMAC IDE

Connect the CK□M-series CPU Unit and the Power PMAC IDE through Ethernet.

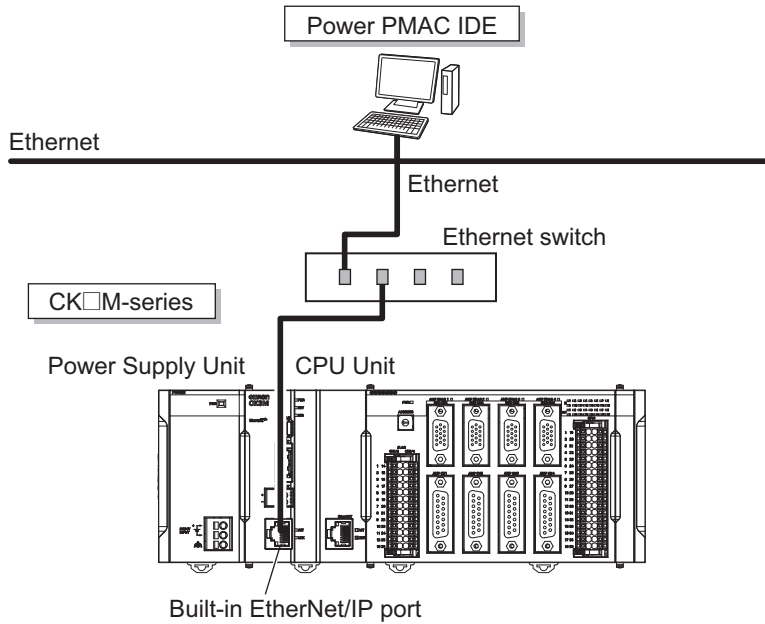

Ethernet Network Configuration

The Ethernet communications port on the CK□M-series CPU Unit supports the EtherNet/IP, Modbus-TCP, OPC UA and MQTT protocols. It can be connected to devices such as PLCs and programmable terminals that support the EtherNet/IP protocol or the Modbus-TCP protocol. EtherNet/IP communications support targets only, so originators are required for the communications. If the originator in use is an NJ/NX-series CPU Unit, refer to the *NJ/NX-series CPU Unit Built-in EtherNet/IP Port User's Manual* (Cat. No. W506) for details. CPU Unit connection settings are required for EtherNet/IP communications. Refer to the *Power PMAC IDE User Manual* (Cat. No. O016) for details. OPC UA and MQTT can be connected to the Ethernet communication port of the CPU Unit, and variables in the CPU Unit can be read and written using OPC UA communication or MQTT communication.

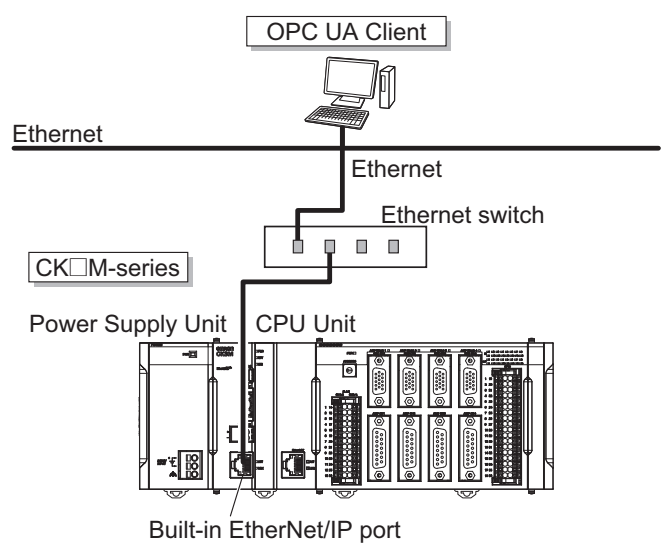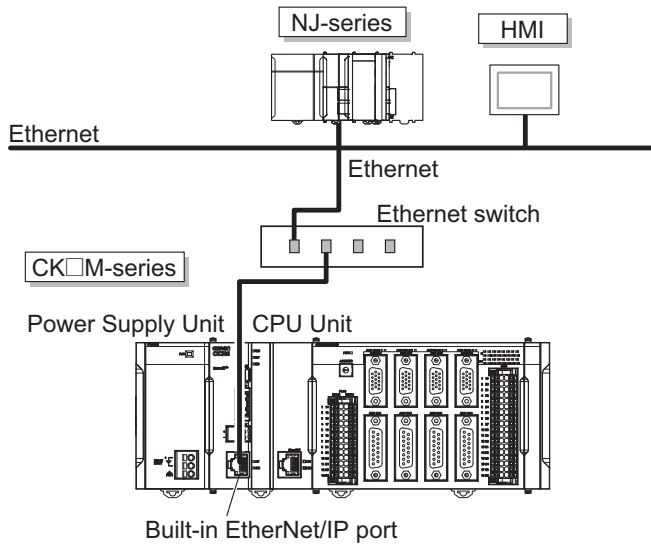

Ordering Information

CK3M/CK5M CPU Unit

The models and outline of specifications are given below.

| Product name | Memory capacity | Port | Max. no. of controlled axes at EtherCAT port | Model |
|---------------------|---|--|--|-------------|
| CK3M CPU Unit *1 | RAM: 1 GB Built-In flash memory: 2 GB *2 CPU: Dual core 1 GHz | EtherNet/IP: 1 port EtherCAT: None | - | CK3M-CPU101 |
| | | EtherNet/IP: 1 port EtherCAT: 1 port (DC sync) | 4 | CK3M-CPU111 |
| | | EtherNet/IP: 1 port EtherCAT: 1 port (DC sync) | 8 | CK3M-CPU121 |
| CK5M CPU Unit *1 | RAM: 2 GB Built-In flash memory: 4 GB CPU: Quad core 1.6 GHz | EtherNet/IP: 1 port (1 Gbps) EtherCAT: 1 port (DC sync) | 16 | CK5M-CPU131 |
| | | EtherNet/IP: 1 port (1 Gbps) EtherCAT: 1 port (DC sync) | 32 | CK5M-CPU141 |

*1. One CK3W-TER11 End Cover is provided with the CK□M-CPU1□1 CPU Unit.

*2. The flash memory of the CPU unit firmware revision 2.7 or earlier is 1 GB.

Support Software

The following table shows the Support Software used to configure, monitor, program, and debug the Motion Controller.

| Configuration software | | Application | How to Procure |
|------------------------|-----------------------|--|-------------------------------|
| Power PMAC IDE *1 | | This computer software is used to configure the Motion Controller, create user programs, and debug the programs. | This is free software. *2 |
| Power PMAC-NC | Power PMAC-NC SDK | This computer software is used to control working machines and other CNC machines with the Motion Controller. Use this software to customize HMI screens. The product contains extension source codes for customization. | This is non-free software. *2 |
| | Power PMAC-NC Runtime | This computer software is used to control working machines and other CNC machines with the Motion Controller. Use this software when you do not customize HMI screens. | This is non-free software. *2 |

*1. Refer to Version Information->Page 15 for the supported Power PMAC IDE versions.

*2. Contact your OMRON representative for information on how to procure.

Power Supply Units

The models and outline of specifications are given below.

| Product name | Specifications | Model |
|-------------------|---|------------|
| Power Supply Unit | Rated output voltage: 5 VDC/24 VDC Maximum output power: 5 VDC 23 W, 24 VDC 55 W | CK3W-PD048 |

Axial Interface Units

The models and outline of specifications are given below.

| Product name | Amplifier interface | Encoder interface | Output type | Model |
|---------------------|--------------------------|---|-------------|--------------|
| Axis Interface Unit | DirectPWM output | Digital quadrature encoder/serial encoder | NPN type | CK3W-AX1313N |
| | DA output (Filtered PWM) | | | CK3W-AX1414N |
| | DA output (True DAC) | | | CK3W-AX1515N |
| | DirectPWM output | Sinusoidal encoder/serial encoder | | CK3W-AX2323N |
| | DirectPWM output | Digital quadrature encoder/serial encoder | PNP type | CK3W-AX1313P |
| | DA output (Filtered PWM) | | | CK3W-AX1414P |
| | DA output (True DAC) | | | CK3W-AX1515P |
| | DirectPWM output | Sinusoidal encoder/serial encoder | | CK3W-AX2323P |

Digital I/O Units

| Product name | Number of inputs | Number of outputs | I/O type | Model |
|------------------|------------------|-------------------|----------|-------------|
| Digital I/O Unit | 16 | 16 | NPN | CK3W-MD7110 |
| | | | PNP | CK3W-MD7120 |

Analog Input Units

| Product name | Input range | Number of inputs | Model |
|-------------------|-------------|------------------|-------------|
| Analog Input Unit | -10 to 10 V | 4 | CK3W-AD2100 |
| | | 8 | CK3W-AD3100 |

Encoder Input Unit

| Product name | Encoder type | Number of inputs | Protocol | Model |
|--------------------|----------------|------------------|--|--------------------|
| Encoder Input Unit | Serial encoder | 4 channels | BiSS-C, Endat2.2, and R88M-1L□/-1M□ Motor built-in encoder | CK3W-ECS300 |

Laser Interface Unit

| Product name | Communications method | Laser output | Model |
|----------------------|-----------------------|------------------------|--------------------|
| Laser Interface Unit | XY2-100 | PWM output | CK3W-GC1100 |
| | | PWM output, TCR output | CK3W-GC1200 |
| | SL2-100 | PWM output | CK3W-GC2100 |
| | | PWM output, TCR output | CK3W-GC2200 |

Expansion Master Units and Expansion Slave Units


| Product name | Description | Model |
|-------------------------|---|---|
| Expansion Master Unit | Connect the Expansion Master Unit adjacent to the right side of the CPU unit | CK3W-EXM01 |
| Expansion Slave Unit *1 | Connect the Expansion Slave Unit adjacent to the right side of the power supply unit | CK5W-EXS01 *2 CK3W-EXS02 |
| Expansion Cable | For connection between the Expansion Master Unit and the Expansion Slave Unit (0.3 m) | CK3W-CAX003A |

*1. One CK3W-TER11 End Cover is provided with the Expansion Slave Unit.

*2. The CK5W-EXS01 can only be used with the CK5M CPU Unit. It can not be used with the CK3M CPU Unit.

EtherCAT Coupler Units

You can use NX Units via the EtherCAT Coupler Unit that is connected to the built-in EtherCAT port on the CPU Unit.

| Product name | Communications cycle in DC Mode | Current consumption | Max. I/O power supply current | Model |
|--|---------------------------------|---------------------|-------------------------------|------------------|
| EtherCAT Coupler Unit *1  | 125 to 10,000 μ s *2 | 1.25 W max. | 10 A | NX-ECC203 |

*1. One NX-END01 End Cover is provided with the EtherCAT Coupler Unit.

*2. This depends on the specifications of the EtherCAT master.

Switching Hubs





| Product name | Specification | Manufacturer | Model |
|--------------------------|---|---------------------|-----------------|
| Industrial Switching Hub | 5 ports. Current consumption: 0.07 A Power supply connector included | OMRON Corporation | W4S1-05D |
| | Contact the manufacturer. | Cisco Systems, Inc. | - |
| | Contact the manufacturer. | CONTEC Co., Ltd. | - |
| | Contact the manufacturer. | PHOENIX CONTACT | - |

Recommended EtherCAT and Ethernet Communications Cables

Use a straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (aluminum tape and braiding) for EtherCAT. Use an STP (shielded twisted-pair) cable of category 5 or higher for Ethernet. Products for Ethernet 100BASE-TX described in the table below can be used for both 100BASE-TX and 10BASE-T.

Cable with Connectors

Cables with Connectors (For EtherCAT only)


| Item | Appearance | Recommended manufacturer | Cable length (m) | Model |
|---|---|--------------------------|------------------|----------------------|
| Cable with Connectors on Both Ends (RJ45/RJ45) Standard RJ45 plugs ^{*1} Wire gauge and number of pairs: AWG26, 4-pair cable Cable sheath material: PUR Cable color: Yellow ^{*2} EtherCAT/ EtherNet/IP (10BASE/100BASE) |  | OMRON | 0.3 | XS6W-6PUR8SS30CM-YF |
| | | | 0.5 | XS6W-6PUR8SS50CM-YF |
| | | | 1 | XS6W-6PUR8SS100CM-YF |
| | | | 2 | XS6W-6PUR8SS200CM-YF |
| | | | 3 | XS6W-6PUR8SS300CM-YF |
| | | | 5 | XS6W-6PUR8SS500CM-YF |
| Cable with Connectors on Both Ends (RJ45/RJ45) Rugged RJ45 plugs ^{*1} Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Light blue EtherCAT/ EtherNet/IP (10BASE/100BASE) |  | OMRON | 0.3 | XS5W-T421-AMD-K |
| | | | 0.5 | XS5W-T421-BMD-K |
| | | | 1 | XS5W-T421-CMD-K |
| | | | 2 | XS5W-T421-DMD-K |
| | | | 5 | XS5W-T421-GMD-K |
| | | | 10 | XS5W-T421-JMD-K |
| Cable with Connectors on Both Ends (M12 Straight/M12 Straight) Shield strengthening connector cable ^{*3} M12/Smartclick connectors Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Black EtherCAT/ EtherNet/IP (10BASE/100BASE) |  | OMRON | 0.5 | XS5W-T421-BM2-SS |
| | | | 1 | XS5W-T421-CM2-SS |
| | | | 2 | XS5W-T421-DM2-SS |
| | | | 3 | XS5W-T421-EM2-SS |
| | | | 5 | XS5W-T421-GM2-SS |
| | | | 10 | XS5W-T421-JM2-SS |
| Cable with Connectors on Both Ends (M12 Straight/RJ45) Shield strengthening connector cable ^{*3} M12/Smartclick connector and rugged RJ45 plug Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Black EtherCAT/ EtherNet/IP (10BASE/100BASE) |  | OMRON | 0.5 | XS5W-T421-BMC-SS |
| | | | 1 | XS5W-T421-CMC-SS |
| | | | 2 | XS5W-T421-DMC-SS |
| | | | 3 | XS5W-T421-EMC-SS |
| | | | 5 | XS5W-T421-GMC-SS |
| | | | 10 | XS5W-T421-JMC-SS |

*1. Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).

*2. Cables colors are available in yellow, green, and blue.

*3. For details, contact your OMRON representative.

Cables/Connectors

| Product name | | | Recommended manufacturer | Model |
|---|---|--|--------------------------|------------------------|
| Products for EtherCAT or Ethernet (1000BASE-T/100BASE-TX) | Wire gauge and number of pairs: AWG24, 4-pair cable | Cable | Kuramo Electric Co. | KETH-SB *1 |
| | | | JMACS Japan Co., Ltd. | IETP-SB *1 |
| | | RJ45 Connector | Panduit Corporation | MPS588-C *1 |
| Products for EtherCAT or Ethernet (100BASE-TX) | Wire gauge and number of pairs: AWG22, 2-pair cable | Cable | Kuramo Electric Co. | KETH-PSB-OMR *2 |
| | | | JMACS Japan Co., Ltd. | PNET/B *2 |
| | | RJ45 Assembly Connector  | OMRON Corporation | XS6G-T421-1 *2 |

*1. We recommend you to use the Cable for EtherCAT or Ethernet marked with *1 and the RJ45 Connector marked with *1 together.

*2. We recommend you to use the Cable for EtherCAT or Ethernet marked with *2 and the RJ45 Assembly Connector marked with *2 together.

Note: Connect both ends of cable shielded wires to the connector hoods.

Optional Products/Maintenance Products/DIN Track Accessories

| Product name | | Model |
|--|---|-------------------|
| EtherCAT Junction Slave *1 | 3 ports. Power supply voltage: 20.4 to 28.8 VDC (24 VDC -15 to +20%). Current consumption: 0.08 A | GX-JC03 |
| | 6 ports. Power supply voltage: 20.4 to 28.8 VDC (24 VDC -15 to +20%). Current consumption: 0.17 A | GX-JC06 |
| USB Flash Drive | OMRON USB Flash Drive (2 GB) | FZ-MEM2G |
| End Cover *2 (for CK□M-CPU1□1 CPU Unit) | Must be connected to the right end of the CPU rack and expansion rack. The CPU unit and the expansion slave unit are each provided with one end cover. | CK3W-TER11 |
| DIN Track | Length: 0.5 m. Height: 7.3 mm | PFP-50N |
| | Length: 1 m. Height: 7.3 mm | PFP-100N |
| | Length: 1 m. Height: 16 mm | PFP-100N2 |
| End Plate | Stopper to prevent units from moving on the DIN track. The minimum order quantity is 10 units. | PFP-M |

*1. EtherCAT junction slaves cannot be used for EtherNet/IP and Ethernet.

*2. Use the CK3W-TER11 End Cover only for the CK□M-CPU1□1 CPU Unit or CK5W-EXS01/CK3W-EXS02 Expansion Slave Unit.

General Specifications

This section describes the Motion Controller specifications.

| Item | | Specification |
|-----------------------|-------------------------------|--|
| Enclosure | | Mounted in a panel |
| Grounding Method | | Ground to less than 100 Ω |
| Operating Environment | Ambient Operating Temperature | 0 to 55°C |
| | Ambient Operating Humidity | 10% to 95% (with no condensation or icing) |
| | Atmosphere | Must be free of corrosive gases. |
| | Ambient Storage Temperature | -25 to 70°C (with no condensation or icing) |
| | Vibration Resistance | Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz, acceleration of 9.8 m/s ² 100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total) |
| | Shock Resistance | Conforms to IEC 60068-2-27. 147 m/s ² , 3 times each in X, Y, and Z directions |
| Insulation Resistance | | 20 M Ω min. between isolated circuits (at 100 VDC) |
| Dielectric Strength | | 510 VAC between isolated circuits for 1 minute with a leakage current of 5 mA max. |
| Applicable Standards | | cULus, EU: EN 61326, RCM, KC |

Performance Specifications

The performance specifications are shown below.

| Item | | | CK3M-CPU101 | CK3M-CPU111 | CK3M-CPU121 | CK5M-CPU131 | CK5M-CPU141 |
|---|--|---|--|--|-------------|--|-------------|
| Memory | | | Main memory: 1 GB Built-In Flash Memory: 2 GB *1 | | | Main memory: 2 GB Built-In Flash Memory: 4 GB | |
| Number of connectable CK3W Units (when using Expansion Rack) | | | 8 Units max. Or 4 CK3W-AX Units max. | | | 16 Units max. Or 8 CK3W-AX Units max. | |
| External connection terminals | | | No EtherCAT | For EtherCAT communications RJ45 × 1 (Shield supported) | | | |
| | | | For Ethernet communications RJ45 × 1 (Shield supported) | | | | |
| | | | USB port For external memory connection, USB 2.0 host × 1 Type A | | | | |
| Motion control | CK3W-AX Unit | Maximum number of controlled axes | 16 axes (when using four CK3W-AX Units) | | | 32 axes (when using eight CK3W-AX Unit Units) | |
| | | Control method | Speed and torque control using analog output Stepper motor control using pulse output Commutation control using DirectPWM output | | | | |
| | EtherCAT | Maximum number of controlled axes | None | 4 axes | 8 axes | 16 axes | 32 axes |
| | | Communications cycle | | 250 μs min. | | 62.5 μs min. | |
| | | Control method | | Issuing control commands using EtherCAT | | | |
| EtherCAT communications specifications | Communications protocol | | None | EtherCAT protocol | | | |
| | Baud rate | | | 100 Mbps | | | |
| | Physical layer | | | 100BASE-TX (IEEE 802.3) | | | |
| | Topology | | | Line, daisy chain, branching, and ring *2 | | | |
| | Transmission media | | | Twisted-pair cable of category 5 or higher (doubleshielded cable with aluminum tape and braiding) | | | |
| | Transmission distance | | | Distance between nodes: 100 m or less | | | |
| | Maximum number of slaves | | | 32 | | 64 | |
| | Range of node addresses that can be set | | | 1 to 32 | | 1 to 64 | |
| Ethernet communications specifications | Baud rate | | 100 Mbps | | | 1 Gbps/100 Mbps | |
| | Physical layer | | 100BASE-TX (IEEE 802.3) | | | 1000BASE-T 100BASE-TX (IEEE 802.3) | |
| | Frame length | | 1,514 bytes max. | | | | |
| | Media access method | | CSMA/CD | | | | |
| | Modulation | | Baseband | | | | |
| | Topology | | Star | | | | |
| | Transmission media | | Twisted-pair cable of category 5, 5e, or higher (shielded cable) *3 | | | | |
| | Maximum transmission distance between Ethernet switch and node | | 100 m | | | | |
| | Maximum number of cascade connections | | There are no restrictions if an Ethernet switch is used. | | | | |
| | EtherNet/IP tag data link (cyclic communications) *4 | Number of connections | 32 | | | | |
| | | Requested packet interval (RPI) | 1 to 1,000 ms (0.5 ms units) | | | | |
| | | Allowed communications bandwidth per Unit | 3,200 pps *5 | | | 12,000 pps *5 | |
| | | IO connection size | Input: 504 bytes max. Output: 504 bytes max. | | | | |
| | EtherNet/IP CIP message service *4 | | UCMM (unconnected message) | Number of servers that can perform communications simultaneously: 32 | | | |
| EtherNet/IP conformance test | | | CT17 comoliant | | | CT18 compliant | |

| Item | | CK3M-CPU101 | CK3M-CPU111 | CK3M-CPU121 | CK5M-CPU131 | CK5M-CPU141 |
|-------------------------------------|--|---|--|-------------|--|-------------|
| OPC UA *6 | Connection ports | OPC UA Server can be used simultaneously standard with PMAC Ethernet communications | | | | |
| | OPC UA Function | OPC UA Server | | | | |
| | Transport Category | HTTPS UA-Binary UA-TCP UA-SC UA-Binary | | | | |
| | Supported Server Category | Core 2017 Server Facet Embedded 2017 UA Server Profile Embedded DataChange Subscription Server Facet Event Subscription Server Facet Micro Embedded Device 2017 Server Standard 2017 Server Facet Standard DataChange Subscription 2017 Server Facet | | | | |
| | Endpoint URL Server | opc.tcp://[IP address]: [port No.]/ By default, the following URL is used. opc.tcp://192.168.0.200:4840/ | | | | |
| | Maximum number of clients (Secure Channels) | 10 | | | | |
| | Maximum number of subscriptions | 200 | | | | |
| | Maximum number of monitored variables per server | 3,000 | | | | |
| | Permissible Variables that can be published | Pointer Variables (M), Global Variables (P), EtherCAT IO Data Variables (Ecat[.Io[.Data]) | | | | |
| | OPC UA security mode and policy | Allowable security methods can be specified from the following (multiple specifications possible): • Both signature and encryption required: SignAndEncrypt Signature and encryption algorithm Signing and encryption algorithms: Basic256-Sha256/Basic256/Basic128Rsa15 (multiple specifications possible) • Only signature required: Sign Signature algorithm Signature algorithm: Basic256Sha256/Basic256/Basic128Rsa15 (multiple specifications possible) • Neither signature nor encryption required | | | | |
| | Application authentication | X.509 | | | | |
| | User authentication | The following can be set: • User name and Password • Anonymous | | | | |
| USB port | Physical layer | USB 2.0 compliant, type A connector. Output voltage: 5 V, 0.5 A max. | | | | |
| | Transmission distance | 3 m max. | | | | |
| Current consumption | | 5 VDC: 7.2 W max. (including End Cover) | 5 VDC: 7.8 W max. (including End Cover) | | 5 VDC: 7.2 W max, 24 VDC: 3.3 W max. (including End Cover) | |
| Dimensions (height × depth × width) | | 90(H)/80(D)/63.2(W) | | | | |
| Weight (including End Cover) | | 220 g max. | 230 g max. | | 250 g max. | |

*1. The flash memory of the CPU unit firmware revision 2.7 or earlier is 1 GB.

*2. A ring topology is available for CPU Units with PMAC firmware revision version 2.7.0 or later.

*3. Be sure to use a shielded cable for EtherNet/IP communications. When you are using communication at 1 Gbps, be sure to use a cable of category 5e or higher.


*4. EtherNet/IP is available only for targets and not available for originators. EtherNet/IP is available only for CPU Units with PMAC firmware revision version 2.6.0 or later whose date of production is September 8th, 2020 or later (Lot number 08920 and later). Use Power PMAC IDE Ver.4.4.1 or a later version.

*5. Represents Packet Per Second and indicates the number of sent or received packets that can be processed in a second.

*6. The OPC UA server functions are supported with firmware revision 2.8.1 or later.

Part Names and Functions

CPU Unit

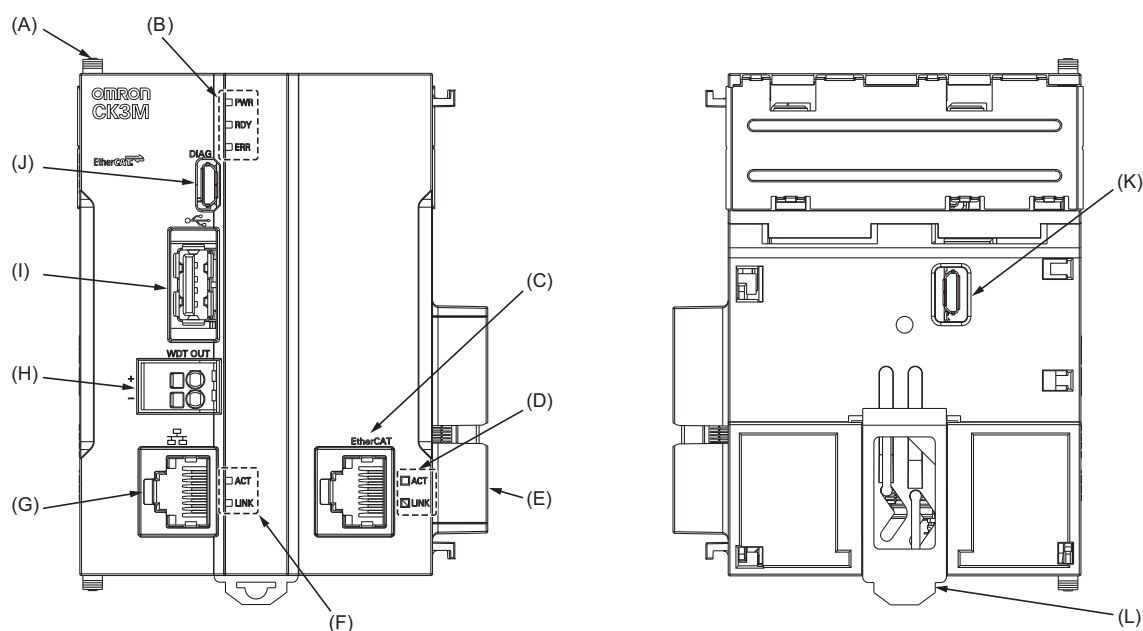

| Letter | Name | Function |
|--------|---|---|
| A | Slider | Holds the Units together. |
| B | CPU Unit operation indicators | Shows the operation status of the CPU Unit using multiple indicators. |
| C | EtherCAT communications connector | Connects to an EtherCAT network communications cable. |
| D | EtherCAT communications port operation indicators | Shows the operation status of EtherCAT. |
| E | Unit connector | Connector that connects to the Unit. |
| F | Ethernet communications port operation indicators | Shows the operation status of Ethernet. |
| G | Ethernet communications connector | Connects to an Ethernet network communications cable. |
| H | Watchdog output terminal block | Normally in ON state, and switches to OFF when watchdog is activated. |
| I | USB 2.0 connector | USB 2.0 interface connector. Connects the USB memory. |
| J | USB connector for maintenance | Do not use. |
| K | USB connector for maintenance | Do not use. |
| L | DIN Track mounting hook | Used to mount the Unit to a DIN Track. |

Version Information

CK3W Units and Supported Versions of CPU Units and Power PMAC IDE

This section provides version information that you need to know when connecting a CK3W Unit to a CPU Unit and PowerPMAC IDE. The table below specifies the correspondence between each CK3W Unit and the versions of CPU Unit and Power PMAC IDE.

Be sure to use the version combinations listed in the table below.

| CK3W Unit | Supported version | |
|--|-----------------------------------|------------------------|
| | CPU Unit's PMAC firmware revision | Power PMAC IDE version |
| CK3W-AX1414□/-AX1515□ | All versions supported | Ver. 4.2 or later |
| CK3W-AX1313□/-AX2323□ | Ver. 2.5.2 or later | Ver. 4.3 or later |
| CK3W-MD7110/-MD7120 | Ver. 2.5.2 or later | Ver. 4.3 or later |
| CK3W-AD2100/-AD3100 | Ver. 2.5.2 or later | Ver. 4.3 or later |
| CK3W-EXM01/-EXS02 | Ver. 2.5.2 or later | Ver. 4.3 or later |
| CK3W-ECS300 | Ver.2.6.1 or later | Ver.4.5 or later |
| CK3W-GC1100 CK3W-GC1200 CK3W-GC2100 CK3W-GC2200 | Ver.2.6.1 or later | Ver.4.5 or later |

Note: 1. Use the following versions of Power PMAC IDE.

- a) When using the CK5M CPU Unit, use Power PMAC IDE Ver. 4.6.1 or higher.
- b) When using the CK3M CPU Unit, use Power PMAC IDE Ver. 4 or higher.
2. To use the CPU Unit with PMAC firmware revision Ver.2.7 or later, use Power PMAC IDE Ver.4.5.2 or higher.
3. To use the CPU Unit with PMAC firmware revision Ver.2.8 or later, use Power PMAC IDE Ver.4.6.4 or higher.

Restrictions on Using the NX-series EtherCAT Coupler Unit

When OMRON NX-series EtherCAT Coupler Units are used as slaves with the CPU Unit as the EtherCAT master, the following models and unit versions of EtherCAT Coupler Units can be connected.

| Model | Unit version | Connectable/Unconnectable |
|-----------|--------------------|---------------------------|
| NX-ECC203 | Ver.1.4 or later | Connectable |
| | Ver.1.3 or earlier | Unconnectable |
| NX-ECC202 | All versions | |
| NX-ECC201 | All versions | |

Main function supported by each firmware revision


| Firmware revision | Main supported function |
|-------------------|---|
| 2.4.0 | CK3M-series CPU Unit initial version |
| 2.6.0 | EtherNet/IP target function |
| 2.7.0 | EtherCAT ring wiring |
| 2.8.1 | Enhanced security. The OPC UA and MQTT communication are supported. |

Refer to *FIRMWARE UPDATE HISTORY* in the *Power PMAC Software Reference Manual* (Cat. No.O015) for details of the supported functions.


Dimensions

(Unit: mm)

CPU Unit

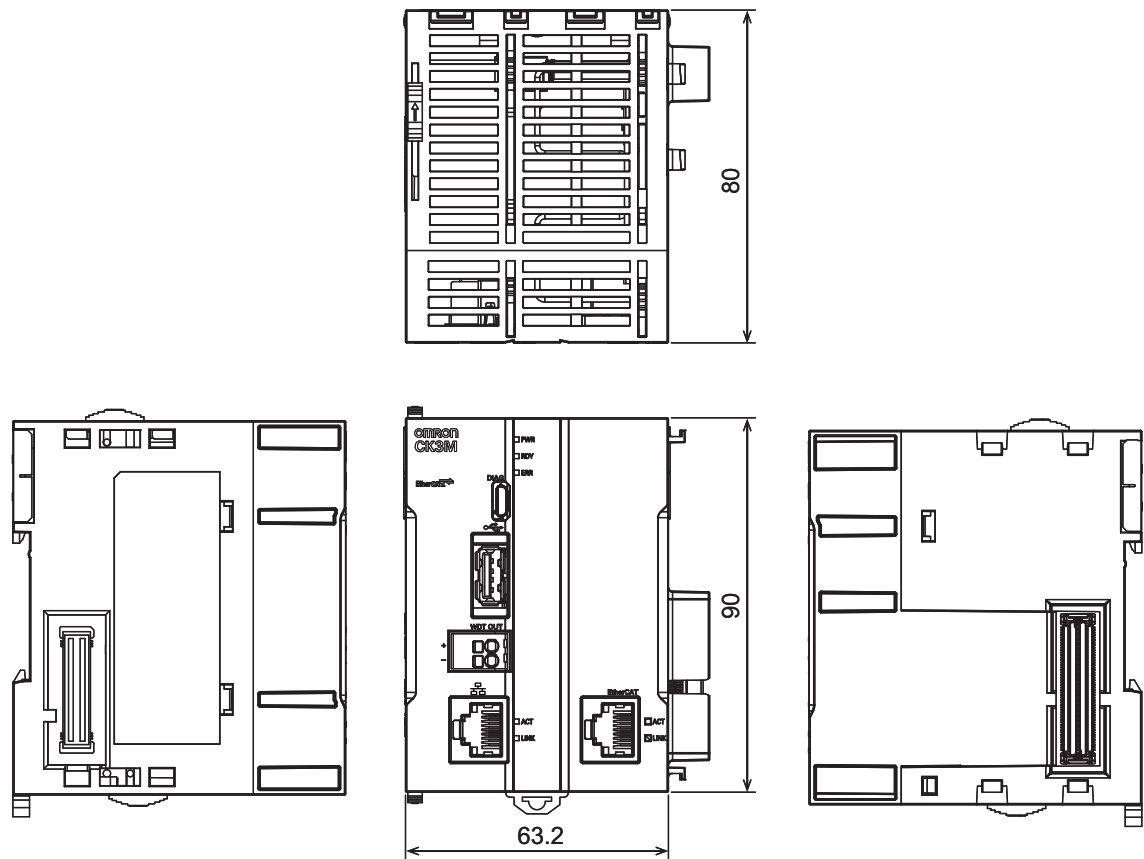

End Cover

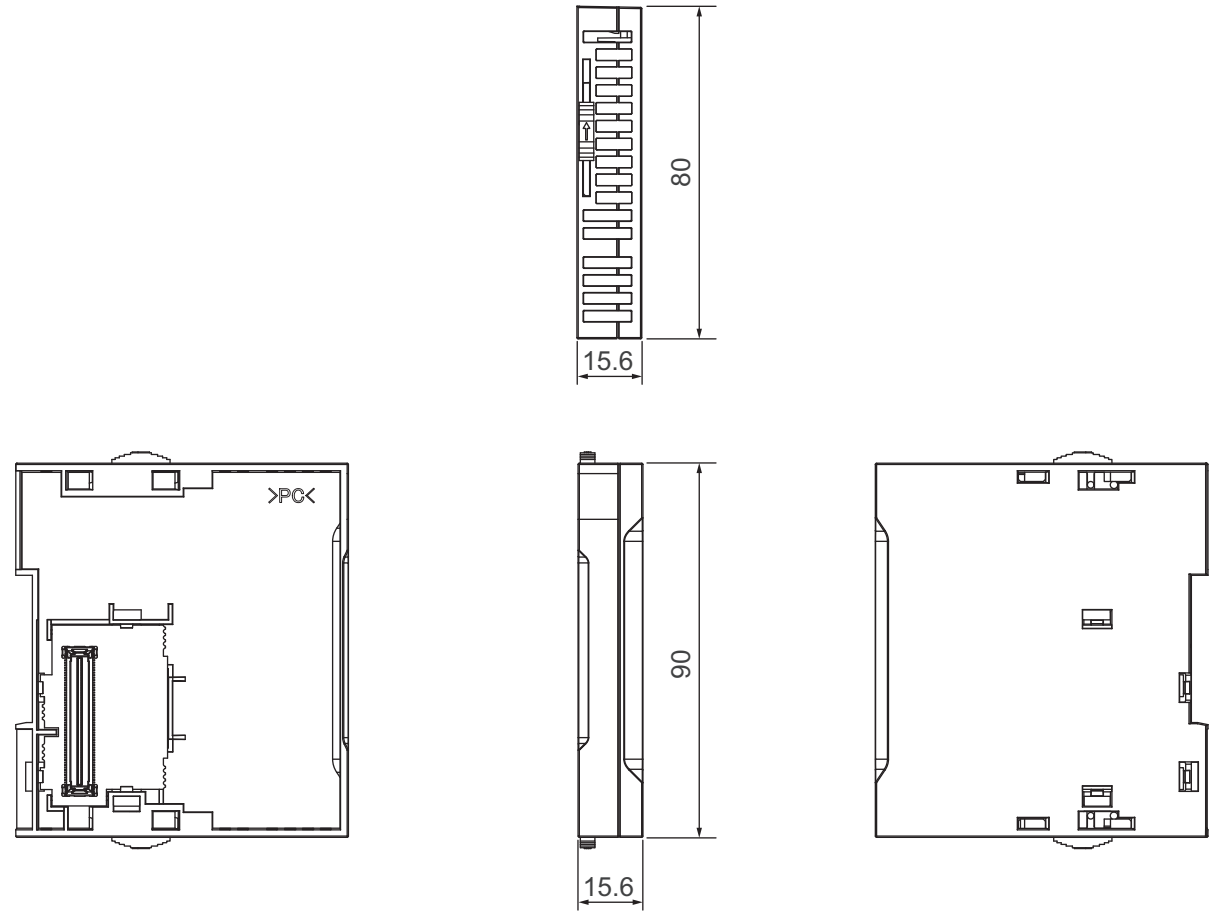

Power Supply Unit

| Model | Unit width (mm) |
|------------|-----------------|
| CK3W-PD048 | 45 |

CPU Unit

| Model | Unit width (mm) |
|-------------|-----------------|
| CK5M-CPU131 | 63.2 |
| CK5M-CPU141 | |
| CK3M-CPU101 | |
| CK3M-CPU111 | |
| CK3M-CPU121 | |

End Cover

| Model | Unit width (mm) |
|------------|-----------------|
| CK3W-TER11 | 15.6 |

Axis Interface Unit

| Model | Unit width (mm) |
|--------------|-----------------|
| CK3W-AX1313N | 130 |
| CK3W-AX1414N | |
| CK3W-AX1515N | |
| CK3W-AX2323N | |
| CK3W-AX1313P | |
| CK3W-AX1414P | |
| CK3W-AX1515P | |
| CK3W-AX2323P | |

Digital I/O Unit, Analog Input Unit, Expansion Master Unit, and Expansion Slave Unit

| Model | Unit width (mm) |
|-------------|-----------------|
| CK3W-MD7110 | 31.6 |
| CK3W-MD7120 | |
| CK3W-AD2100 | |
| CK3W-AD3100 | |


Encoder Input Unit / Laser Interface Unit

| Model | Unit width (mm) |
|-------------|-----------------|
| CK3W-ECS300 | 63.2 |
| CK3W-GC1100 | |
| CK3W-GC1200 | |
| CK3W-GC2100 | |
| CK3W-GC2200 | |

Expansion Master Unit and Expansion Slave Unit

| Model | Unit width (mm) |
|------------|-----------------|
| CK3W-EXM01 | 31.6 |
| CK5W-EXS01 | 63.2 |
| CK3W-EXS02 | 31.6 |


Design Example for Width W

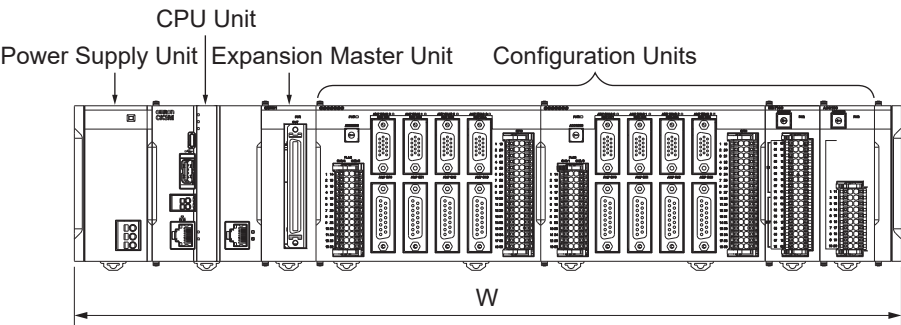

| Name | Model | Unit width (mm) | Qty | Subtotal unit width (mm) |
|---|--------------|-----------------|-----|--------------------------|
| Power Supply Unit | CK3W-PD048 | 45 | 1 | 45 |
| CPU Unit | CK3M-CPU101 | 63.2 | 1 | 63.2 |
| Expansion Master Unit | CK3W-EXM01 | 31.6 | 1 | 31.6 |
| Axis Interface Unit | CK3W-AX1414N | 130 | 2 | 260 |
| Digital I/O Unit | CK3W-MD7110 | 31.6 | 1 | 31.6 |
| Analog Input Unit | CK3W-AD2100 | 31.6 | 1 | 31.6 |
| End Cover | CK3W-TER11 | 15.6 | 1 | 15.6 |
| Total W = 45 + 63.2 + 31.6 + 130 × 2 + 31.6 + 31.6 + 15.6 | | | | 478.6 |

Installation Dimensions


Installation Dimensions

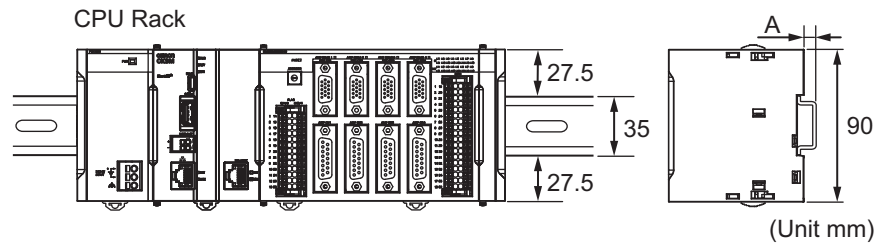


| DIN Track | A (mm) |
|-----------|--------|
| PFP-100N2 | 16 |
| PFP-100N | 7.3 |
| PFP-50N | 7.3 |

Installation Height


For CK□M-series CPU Unit

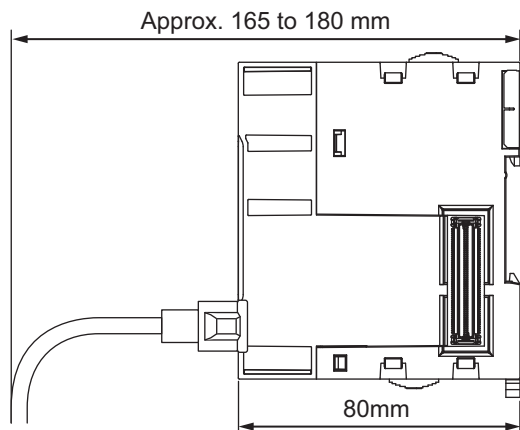


For CK3W-AX Unit

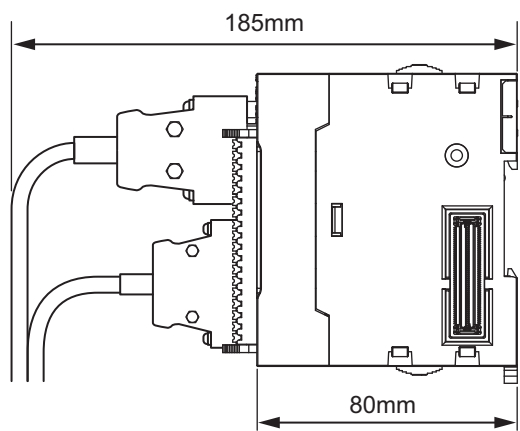


For CK3W-MD Unit

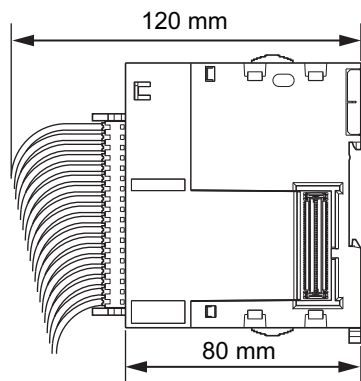


For CK3W-AD Unit

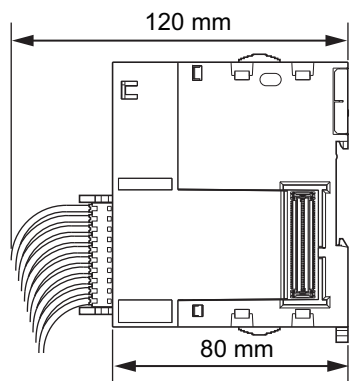


For CK3W-ECS Unit

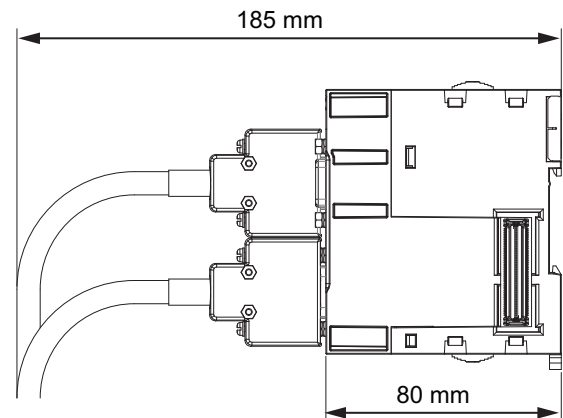


For CK3W-GC Unit

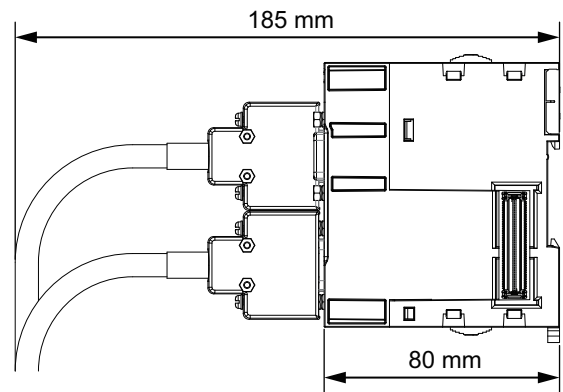

For CK3W-EXM01 and CK3W-EXS02

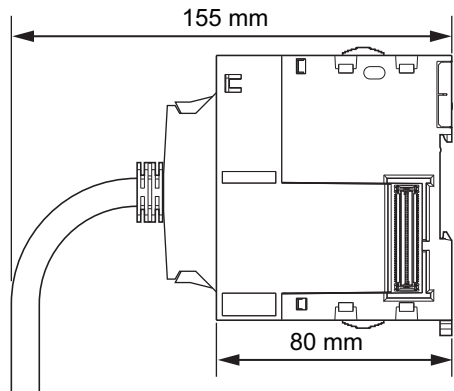

For CK5W-EXS01

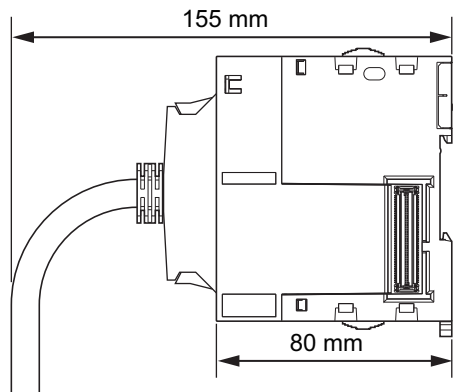

Related Manuals

The following manuals are related. Use these manuals for reference. Contact your OMRON representative for information on how to procure these manuals.

| Manual name | Cat. No. | Application | Description |
|--|----------|---|--|
| CK3M/CK5M-series Programmable Multi-Axis Controller Hardware User's Manual | O036 | Learning the basic specifications of the CK3M/CK5M-series Programmable Multi-Axis Controller, including introductory information, design, installation, and maintenance. Mainly hardware information is provided. | An introduction to the entire CK3M/CK5M-series system is provided along with the following information. <ul style="list-style-type: none"> • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection |
| Power PMAC User's Manual | O014 | Learning the features and usage examples of the Motion Controller. | The following information is provided on the Motion Controller. <ul style="list-style-type: none"> • Basic functions • Setup examples • Programming examples |
| Power PMAC Software Reference Manual | O015 | Learning how to program the Motion Controller. | The following information is provided on the Motion Controller. <ul style="list-style-type: none"> • Details of commands • Details of data structure |
| Power PMAC IDE User Manual | O016 | Learning how to operate Power PMAC IDE, the integrated development environment of the Controller. | Describes the operating procedures of Power PMAC IDE, and examples of how to start the system. |
| Power PMAC-NC Quick Start Manual | O017 | Briefly understanding the basic usage of Power PMAC-NC. | Describes the Quick setup procedure to run Power PMAC-NC on a desktop PC by showing some examples. |
| Power PMAC-NC .ini Configuration Manual | O018 | Configuring an application for CNC devices by using Power PMAC-NC. | Describes how to set up <i>PowerPmacNC.ini</i> , the setup data file to be loaded when Power PMAC-NC starts. |
| Power PMAC-NC Software User Manual | O019 | Learning about usage and features of Power PMAC-NC, Support Software required to use the Controller for CNC devices. | The following information is provided on Power PMAC-NC. <ul style="list-style-type: none"> • How to use the software • Features included in the software • Features that can be customized |
| Power PMAC-NC Mill G-Code Manual | O020 | Creating programs for CNC devices by using Power PMAC-NC. | Describes the basic G-code set that can be used for Power PMAC-NC, and relevant instructions. |

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

EtherNet/IP™ is trademarks of ODVA.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

The product photographs and figures that are used in this catalog may vary somewhat from the actual products.

PMAC is an abbreviation for Programmable Multi Axis Controller.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

Limitation on Liability: Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.