

XPSMCMAI0•00(G)

Instruction Sheet

(Original Language)

GDE8811401.02
06/2024

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

About the Book4

XPSMCMAI0•00(G) Expansion Modules6

About the Book

Document Scope

This information is about the usage and configuration of the XPSMCMAI0200(G) and XPSMCMAI0400(G) expansion modules for the XPSMCMC10804(G) or XPSMCMC10804E(G) Modular Safety Controllers.

Validity Note

The characteristics of the products described in this document are intended to match the characteristics that are available on www.se.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.se.com, consider www.se.com to contain the latest information.

Available Languages of this Document

This document is available in these languages:


- English (GDE8811401)
- French (GDE8811402)
- German (GDE8811403)
- Italian (GDE8811404)
- Spanish (GDE8811405)
- Chinese (GDE8811406)
- Portuguese (GDE8811407)
- Turkish (GDE8811408)

Product Related Information

The XPSMCM• can reach a maximum Safety Integrity Level (SIL) 3 as per IEC 61508: and EN IEC 62061:2021, and a maximum Performance Level (PL) e, category 4, as per EN ISO 13849-1:2015. However, the definitive SIL and PL of the application depends on a number of safety-related components, their parameters, and the connections that are made, as per the risk analysis.

The module must be configured in accordance with the application-specific risk analysis and all the applicable standards.

Pay particular attention in conforming to any safety information, different electrical requirements, and normative standards that would apply to your adaptation.

 **WARNING**

INSUFFICIENT SAFETY-RELATED FUNCTIONS

- Perform a risk assessment as per ISO 12100 and/or other equivalent assessment and appropriately consider all applicable regulations and standards that apply to your machine/process before using this software.
- In your risk assessment, determine all requirements regarding the Safety Integrity Level (SIL), the Performance Level (PL), and any other safety-related requirements and capabilities applicable to your machine/process.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

XPSMCMAI0•00(G) Expansion Modules

Safety-related Information

The safety-related function can be compromised if this equipment is not used for the intended purpose and in accordance with the instructions in the present document. This equipment must only be used as safety-related equipment on machines intended to protect persons, material, and installations.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected input devices, contactors, and drives prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires.
- Install and use this equipment only in locations known to be non-hazardous.
- Do not use the equipment described herein to supply external equipment.
- Always use properly rated voltage sensing equipment to confirm that the power is removed.
- Avoid contacting terminals with hand or tools until the power has been confirmed removed.
- Follow all electrical safety regulations and standards (for example, lockout/tag-out, phase grounding, barriers) to reduce the possibility of contact with hazardous voltages in the work area.
- Remove locks, tags, barriers, temporary ground straps, and replace and secure all covers, doors, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before reapplying power to the unit.
- Complete thorough hardware tests and system commissioning to verify that line voltages are not present on the control circuits before using your hardware operationally.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

⚠ DANGER**LOSS OF DESIGNATED SAFETY FUNCTION**

- Install the equipment in an enclosure with a degree of protection of at least IP 54, according to IEC 60529.
- Use a Protective Extra Low Voltage (PELV) power supply according to IEC 60204-1.
- Do not directly connect the equipment to line voltage.

Failure to follow these instructions will result in death or serious injury.

⚠ DANGER**POTENTIAL FOR EXPLOSION**

Install and use the equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

The observation of operating limits and duty cycles is of particular importance for equipment designed to perform a safety-related function. If this module has been subjected to electrical, mechanical, or environmental stresses in excess of its stated limits, do not use it.

⚠ WARNING**UNINTENDED EQUIPMENT OPERATION**

- Do not exceed any of the rated operating limits for the equipment specified in the present document.
- Immediately cease using and replace any equipment that has or might have been subjected to conditions in excess of its rated operating limits.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

There are no user-serviceable parts in this equipment. For reasons of safety and compliance, only the manufacturer should perform repairs to this equipment.

⚠ WARNING

LOSS OF SAFETY-RELATED FUNCTION

Do not attempt to repair or alter this equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Qualified Personnel

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Module and Function Description

The XPSMCMAI0•00(G) is an analog input expansion module. The XPSMCMAI0•00(G) module can only be configured with the XPSMCMC10804(G) or XPSMCMC10804E(G) Modular Safety Controller.

The XPSMCMAI0200(G) provides up to two single or one dual channel safety-related analog inputs. The XPSMCMAI0400(G) provides up to four single or two dual channel safety-related analog inputs. Each of the channels is isolated and must be configured by SoSafe Configurable software as voltage input or current input.

XPSMCMAI0•00(G) modules can support a wide range of analog sensors (usually installed in a redundant configuration) such as:

- Temperature sensors
- Level sensors
- Load cell
- Position sensors

The expansion module supports two inputs `NODE_ADDR0` and `NODE_ADDR1` which are used to set a physical address to the module:

	NODE_ADDR0 (Terminal 2)	NODE_ADDR1 (Terminal 3)
NODE 0	0 (or not connected)	0 (or not connected)
NODE 1	24 Vdc	0 (or not connected)
NODE 2	0 (or not connected)	24 Vdc
NODE 3	24 Vdc	24 Vdc
<p>NOTE: Do not use the same physical address for two units of the same module reference.</p> <p>NOTE: The LEDs ADDR 1 and ADDR 0 correspond to the <code>NODE_ADDR1</code> and <code>NODE_ADDR0</code> in this table respectively.</p> <p>NOTE: The node address wiring must match the configuration settings.</p>		

Current Sensor Input/Output `IN_S1/OUT_S1,IN_S2/OUT_S2,IN_S3/OUT_S3,IN_S4/OUT_S4`

XPSMCMAI0200(G) can provide up to two and XPSMCMAI0400(G) can provide up to four external safety-related input/output for external current sensor. Each channel of XPSMCMAI0•00(G) modules can supply sensors with 24 Vdc at 30 mA (maximum load current).

The safety-related analog inputs are used to connect transducers with:

- 0...20 mA or 4...20 mA (selectable by SoSafe Configurable) safety-related analog current signals: `IN_S1/OUT_S1,IN_S2/OUT_S2,IN_S3/OUT_S3,IN_S4/OUT_S4`.

Voltage Sensor Input/Output `NEG_S1/POS_S1,NEG_S2/POS_S2,NEG_S3/POS_S3,NEG_S4/POS_S4`

XPSMCMAI0200(G) can provide up to two and XPSMCMAI0400(G) can provide up to four external input/output for external voltage sensor. Each

channel of XPSMCMAI0•00(G) modules can supply sensors with 24 Vdc at 30 mA.


The safety-related analog inputs are used to connect transducers with:

- 0...10 Vdc (selectable by SoSafe Configurable software) safety-related analog voltage signals: *NEG_S1/POS_S1,NEG_S2/POS_S2,NEG_S3/POS_S3,NEG_S4/POS_S4*.

Terminals

Examples with maximum number of terminals. Regarding terminal designation, refer to table below.

Terminal numbers for XPSMCMAI0200(G) modules

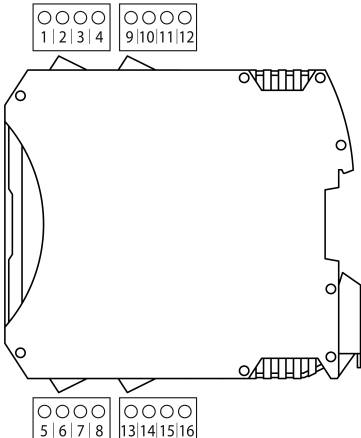

Terminal	Signal	LED	Type	Description	Operation
1	24 VDC	PWR	-	24 Vdc power supply	-
2	NODE_ADDR0	ADDR0	Input	Node selection	Input type 3 according to EN 61131-2. Maximum resistance 1.2 kΩ.
3	NODE_ADDR1	ADDR1			
4	0 VDC	PWR	-	0 Vdc power supply	-

Terminal	Signal	LED	Type	Description	Operation
9	24VDC_S1	CH 1	Output	Sensor 1 connections	Isolated 24 Vdc power supply for sensor 1
10	IN_S1		Input		0/20 mA sensor 1 input ⁽¹⁾
	NEG_S1		Input		0/10 V sensor 1 negative input ⁽²⁾
11	OUT_S1		Output		0/20 mA sensor 1 output ⁽¹⁾
	POS_S1		Input		0/10 V sensor 1 positive input ⁽²⁾
12	0 VDC_S1		Output		Isolated 0 Vdc reference for sensor 1
13	24VDC_S2	CH 2	Output	Sensor 2 connections	Isolated 24 Vdc power supply for sensor 2
14	IN_S2		Input		0/20 mA sensor 2 input ⁽¹⁾
	NEG_S2		Input		0/10 V sensor 2 negative input ⁽²⁾
15	OUT_S2		Output		0/20 mA sensor 2 output ⁽¹⁾
	POS_S2		Input		0/10 V sensor 2 positive input ⁽²⁾
16	0 VDC_S2		Output		Isolated 0 Vdc reference for sensor 2
(1) Input impedance (channel configured as current input) = 200 Ω according to EN 61131-2.					
(2) Input impedance (channel configured as voltage input) = 250 kΩ according to EN 61131-2.					

⚠ WARNING


UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as "No Connection (N.C.)" or Not Connected.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Examples with maximum number of terminals. Regarding terminal designation, refer to table below.

Terminal numbers for XPSMCMAI0400(G) modules

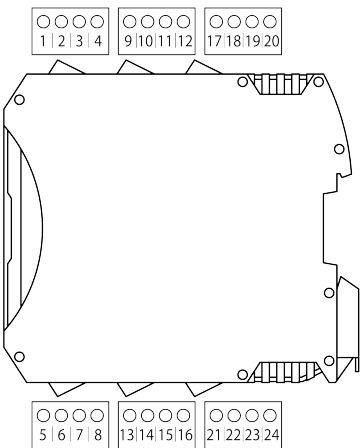

Termi- nal	Signal	LED	Type	Description	Operation
1	24 VDC	PWR	-	24 Vdc power supply	-
2	NODE_ADDR0	ADDR0	Input	Node selection	Input type 3 according to EN 61131-2. Maximum resistance 1.2 kΩ.
3	NODE_ADDR1	ADDR1			
4	0 VDC	PWR	-	0 Vdc power supply	-

Terminal	Signal	LED	Type	Description	Operation
9	24VDC_S1	CH 1	Output	Sensor 1 connections	Isolated 24 Vdc power supply for sensor 1
10	IN_S1		Input		0/20 mA sensor 1 input ⁽¹⁾
	NEG_S1		Input		0/10 V sensor 1 negative input ⁽²⁾
11	OUT_S1		Output		0/20 mA sensor 1 output ⁽¹⁾
	POS_S1		Input		0/10 V sensor 1 positive input ⁽²⁾
12	0 VDC_S1		Output		Isolated 0 Vdc reference for sensor 1
13	24VDC_S3	CH 3	Output	Sensor 3 connections	Isolated 24 Vdc power supply for sensor 3
14	IN_S3		Input		0/20 mA sensor 3 input ⁽¹⁾
	NEG_S3		Input		0/10 V sensor 3 negative input ⁽²⁾
15	OUT_S3		Output		0/20 mA sensor 3 output ⁽¹⁾
	POS_S3		Input		0/10 V sensor 3 positive input ⁽²⁾
16	0 VDC_S3		Output		Isolated 0 Vdc reference for sensor 3

Terminal	Signal	LED	Type	Description	Operation
17	24VDC_S2	CH 2	Output	Sensor 2 connections	Isolated 24 Vdc power supply for sensor 2
18	IN_S2		Input		0/20 mA sensor 2 input ⁽¹⁾
	NEG_S2		Input		0/10 V sensor 2 negative input ⁽²⁾
19	OUT_S2		Output		0/20 mA sensor 2 output ⁽¹⁾
	POS_S2		Input		0/10 V sensor 2 positive input ⁽²⁾
20	0 VDC_S2		Output		Isolated 0 Vdc reference for sensor 2
21	24VDC_S4	CH 4	Output	Sensor 4 connections	Isolated 24 Vdc power supply for sensor 4
22	IN_S4		Input		0/20 mA sensor 4 input ⁽¹⁾
	NEG_S4		Input		0/10 V sensor 4 negative input ⁽²⁾
23	OUT_S4		Output		0/20 mA sensor 4 output ⁽¹⁾
	POS_S4		Input		0/10 V sensor 4 positive input ⁽²⁾
24	0 VDC_S4		Output		Isolated 0 Vdc reference for sensor 4
(1) Input impedance (channel configured as current input) = 200 Ω according to EN 61131-2.					
(2) Input impedance (channel configured as voltage input) = 250 kΩ according to EN 61131-2.					

WARNING

UNINTENDED EQUIPMENT OPERATION

Do not connect wires to unused terminals and/or terminals indicated as "No Connection (N.C.)" or Not Connected.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Wiring Example

Analog signals are susceptible to electromagnetic interference. Interference may lead to unreliable analog signal values and to unintended behavior of the module.


WARNING

UNINTENDED EQUIPMENT OPERATION


Use shielded cables for analog device connection and ensure the shields are terminated to Functional Earth (Ground) on both ends of the cable.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


2 WIRES CURRENT SENSOR

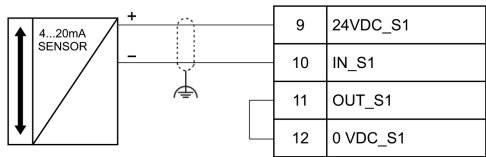


3 WIRES CURRENT SENSOR

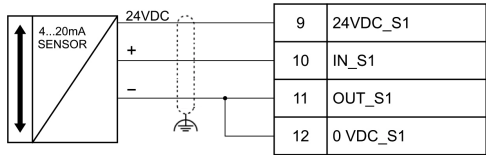


4 WIRES CURRENT SENSOR

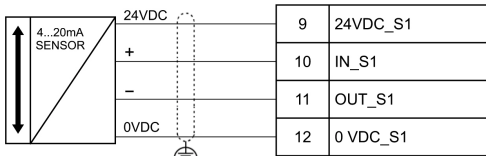


3 WIRES VOLTAGE SENSOR

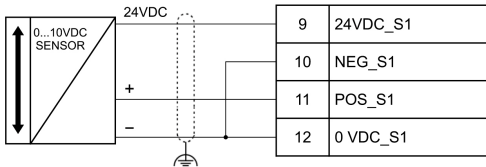

3 WIRES CURRENT SENSOR
WITH EXTERNAL POWER SUPPLY

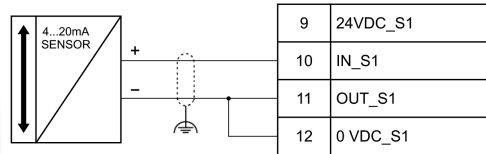

Dimensions





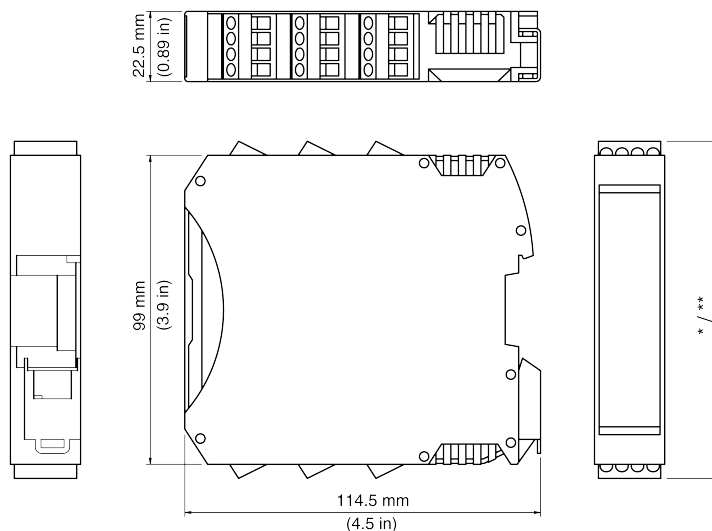






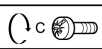
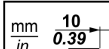







* Screw terminals 108 mm (4.25 in)

** Spring terminals 118 mm (4.67 in)

Mount the modules (Modular Safety Controller and any I/O expansion modules) in an electric cabinet with an IP54 degree of protection. The minimum clearance below and above the controller is 40 mm. Allow at least 100 mm distance between the cabinet door and the front face of the module(s). There are no clearances required on the left or right side of the module(s); however, other equipment in proximity may require larger distances and those clearances must also be taken into account.

Technical Data

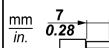Cable types and wire sizes													
for a 5.08 pitch removable screw terminal block													
													
mm ²	0.2...2.5	0.2...2.5	0.25...2.5	0.25...1.5	2 x 0.2...1	2 x 0.2...1.5	2 x 0.25...1	2 x 0.5...1.5	2 x 0.5...1.5				
AWG	24...14	24...14	23...14	23...16	2 x 24...18	2 x 24...16	2 x 23...18	2 x 20...16	2 x 20...16				
 Ø 3,5 mm (0.14 in.)				N•m	0.5								
				lb•in	4.42								
for a 5.08 pitch removable spring terminal block (used by XPSMCM•••G).													
													
mm ²	0.2...2.5	0.2...2.5	0.25...2.5	0.25...2.5	2 x 0.5...1								
AWG	24...14	24...14	23...14	23...14	2 x 20...18								
The following instructions concerning connection cables must be observed:													
<ul style="list-style-type: none">• Use 60/75 °C copper (Cu) conductor only. Maximum cable length 100 m (328 ft).• Cables used for connections of longer than 50 m (164 ft) must have a cross-section of at least 1 mm² (AWG 16).													

Housing characteristics	
Housing material	Polyamide
Housing degree of protection	IP20
Terminal blocks degree of protection	IP2x
Mounting	35 mm DIN rail according to EN/IEC 60715
Mounting position	Vertical or horizontal
Dimensions (h x l x d)	<ul style="list-style-type: none">• with screw terminals: 108 x 22.5 x 114.5 mm (4.25 x 0.89 x 4.5 in)• with spring terminals: 118.5 x 22.5 x 114.5 mm (4.67 x 0.89 x 4.5 in)

Module characteristics	
Rated voltage	24 Vdc \pm 20 % (PELV supply)
Dissipated power	3 W maximum (XPSMCMAI0200(G)) 6 W maximum (XPSMCMAI0400(G))
Overvoltage category	II
Ambient operating temperature	-10...+55 °C (14...131 °F), for vertical or horizontal mounting position
Storage temperature	-20...+85 °C (-4...185 °F)
Relative humidity	10...95%
Maximum operation altitude	2000 m (6562 ft)
Pollution degree	2
Vibration resistance (EN 61496-1)	+/- 0.35 mm (0.014 in) 10...55 Hz
Bump resistance (EN 61496-1)	10 g (16 ms half-sine)

Module-specific characteristics	
Description	Electronic housing maximum 24-poles, with locking latch mounting
Mounting	DIN rail mounting with locking latch
Rated voltage	24 Vdc \pm 20 %
Channels number / description	2 (for XPSMCMAI0200(G)) or 4 (for XPSMCMAI0400 (G))/ isolated (500 Vdc) between channels, and between channels and control electronics. Each channel can be configured as voltage input or current input.
Diagnostic	
Isolated sensor supply overload detection (if the sensor draws more than 30 mA)	Yes with active protection ⁽¹⁾ .
Input overvoltage / input overcurrent detection	Yes with active protection ⁽¹⁾ .
Disconnected cable detection	Yes
Overthreshold / underthreshold detection	Yes

Module-specific characteristics	
Redundant channels mismatch detection	Yes
Probability of a dangerous failure per hour (PFHd)	XPSMCMAI0400(G) : 1.53E-8 XPSMCMAI0200(G): 9.54E-9
Mean Time to Dangerous Failure (MTTFd) in years	XPSMCMAI0400(G) : 106 XPSMCMAI0200(G): 186
Connection to expansion modules	5-way backplane expansion
Weight	XPSMCMAI0400(G): 0.164 kg (5.78 oz) XPSMCMAI0200(G): 0.127 kg (4.47 oz)
(1) When this condition is detected, the power supply of the sensor is disconnected for 1 second and then rearmed. The disconnection and rearming of the power supply continues until the over-current condition has been removed.	

Module current inputs	
Nominal range	0...20 mA / 4...20 mA
User selectable allowable current limits	0...23 mA (if 0...20 mA selected), 2.5...23 mA (if 4...20 mA is selected)
Digital resolution	16-bit
Resolution value	381 nA
Sample rate (samples per second)	User selectable. Allowable values: 2.5, 5, 10, 16.6, 20, 50, 60, 100, 200, 400, 800, 1000, 2000, 4000
Input impedance	200 Ω
Maximum input current	23 mA

Module voltage inputs	
Range	0...10 Vdc
User selectable allowable voltage limits	0...11.5 Vdc
Digital resolution	16-bit
Resolution value	152 μ V

Module voltage inputs	
Sample rate (samples per second)	User selectable. Allowable values: 2.5, 5, 10, 16.6, 20, 50, 60, 100, 200, 400, 800, 1000, 2000, 4000
Input impedance	250 kΩ

Checklist After Installation

The following must be verified:

Step	Action
1	Conduct a full functional test of the system (see <i>Validation</i> in the <i>Modular Safety Controller Library and Programming Guide</i> .)
2	Verify that all the cables are correctly inserted and the terminal blocks are within correct torque for screw terminals.
3	Verify that all the LED indicators are correctly illuminating for the inputs and outputs used.
4	Verify the positioning and function of all input and output sensors and actuators used with the XPSMCM•.
5	Verify the correct mounting of XPSMCM• to the DIN rail.
6	Verify that all the external indicators (lamps/beacons/sirens) are correctly functioning.

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

- Use shielded cables for communication signals and any I/O that may be susceptible to electromagnetic radiation.
- Ground cable shield at a single point⁽¹⁾.
- Route communication and I/O cables separately from power cables.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

¹Multipoint grounding is permissible (and in some cases inevitable) if connections are made to an equipotential ground plane dimensioned to help avoid cable shield damage in the event of power system short-circuit currents.

Schneider Electric Automation GmbH
Schneiderplatz 1
97828 Marktheidenfeld
Germany

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change
from time to time, please ask for confirmation of
the information given in this publication.

© 2024 Schneider Electric. All rights reserved.

GDE8811401.02